

AD-A094 682

FREQUENCY ELECTRONICS INC NEW HYDE PARK N Y  
VIBRATION RESISTANT QUARTZ CRYSTAL RESONATORS. (U)  
JAN 81 B GOLDFRANK, A WARNER

F/S 9/1

UNCLASSIFIED

DELET-TR-79-0272-2

DAAK20-79-C-0272

NL

1 of 2

AD-A094682



LEVEL

12



Research and Development Technical Report  
DELET-TR-79-0272-2

II

VIBRATION RESISTANT QUARTZ CRYSTAL RESONATORS

AD A094682

B. Goldfrank  
A. Warner

FREQUENCY ELECTRONICS, INC.  
3 Delaware Drive  
New Hyde Park, NY 11040

DTIC  
FEB 6 1981  
C

January, 1981  
Second Interim Report for period 28 Feb - 27 Aug 80

DISTRIBUTION STATEMENT  
Approved for public release:  
distribution unlimited

Prepared for:  
ELECTRONICS TECHNOLOGY & DEVICES LABORATORY

ERADCOM

US ARMY ELECTRONICS RESEARCH AND DEVELOPMENT COMMAND  
FORT MONMOUTH, NEW JERSEY 07703

DDC FILE COPY

81 2 06 003

## NOTICES

### Disclaimers

The citation of trade names and names of manufacturers in this report is not to be construed as official Government indorsement or approval of commercial products or services referenced herein.

### Disposition

Destroy this report when it is no longer needed. Do not return it to the originator.

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

28 Feb - 27 Aug 80

19 REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM	
18 <b>REPORT NUMBER</b> DELET-TR-79-0272-2	2 <b>GOVT ACCESSION NO.</b> AD-AC74 682	3 <b>RECIPIENT'S CATALOG NUMBER</b>	
4 <b>TITLE (and Subtitle)</b> Vibration Resistant Quartz Crystal Resonators.		5 <b>TYPE OF REPORT &amp; PERIOD COVERED</b> 2nd 6 Months 28 Feb 80 to 27 Aug 80	6 <b>PERFORMING ORG. REPORT NUMBER</b>
7 <b>AUTHOR(s)</b> B. Goldfrank A. Warner		8 <b>CONTRACT OR GRANT NUMBER(s)</b> DAAK20-79-C-0272	
9 <b>PERFORMING ORGANIZATION NAME AND ADDRESS</b> Frequency Electronics, Inc. 3 Delaware Drive New Hyde Park, NY 11040		10 <b>PROGRAM ELEMENT, PROJECT, TASK AREA &amp; WORK UNIT NUMBERS</b> 1L162705AH94101102	
11 <b>CONTROLLING OFFICE NAME AND ADDRESS</b> U.S. Army Electronics Technology and Devices Laboratory Attn: DELET-MQ Fort Monmouth, NJ 07703		12 <b>REPORT DATE</b> January 1981	13 <b>NUMBER OF PAGES</b> 100
14 <b>MONITORING AGENCY NAME &amp; ADDRESS (if different from Controlling Office)</b> (12) 1101		15 <b>SECURITY CLASS (of this report)</b> UNCLASSIFIED	
16 <b>DISTRIBUTION STATEMENT (of this Report)</b> Approved for public release; distribution unlimited			
17 <b>DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)</b>			
18 <b>SUPPLEMENTARY NOTES</b> Low "g" Sensitivity Crystal Units and Their Testing By A. Warner, B. Goldfrank, M. Meirs and M. Rosenfeld. Further Developments on 'SC' Cut Crystals By B. Goldfrank and A. Warner.			
19 <b>KEY WORDS (Continue on reverse side if necessary and identify by block number)</b> Doubly rotated quartz crystals, Low 'g' sensitivity, Fast warm-up crystal resonators, quartz, quartz crystals, quartz resonators, SC cut, acceleration, vibration, pressure sensitivity.			
20 <b>ABSTRACT (Continue on reverse side if necessary and identify by block number)</b> The objectives of this investigation are to provide doubly rotated quartz crystal resonators that exhibit fast warm-up and low 'g' sensitivity. Warm-up is to be on the order of 1 PP10 <sup>10</sup> in three minutes. The 'g' sensitivity is to be 1 PP10 <sup>10</sup> maximum in any axis.			

DD FORM 1473

JAN 73

EDITION OF 1 NOV 65 IS OBSOLETE  
E/N 0102-010-6601

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

441737

7/5

## CONTENTS

	<u>Page</u>
ABSTRACT	
INTRODUCTION	1
1. TASK OBJECTIVES	2
2. APPROACH	5
3. PROGRAM PROGRESS	7
4. TEST RESULTS AND EVALUATIONS	8
5. PROPOSED OBJECTIVES FOR NEXT SIX-MONTH PERIOD	20

Accession For  
NTIS GPO  
DTIC TAB  
Unannounced  
Justification  
By  
Distribution  
Availability Codes  
Avail and/or  
Special

A

LIST OF FIGURES

<u>FIGURE NO.</u>	<u>NOMENCLATURE</u>	<u>PAGE</u>
B-1	COEFFICIENT OF ACCELERATION SENSITIVITY VS. $\psi$ ANGLE	21
F-2	DATA FROM STOCKBRIDGE	26
J-1 THRU J-5	BOND LOCATIONS	49
K-1	HOT TUNER HEAD	56
K-2	HOT TUNER LAYOUT	57

<u>TABLE NO.</u>	<u>LIST OF TABLES</u>	<u>PAGE</u>
E-1	CRYSTAL TYPE/SERIAL NUMBER	22
G-1	ELECTRICAL TEST DATA	27
G-6	SUMMARY OF DATA PRESENTED IN GRAPHS G-7 THROUGH G-17	32
H-1	CRYSTAL ASSEMBLY FINAL DATA SHEET	44
J-6	SUMMARY OF 'g' SENSITIVITY DATA ON 5.000000 MHz, FIFTH OVERTONE SC CUT CRYSTALS	50
III-1	SUMMARY OF 'g' SENSITIVITY TESTING IN PP10 <sup>10</sup> /g	68

## INTRODUCTION

This is the second six-month report under Contract DAAK20-79-C-0272, for the development of doubly rotated quartz crystals. Included in the report are the major accomplishments during the second six-month period and detailed results of the aforementioned accomplishments. Also included is a list of proposed objectives for the next six-month period. This report is broken down into sections covering the various categories listed below:

1. Task Objectives
2. Approach
3. Program Progress
4. Test Results and Evaluations
5. Proposed Objectives for Next Six-Month Period.

## 1. TASK OBJECTIVES

### A. General

Modern communications, navigation and surveillance systems require highly stable quartz crystal reference oscillators. These oscillators must be capable of fast warmup, and must possess low acceleration sensitivities.

Currently available quartz crystal resonators exhibit frequency changes of about 2 parts in  $10^9$  per g of acceleration. Such an acceleration sensitivity, a consequence of stress sensitivity of quartz, has been shown to have serious detrimental consequences in several applications where the resonator must operate in a vibratory environment. It has recently been shown that doubly rotated quartz crystal resonators, particularly the so-called SC cut, have much lower sensitivity to mechanical stresses than the commonly used (singly rotated) AT cut. It therefore seems probable that lower acceleration sensitivities will be achieved by using doubly rotated cuts.



The major objective of this program is to study the properties of doubly rotated cuts, and to develop vibration resistant, high precision resonator designs. The optimized vibration resistant designs shall be selected based on suitability for meeting the performance requirements of the NAVSTAR Global Positioning System Manpack/Vehicular Set. The development effort shall make extensive use of previously published information.

B. Definitions of the Angles of Cut

The angles of cut of doubly rotated plates can be described by the IEEE notation as  $(YXWl)\phi/\theta$ . This notation is explained in "Standards of Piezo-electric Crystals, 1949", Proc, IRE, Vol. 37, Dec 1949, pp. 1378-1395, and in IEEE Standard No. 176-1949. An SC cut, for example, may be described as  $(YXWl) 21.75^\circ/33.91^\circ$ . For simplicity, a cut may also be specified by stating the two rotation angles only; e.g.,  $\phi = 21.75^\circ$ ,  $\theta = 33.91^\circ$  describes the same SC cut.

C. Requirements

1. Resonator Frequencies

Optimized vibration resistant designs shall be developed for three resonator frequency ranges as follows:

- a. 5 MHz
- b. 10 MHz
- c. 20 MHz

## 2. Properties to be Studied and Objectives

The properties of quartz crystal resonators whose angles of cut are located on the bulk wave C-mode zero temperature coefficient locus shall be studied as functions of: (a) the angles of cut of the resonator plates, (b) the plate geometries, (c) the mounting configurations, (d) the overtone number, and (e) any other variables which may affect vibration resistance.

The primary objectives of this study shall be to achieve a vibration sensitivity of  $1 \times 10^{-10}$  per g, and to define the design parameters and tolerances which will permit the achievement of such acceleration sensitivity, in a reproducible manner, for the vibration levels specified in MIL-STD-810C.

## 3. Secondary Objectives

- a.  $1 \times 10^{-9}$  warmup in three minutes after application of power.
- b.  $1 \times 10^{-9}$  retrace.
- c.  $1 \times 10^{-11}$  per day aging at  $100^{\circ}\text{C}$ , after two weeks stabilization.
- d. - 120 dB per Hz spectral purity at 1 Hz away from carrier.

- e.  $1 \times 10^{-12}$  short term stability for 0.2 to 100 seconds.
- f. To correlate vibration sensitivity with static acceleration sensitivity.
- g. To investigate optimal enclosure for vibration resistant crystal resonators, including the ceramic flatpacks.

## 2. APPROACH

The basic approach is to cut corrected premium Q swept quartz bars at a constant  $\phi$  angle of  $23.75^\circ$ , and vary  $\theta$  over the range of  $33.75^\circ$  to  $34.25^\circ$ . By careful x-raying techniques, we will define a series of curves which will enable us to define the proper angles of cut to yield crystals with a specified upper turnover temperature.

The "SC" temperature characteristics are of a cubic nature. They vary from the AT, in that the inflection point is near  $100^\circ\text{C}$  as opposed to  $25^\circ\text{C}$ . Thus, the 'SC' crystals normally function on the left hand side of the cubic curve inflection point, while the 'AT' crystals function on the right side of the curve.

To obtain improvement in the "g" sensitivity, we are evaluating the mounting points, the location of the bonds, the bonding materials and the mounting structure.

The crystal designs, i.e., physical dimensions and overtone numbers are being modeled after similar AT cut crystals. Design sheets will be made available initially and as changes are made.

Finally, measurements will be made to determine the pressure sensitivity and precise temperature data will be taken to determine the retrace characteristics of the 'SC' cut crystals.

### 3. PROGRAM PROGRESS

The major accomplishments of the second six-month period are as follows:

- A. Alleviated a major problem with the aluminum clad nickel ribbon and started development work on gold clad nickel ribbon as a replacement.
- B. Obtained correlation of preferred mounting points on SC cut crystals.
- C. Developed a computing calculator program that directly converts the x-ray readings to the actual angle.
- D. Prepared and presented a paper, "Further Developments on 'SC' Cut Crystals" at the 1980 Frequency Control Symposium.
- E. Delivered one (1) each, 5 MHz/fifth overtone and 10.054 MHz/third overtone crystals.
- F. Made initial measurements on pressure sensitivity on a 5 MHz, fifth overtone crystal.
- G. Reprocessed four (4) 10,054 MHz/third overtone crystals and compared vibration data between two different mounting techniques.
- H. Processed and tested nine (9) 10.230400 MHz/third overtone crystals.

- I. Completed design on 20.000000 MHz crystals, and fabricated blanks to make 20.0, 23.1<sup>+</sup> and 34.3<sup>+</sup> MHz/fifth overtone crystals.
- J. Fabricated and tested five (5), 5 MHz, fifth overtone crystals using gold nickel ribbon.
- K. Completed "Hot Tuner" for final frequency adjustment.

#### 4. TEST RESULTS AND EVALUATIONS

Results obtained during the second six-month reporting period are as follows:

- A. A major processing/assembly problem occurred with our thermocompression bonding technique. The aluminum clad nickel ribbon that was supplied was sufficiently hard, i.e., not properly annealed, to cause the crystals to fall off the ribbon. The phenomenon is easily explainable. The ribbon expanded during the preheat and bonding cycles. During the cool down cycle, severe tensional forces occurred and the ribbon eventually pulled edge metallization and quartz from the crystal mounting flat.

We attempted to anneal the ribbon ourselves, as well as having Dr. J. Vig at ERADCOM do the same. The results were unacceptable as the aluminum delaminated from the nickel.

We were successful, however, in annealing the ribbon after it was attached to the header. The annealing was done at 500°C in a helium atmosphere. The furnace was a Lindberg tube furnace Model 54241 with a two-inch inside diameter ceramic tube from Coors Porcelain Inc.

A new ribbon for TC bonding is being developed. It consists of a stripe of gold coined to a nickel ribbon. The advantage is that we will eliminate one intermetallic contact. A supply of various sample lots of nickel with the gold bonding stripe has been received from Technical Materials Incorporated, and is adequate for our experimental studies. FEI must anneal the ribbon, since the samples received are approximately 1/4 hard. The initial data shows that the bonds are, at a minimum, equivalent in strength. Diagrams of both types of ribbon are contained in "Further Developments on 'SC' Cut Crystals" by B. Goldfrank and A. Warner, Figures 9, 10 and 11, attached to this report, in Appendix I.

Methods of precisely cutting the ribbon to the appropriate dimensions,  $\pm 0.001$ ", have been worked out. Although we have made completed units, none have had bonds which were exactly centered or uniform in thickness. Extremely close control of all processing and fixturing parameters is needed in order to discover the exact effect of the mounting point size and location on the acceleration coefficient of frequency.

- B. Independently, Professor Peter Lee of Princeton University calculated the same psi ( $\Psi$ ) angle as we had determined experimentally. A copy of his data is attached. The fact that the  $\Psi$  angle must be optimized for minimum frequency shift with acceleration and since we are trying to improve 'g' sensitivity this correlation is very encouraging.



Professor Lee first defined the coefficient of acceleration sensitivity as

$$K_a = \frac{\Delta f}{f_0} \cdot \frac{1}{F} \cdot \frac{d}{f_0/n}$$

$F$  = force on plate = mass of plate x acceleration

$f_0$  = frequency of resonator

$n$  = overtone number

$d$  = diameter of resonator

This is similar to the coefficient of force sensitivity  $K_f$ . Then for each support position  $\Psi$ ,  $K_a$  is computed as a function of acceleration direction. From this, one can obtain  $|K_a|$  max, the absolute value of  $K_a$  maximum.

The process was repeated for a range of  $\Psi$  values, and he was able to obtain values of  $|K_a|$  max as a function of  $\Psi$ . See Figure B-1.

C. Our system of x-ray measurement of the quartz blank orientation consists of tilting the blank to "undo" the  $\phi$  angle and permit the use of the 01.1 plane as in the measurement of an AT blank. The crystal blank is then further rotated about its thickness so that its measured  $\theta''$  angle is even closer to that of the reference plane,  $38^\circ 12.7'$ , than the AT cut. A similar technique is used to measure the  $\phi$  angle, independent of the value of  $\theta$ .

The blanks are cut from a highly corrected quartz bar, using the same angle as in the x-ray measurement. In effect, we have uncoupled the two angles,  $\phi$  and  $\theta$ , and the angle setting on the saw table for  $\theta$  is the same as the angle read on the x-ray goniometer, thus permitting an operator to easily make small corrections in  $\theta$ .

The measured angle  $\phi'$  is related to  $\phi$  by the known angle of the 01.1 plane. The measured angle  $\theta''$  is related to  $\theta$  by the value of  $\phi$ . The x-ray goniometer which we use measures  $\phi'$  by reference to a standard and reads in degrees, minutes, and seconds.  $\theta''$  is similarly read on a micrometer dial that reads in inches, 0.0001" corresponding to 2 seconds of arc.

A program has been written for the hand-held Sharp EL5100 Calculator, which has 80 steps of programming which may be held indefinitely, plus 10 memories. It is only necessary to enter the scale readings from the x-ray goniometer and push one button for the specified angles to appear. Conversion from degrees, minutes, seconds to decimal degrees, comparison with reference crystal readings, inter-relationships of the various angles, etc., are all carried out by the single key stroke.

The actual programs are as follows:

1.  $f(AB) = \tan^{-1} (\tan((A-B) \times D) + 36.3) \times \cos C = \theta$
2.  $f(Ef) = \sin^{-1} (\sin(E \rightarrow \text{deg} - F \rightarrow \text{deg} - 18.45) \div .7857) = \emptyset$
3.  $\theta'' = 36.3 + (A-B) \times D$ , for saw table setting

Where:

A = X-ray dial reading for  $\theta$ , unknown crystal

B = X-ray dial reading for  $\theta$ , reference crystal

C =  $\emptyset$  angle in decimal degrees

D = .00555

E = X-ray dial reading for  $\emptyset$ , unknown crystal

F = X-ray dial reading for  $\emptyset$ , reference crystal

- D. From late April to late May, a paper entitled "Further Developments in SC Cut Crystals" was prepared. It was presented at the 34th Annual Frequency Control Symposium in Philadelphia. A copy of the paper is included in Appendix I.
- E. One (1) each of a 5 MHz, fifth overtone crystal and a 10.054 MHz, third overtone crystal were delivered for evaluation. Data on these crystals is attached in Table E-1. The 5 MHz crystal is a premium Q swept quartz crystal unit. It is bi-convex with a 0.025 inch bevel on both sides. The unit was TC bonded using aluminum-nickel ribbon. It was sealed at  $4 \times 10^{-8}$  torr. The 10.054 MHz crystal is plano-convex in design. The edges are broken to facilitate handling and reduce the possibility of chipping. It is mounted in a diamond shaped notch and epoxied to the three support structures. It was sealed at  $8 \times 10^{-8}$  torr. Data on 'g' sensitivity is contained in Graphs E-2 and E-3.
- F. Initial pressure sensitivity studies were conducted, but the data was inconclusive and the set-up of the apparatus was marginal. The set-up was modified and the test repeated on crystal, Serial Number 1379, which is a 5 MHz, fifth overtone crystal.

The results of frequency change in  $pp10^7$  versus pressure in millimeters of mercury, were plotted, as shown on Graph F-1.

Presented as a comparison is Stockbridge's data.<sup>(1)</sup> See Figure F-2. The insert shows a 0.1 Hz change from vacuum to 1.0 mm. There was, as shown, an unexplainable blip at 60 microns that disappeared approximately one minute later. We are going to attempt to duplicate this phenomenon, and determine if it is equipment or crystal oriented.

- G. Four (4) 10.054 MHz, third overtone crystals were processed twice, to evaluate two different mounting structures. Vibration data was taken at the completion of each production cycle and the crystal blank identity was maintained throughout the processing.

The initial processing was done using our standard diamond notch mount. The reprocessed blanks were assembled using the newly developed 'J' mount. The advantages of the 'J' mount are the reduced contact area and reduction in amount of epoxy used to attach

<sup>(1)</sup>Vacuum Microbalance Techniques, Vol. 5, 1966, C. D. Stockbridge, Bell Labs, Murray Hill, N.J.

the crystal to the support structure. The electrical test data is contained in Table G-1, the temperature data on Graphs G-2 through G-5 and the vibration data in Table G-6 and Graphs G-7 to G-17.

- H. Nine (9) 10.230400 MHz, third overtone crystals were processed and tested. The electrical test data appears in Table H-1. The crystals were base plate at  $7 \times 10^{-8}$  torr and adjusted to final frequency at 85°C at  $5 \times 10^{-7}$  torr.

Four (4) crystals were subjected to 'g' sensitivity testing and the results are shown in Graphs H-2 through H-5. The reprocessing cycle used on 10.054 MHz crystals will be employed on these crystals to compare a different mounting structure with the original structure. (See Paragraph G). It is possible, in reviewing the data, that the 'g' sensitivity may be quartz blank dependent. The sample, however, is small and further study is planned.

- I. The designs were completed on several fifth overtone, 20+ MHz crystals. These are contained in Appendix II. A parallel mounting experiment is being conducted on the 20.000000 MHz, fifth overtone crystals. Results will be published in the next six month report.

J. Five (5) 5 MHz, fifth overtone crystals were fabricated and tested. These crystals were fabricated using the gold-nickel ribbon described in Paragraph A. A quantitative analysis of the bond appearance is contained in Figures J-1 through J-5. The amount of squash out is dependent on the unit force applied. Squash out of 5% was due to the fact that the bonding tool was slightly cocked in the holder. The optimum deformation should approximate 50% of the gold ribbon height or 2.5 mils. More work must be done to substantiate the optimum amount of deformation. On some bonds, the squash out was so severe, that although the crystal was firmly attached, very little gold was visible at the interface between the crystal and the ribbon.

A summary of the 'g' sensitivity results is contained in Table J-6 and the actual plots in Graphs J-7 through J-11. In addition, 'g' sensitivity data on thirty-two crystals is contained in Appendix III, Table III-1 and Graphs 1 through 32. These crystals were processed at FEI over the last year and represent crystals fabricated for this program as well as other programs.

Crystal 4205 was bonded using a 0.010" x 0.015" tip at five pounds, while the other four crystals (4207, 4208, 4142 and 4144) were bonded using a 0.020" x 0.050" tip at nine pounds.

- K. Frequency Electronics has fabricated, at its own expense, a three position hot tuner. This machine allows us to adjust SC cut crystals to within 0.1 PPM.

One of our initial problems was a 60° to 80° phase shift between an external test box and each position in the tuner. This was reduced to 20° by shorting all the cables.

The three positions of the tuner are mounted on a fourteen inch base plate and covered by a twelve inch spherical dome. A picture of one of the heads is shown in Figure K-1. The heater block, and Pi network are removable for easy maintenance and/or changeover to a different header configuration. The filament is shielded (not shown) front and back to eliminate any possible shorting of the internal electronics. The crystal temperature can be continuously monitored and is accurate to within  $\pm 1^{\circ}\text{C}$ . This is more than adequate for any SC cut crystal, since there is normally a 4°C to 6°C range where the crystal frequency does not change more than 1.5 Hz.



The pi networks all have one common ground as do the inputs and outputs for measuring the crystal frequency. The tuner heads are connected to an eight pin feed through, with three inputs, three outputs and two grounds. All other electrical connections are through a separate twenty pin feed through.

The entire tuner is under a laminar flow hood. The vacuum cycle consists of three minutes on a graphite pump, fifteen to twenty minutes on a vac-sorb pump and sufficient time on the ion pump to reach  $5 \times 10^{-7}$  torr. A schematic of the system is shown in Figure K-2.

5. PROPOSED OBJECTIVES FOR NEXT SIX-MONTH PERIOD

- A. Continue processing of crystal assemblies.
- B. Complete analysis of gold-nickel ribbon as a viable replacement for the aluminum clad nickel ribbon.
- C. Continue and complete pressure sensitivity measurements.
- D. Prepare crystal assemblies to evaluate further the possible quartz dependence on 'g' sensitivity.
- E. Finalize 10 MHz, fifth overtone design.
- F. Complete entire drawing package.
- G. Compare acceleration sensitivity of crystals cut at  $\phi = 23.75^\circ$  versus those cut at  $\phi = 21.90^\circ$ .


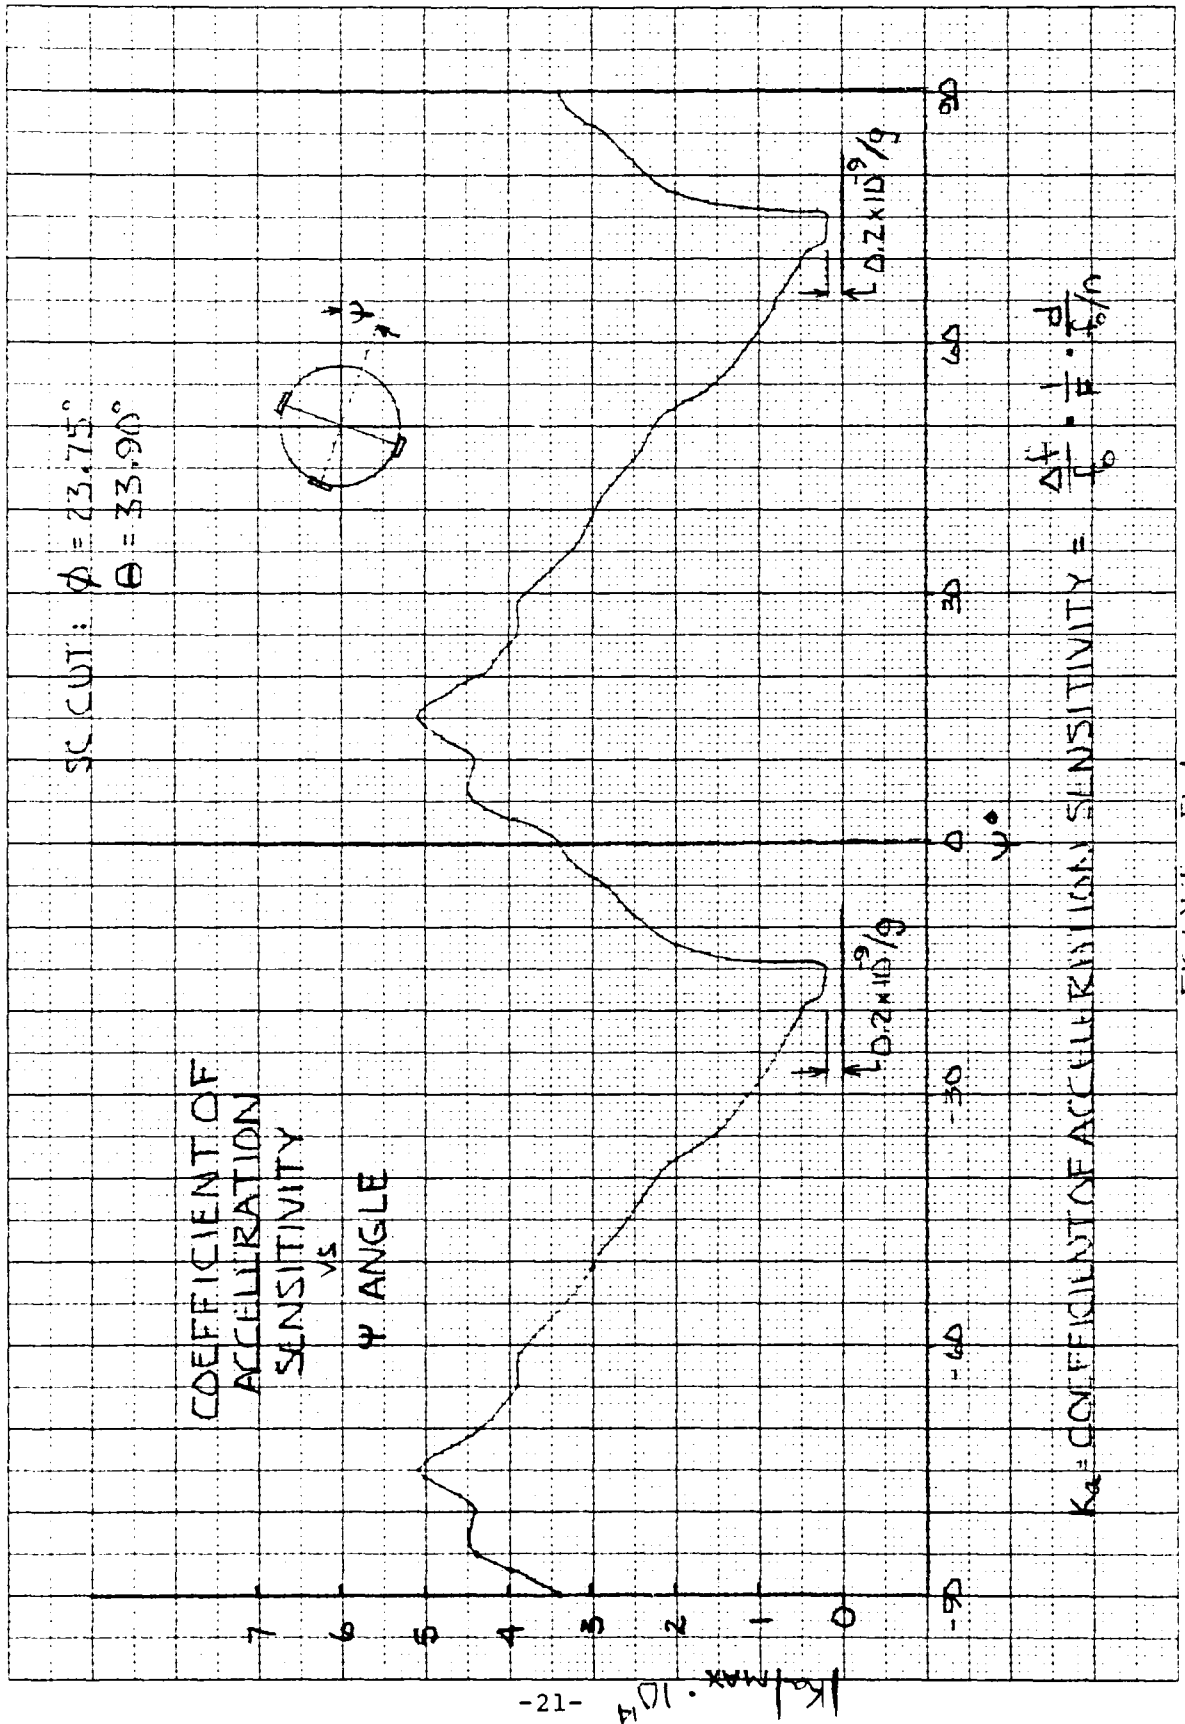


TABLE E-1  
CRYSTAL TYPE/SERIAL NUMBER

PARAMETER	5 MHz/5 3909	10 MHz/3 3801
1. $F_S$ (Hz)	4999917.9	10054170.6
2. $C_L$ for $F_P$ (pF)	10	32
3. $F_P$ (Hz)	4999925.6	10054190.0
4. $\Delta f_{3-1}$ (Hz)	7.8	21.4
5. $C_O$ (pF)	1.65	3.6
6. $C_1$ (pF)	$3.63 \times 10^{-5}$	$1.52 \times 10^{-4}$
7. $R_{26^\circ C}$ ( $\Omega$ )	320	70
8. $Q_{26^\circ C}$	$2.74 \times 10^6$	$1.49 \times 10^6$
9. Turnover ( $^\circ C$ )	75	72
10. $F_S$ @ T.O. (Hz)	5000014	10054326
11. $R$ @ T.O. ( $\Omega$ )	310	70
12. $Q$ @ T.O.	$2.82 \times 10^6$	$1.49 \times 10^6$
13. Acceleration		
a) Radial, Worst Case <sup>1</sup>	$3.8 \times 10^{10}/g$	$4.2 \times 10^{10}/g$
b) Thickness (Up/Down) <sup>2</sup>	$3.6 \times 10^{10}/g$	$8.3 \times 10^{10}/g$

<sup>1</sup>Crystal position as shown at bottom of graph on page 23.

<sup>2</sup>Crystal position:

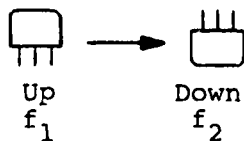

$$\text{Acceleration Effect} = \frac{|f_1 - f_2|}{2g}$$


K-E 20 X 20 TO THE INCHES X 10 INCHES  
KLOPPF & ESSER 10 000 INCHES

46 124C

SERNO. 3909

5.0/5/SC

DATE 6-10-80

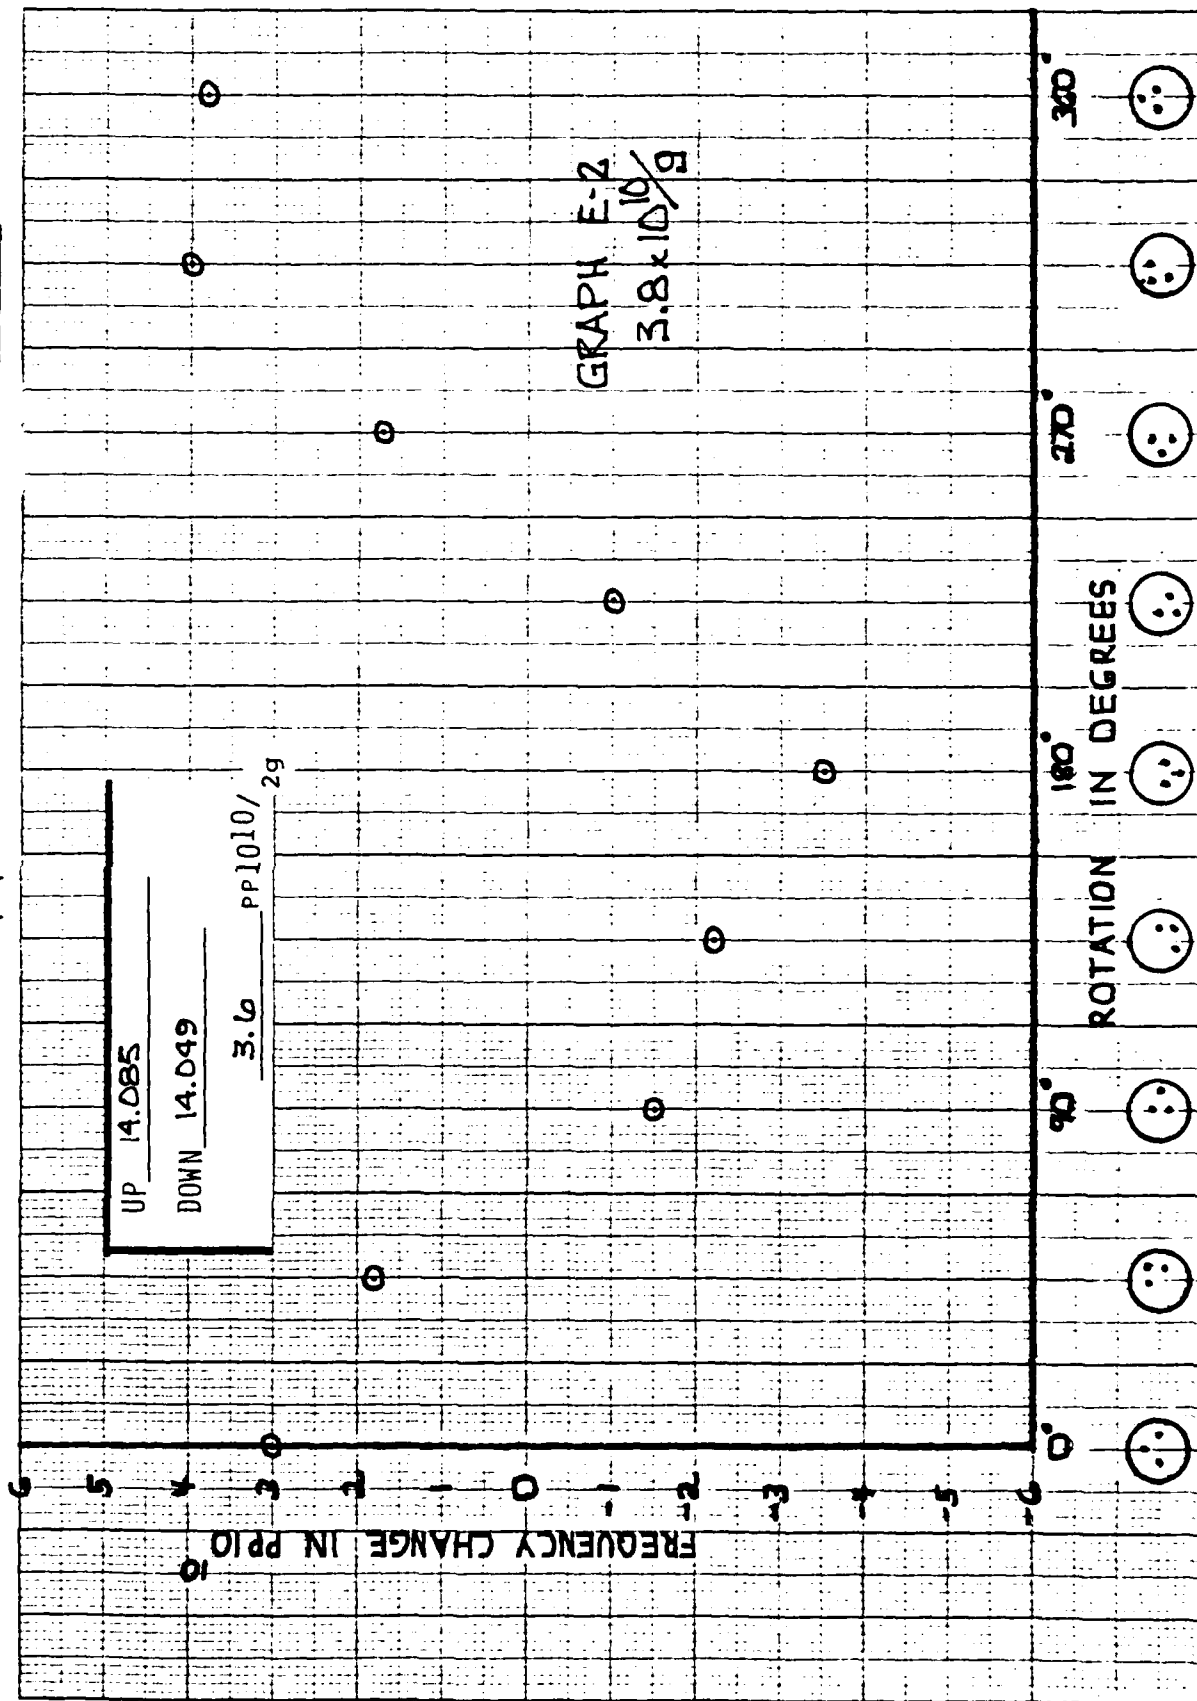


K-E 20 X 20 TO THE INCH. X 10 PER HRS  
KIMPEL & PERRY CO. NEW YORK

46124C

SERNO. 3801

10.054/3/sc

DATE 6-25-80

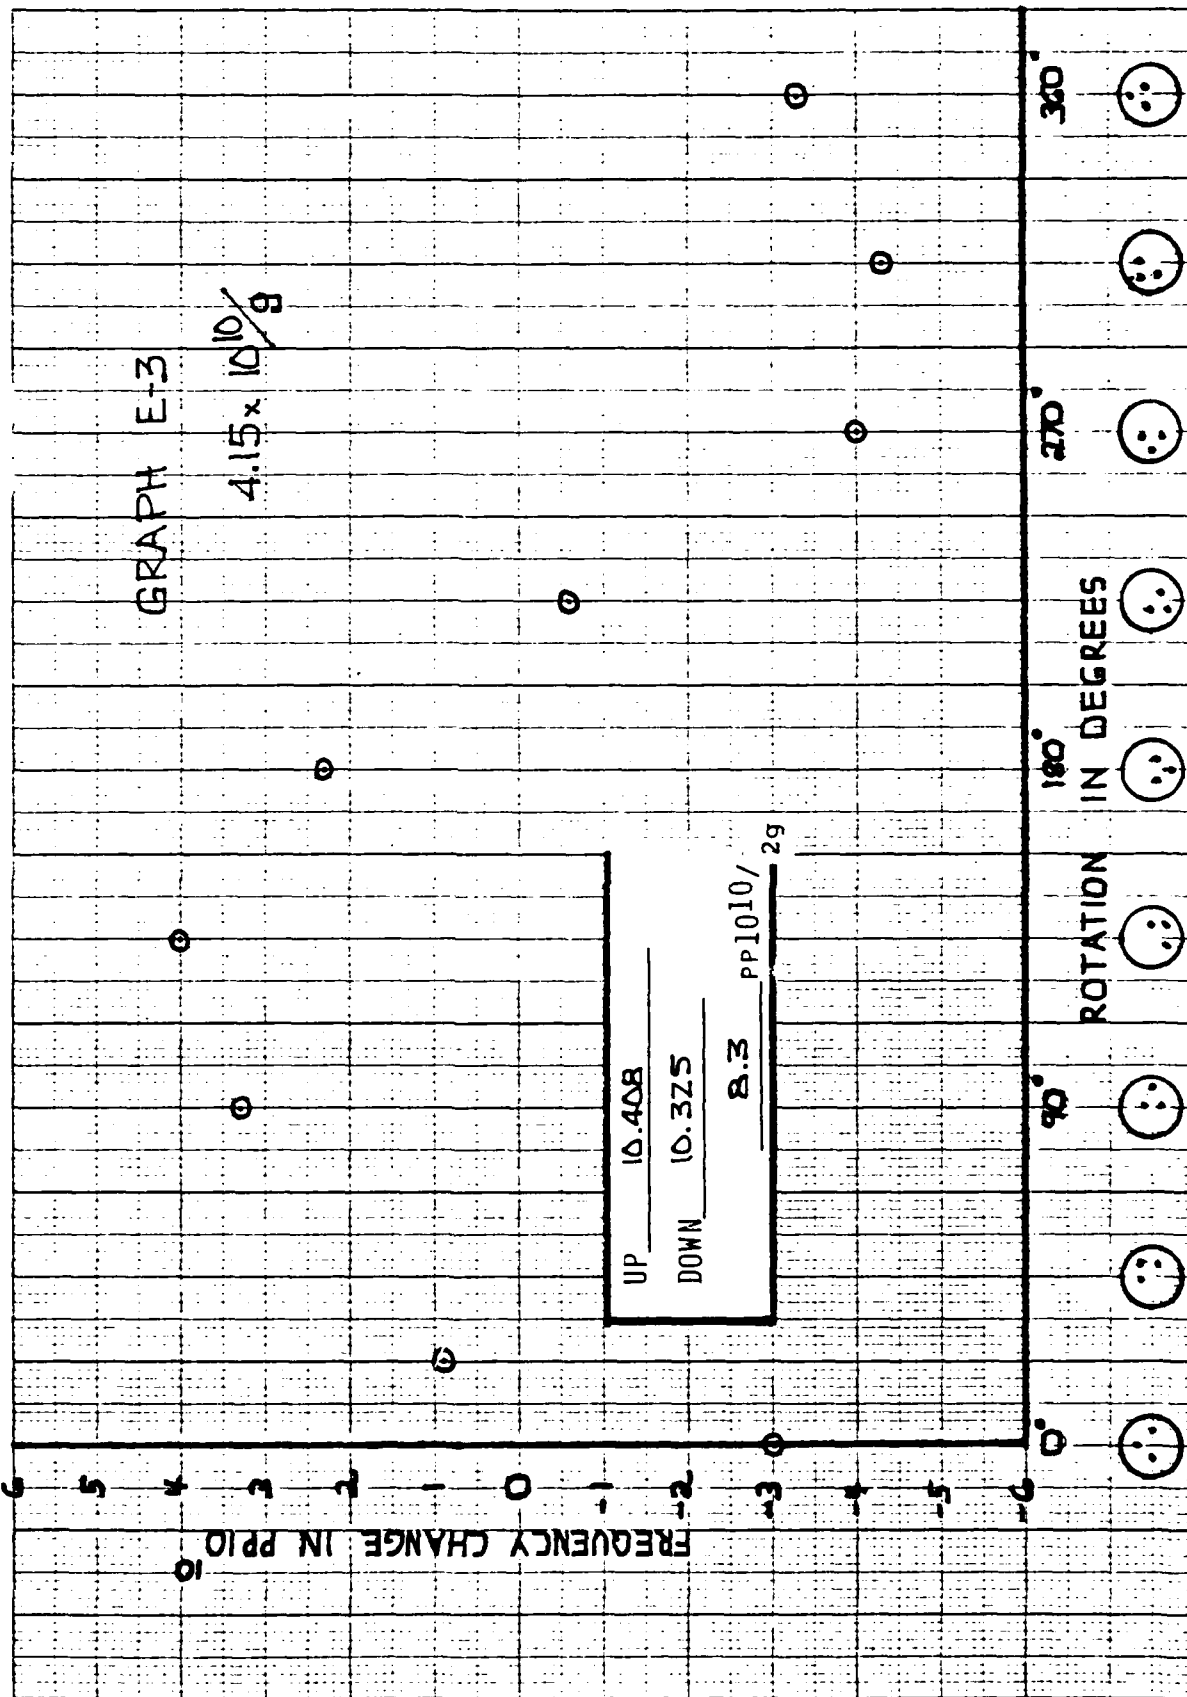


B-27-80

SERIAL 1879

5TH OVERTONE SC CUT CRYSTAL

BI-CONVEX, TURNOVER = 81°C

TOTAL CHANGE = 78 PP 107

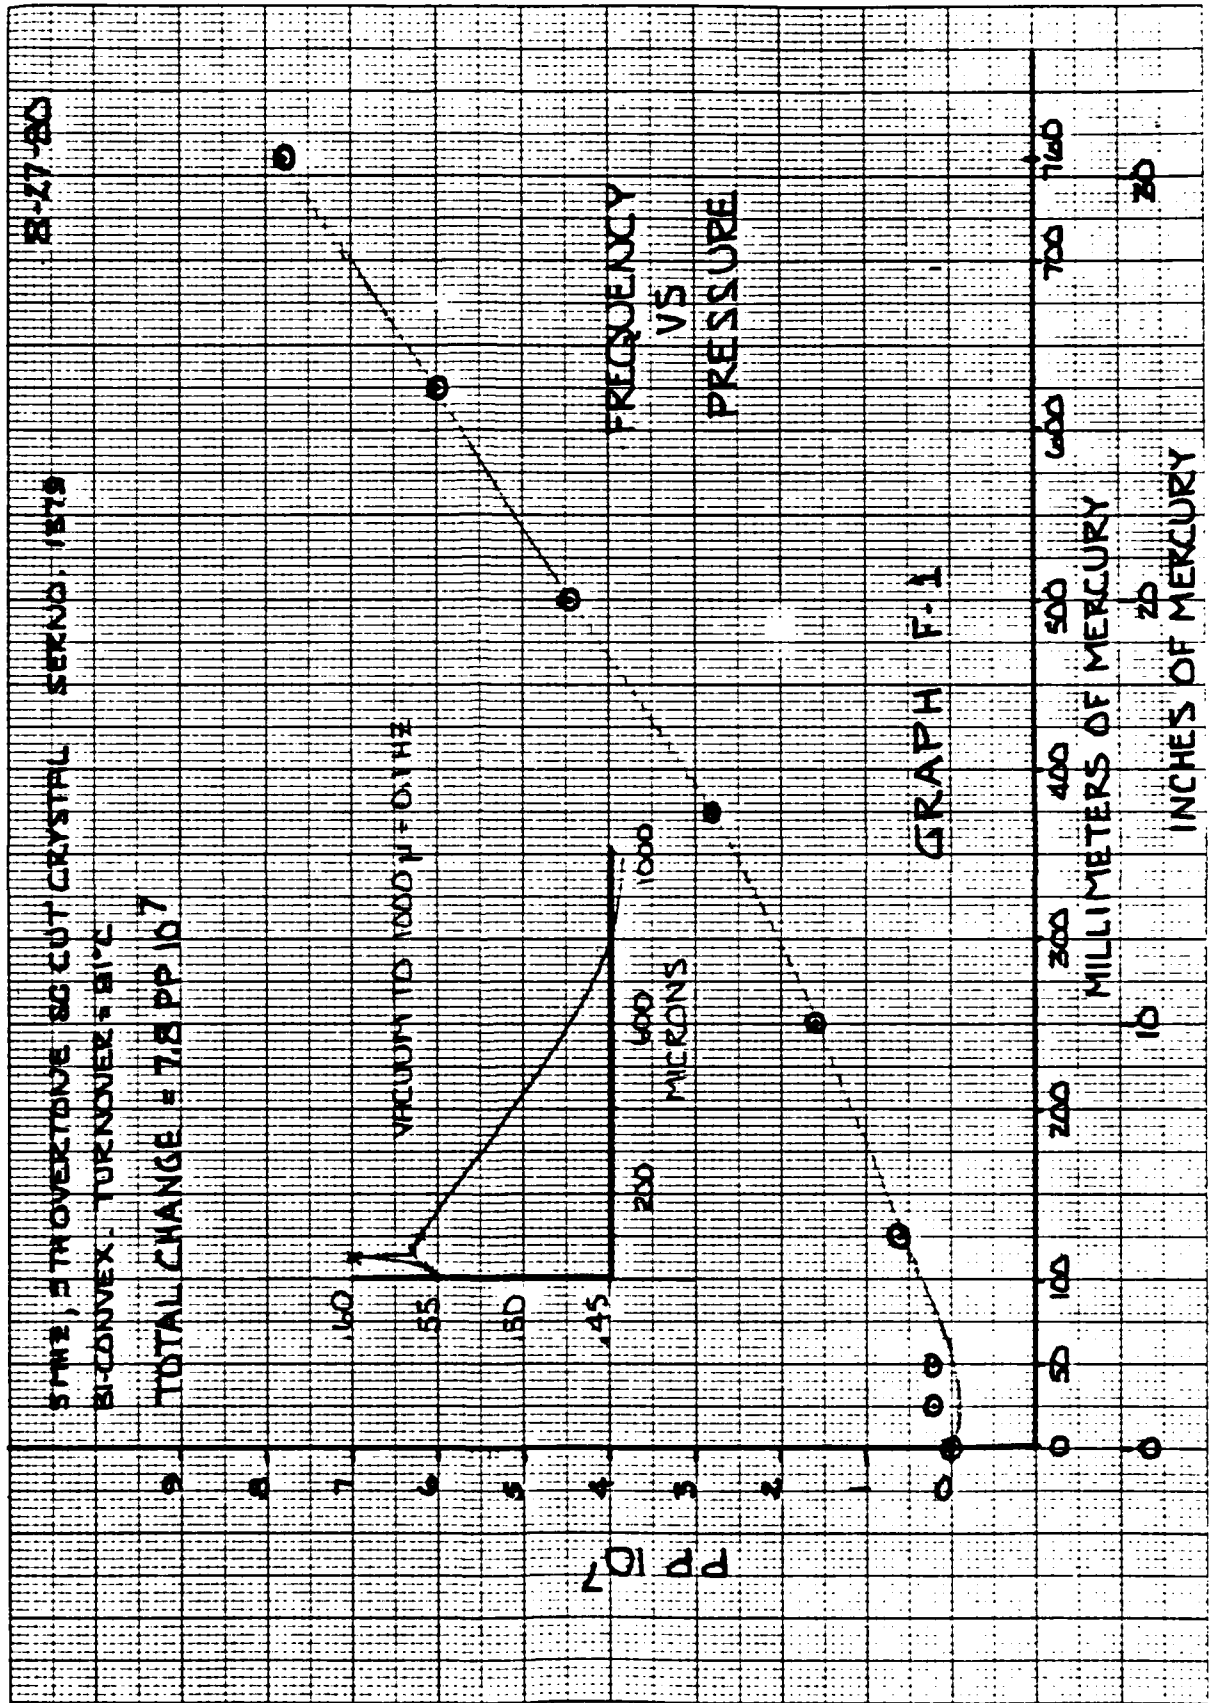

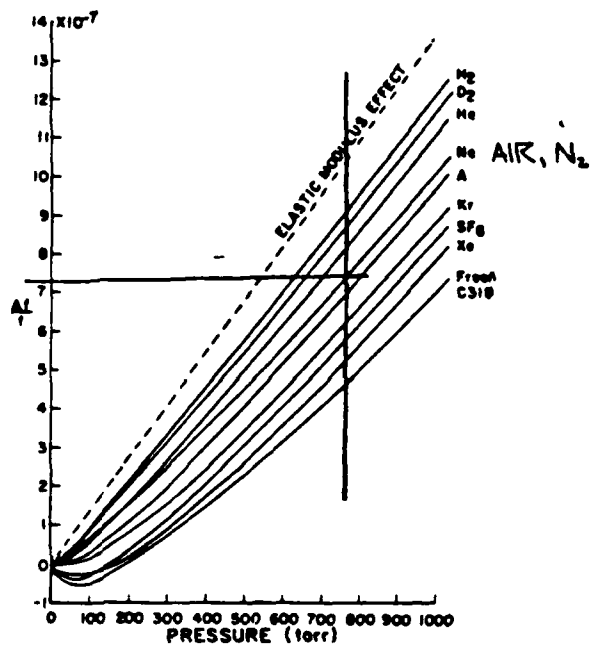


Fig. 5. Experimental frequency change observed versus pressure in different gases with a 5-Mc fifth overtone AT-cut quartz crystal. If there were no viscous loading all the curves would lie close to the dotted line.

Data from Stockbridge

FIGURE F-2



TABLE G-1

ELECTRICAL TEST DATA

SERNO.	$f_s$ @ 25°C	R	$f_p$ @ 25°C w/32 pF	$\Delta f$	$C_o$	$C_1 \times 10^{16}$	$Q \times 10^{-6}$	T.O. (°C)
3803	10.054200	80	10.054220	20	3.5	1.41	1.40	70
3804	10.054186	80	10.054206	20	3.5	1.41	1.40	64
3806	10.054176	80	10.054196	20	3.5	1.41	1.40	72
3807	10.054170	80	10.054190	20	3.5	1.41	1.40	72

DATA: UPPER TEMP SCALE: ○ DATA: LOWER TEMP SCALE

GRAPH G-2

#3803

FREQUENCY (HZ) 10.054XXX


-28-


APPROX. 20 PPM

RESISTANCE (OHMS)

TEMPERATURE (°C)

SC CUT CRYSTAL TURNOVER GRAPH

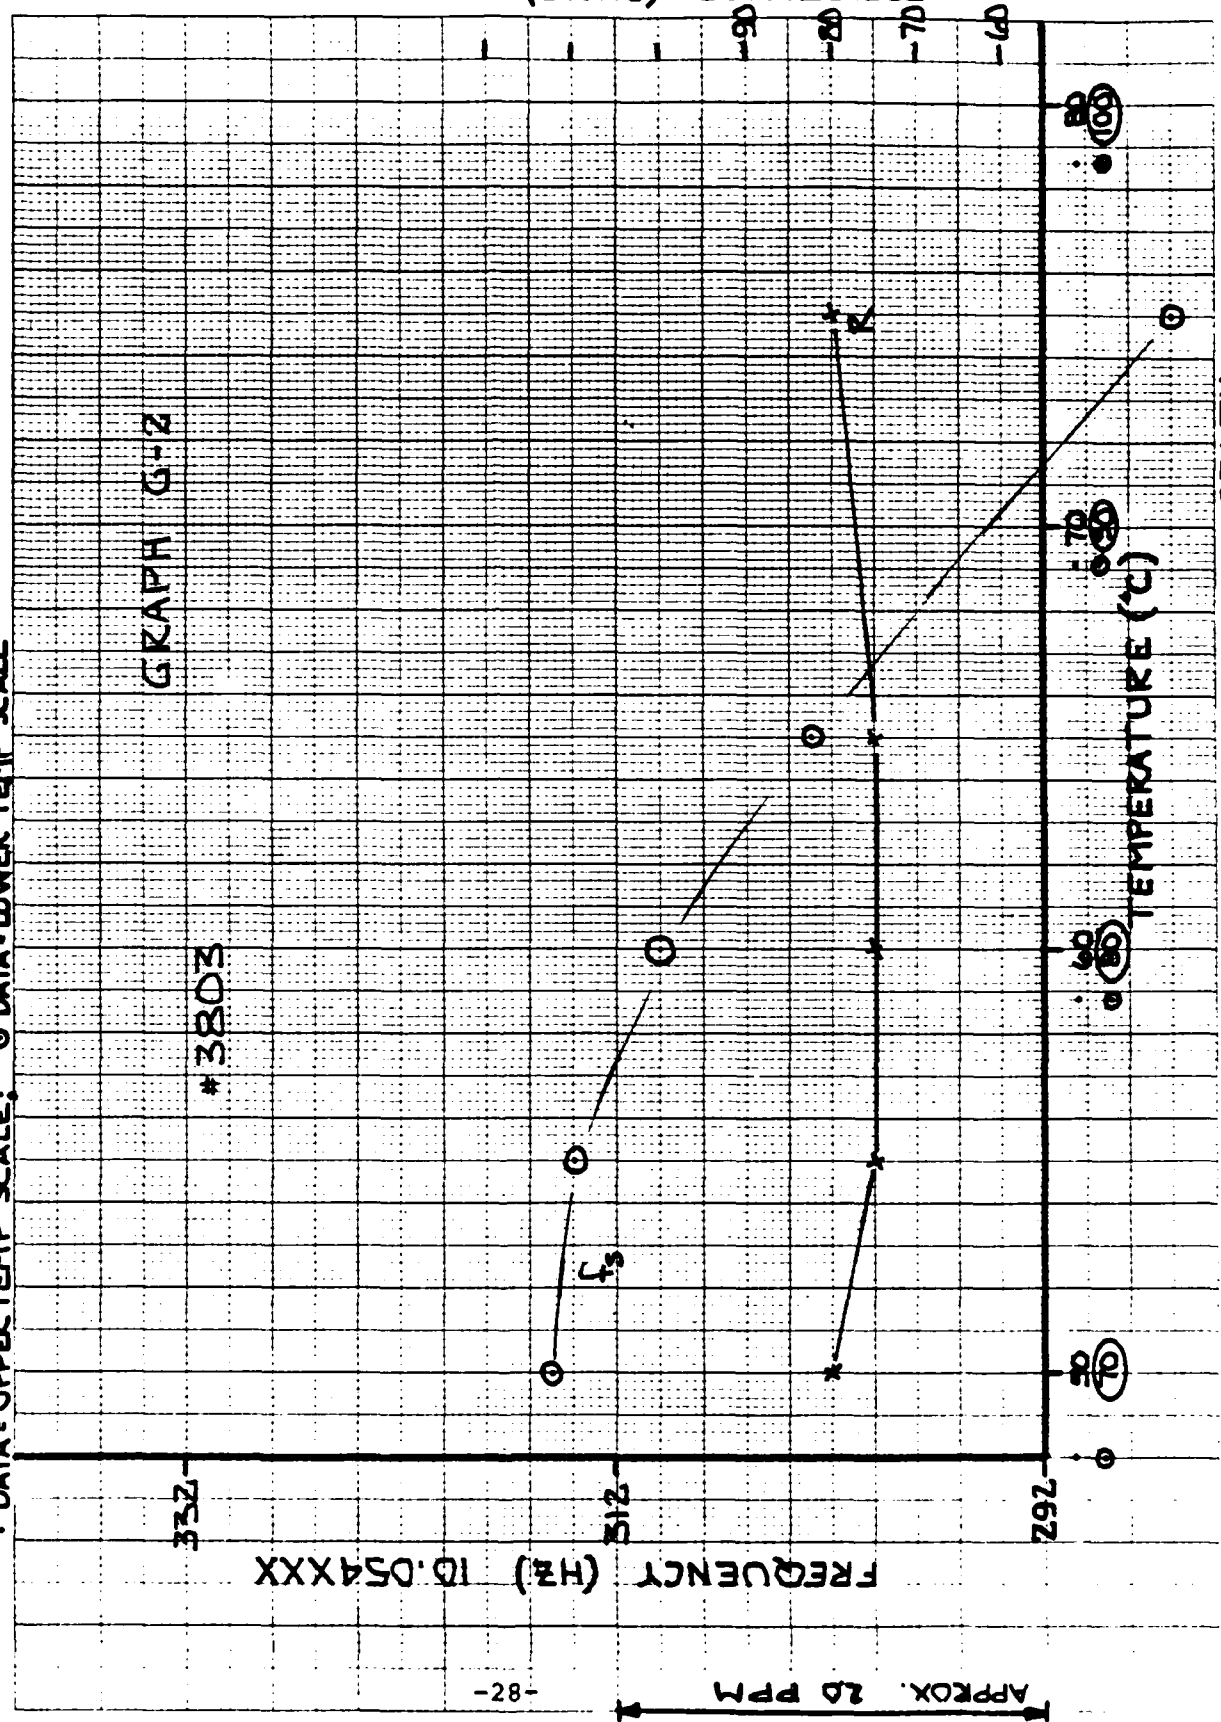

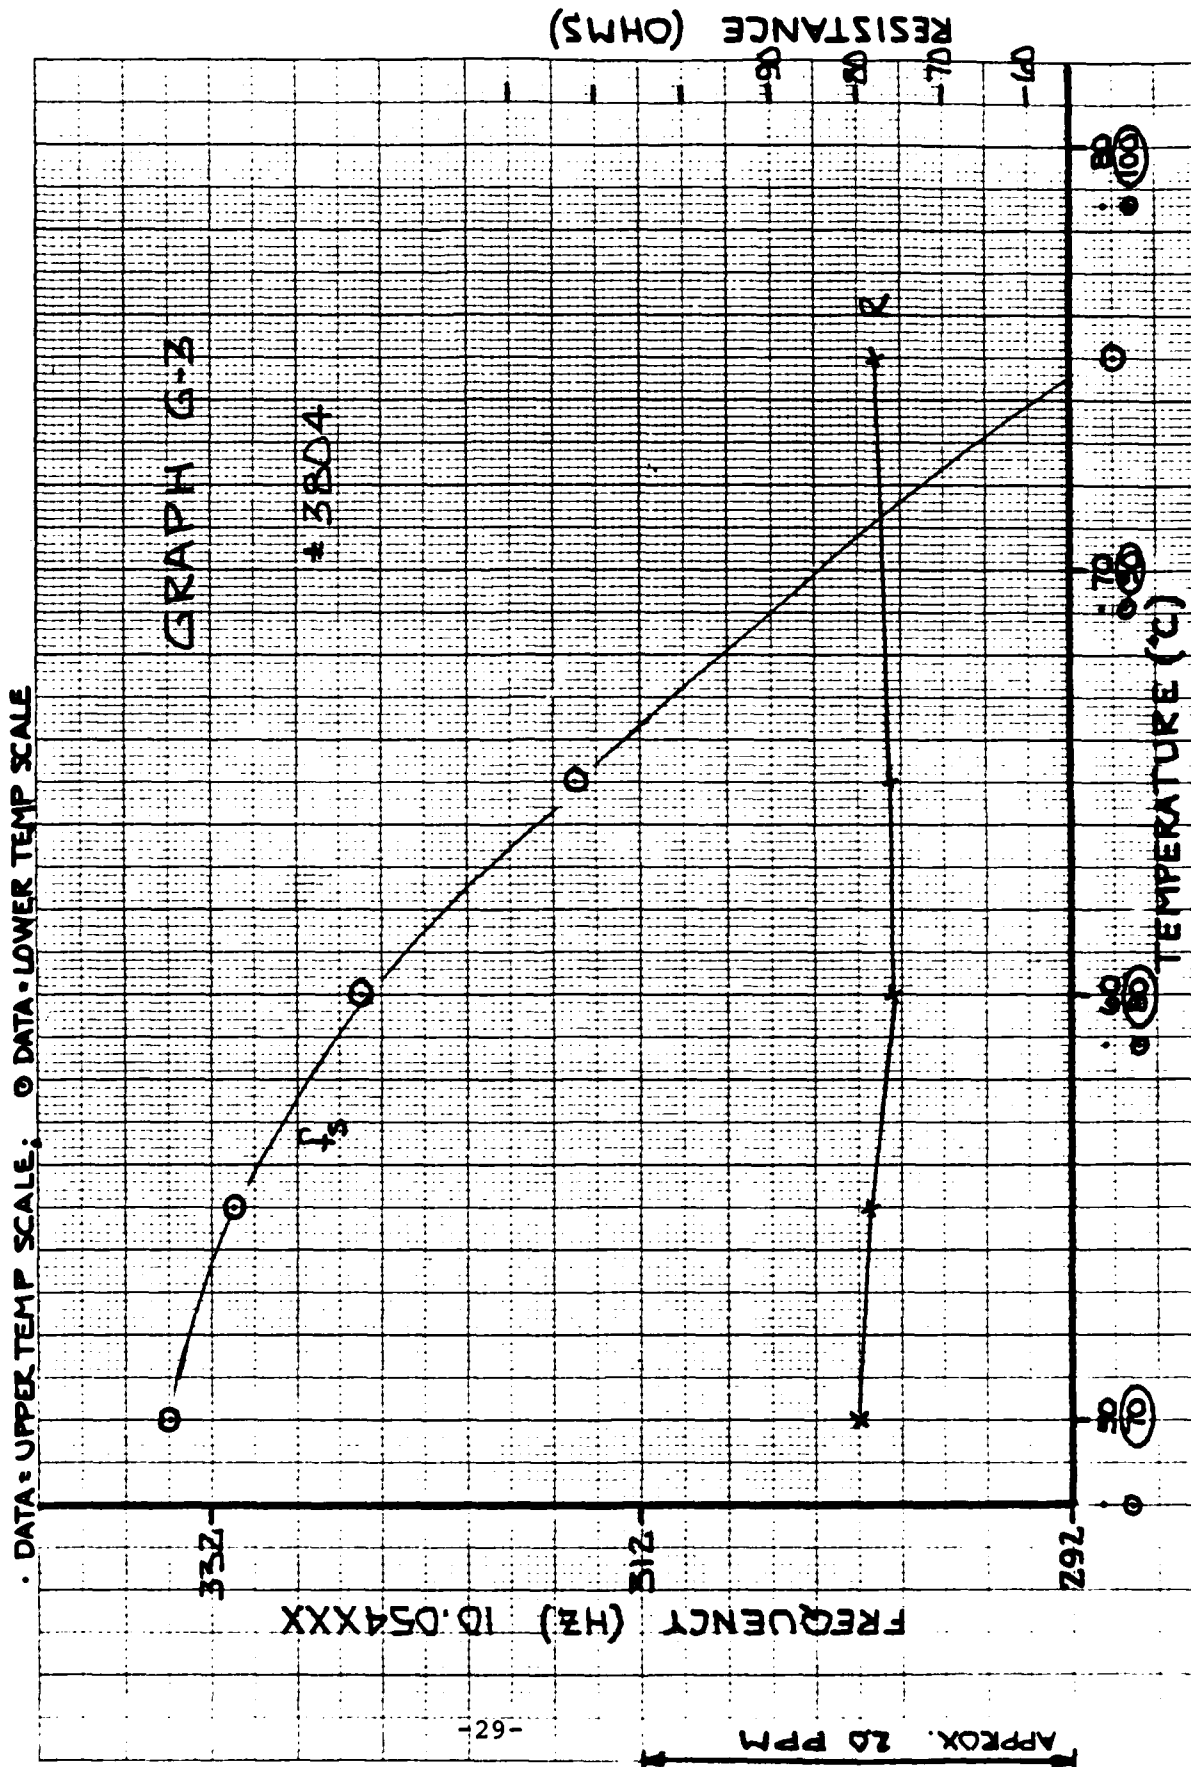


SC CUT CRYSTAL TURNOVER GRAPH

DATA: UPPER TEMP SCALE: ○ DATA: LOWER TEMP SCALE

GRAPH G-4

# 3806

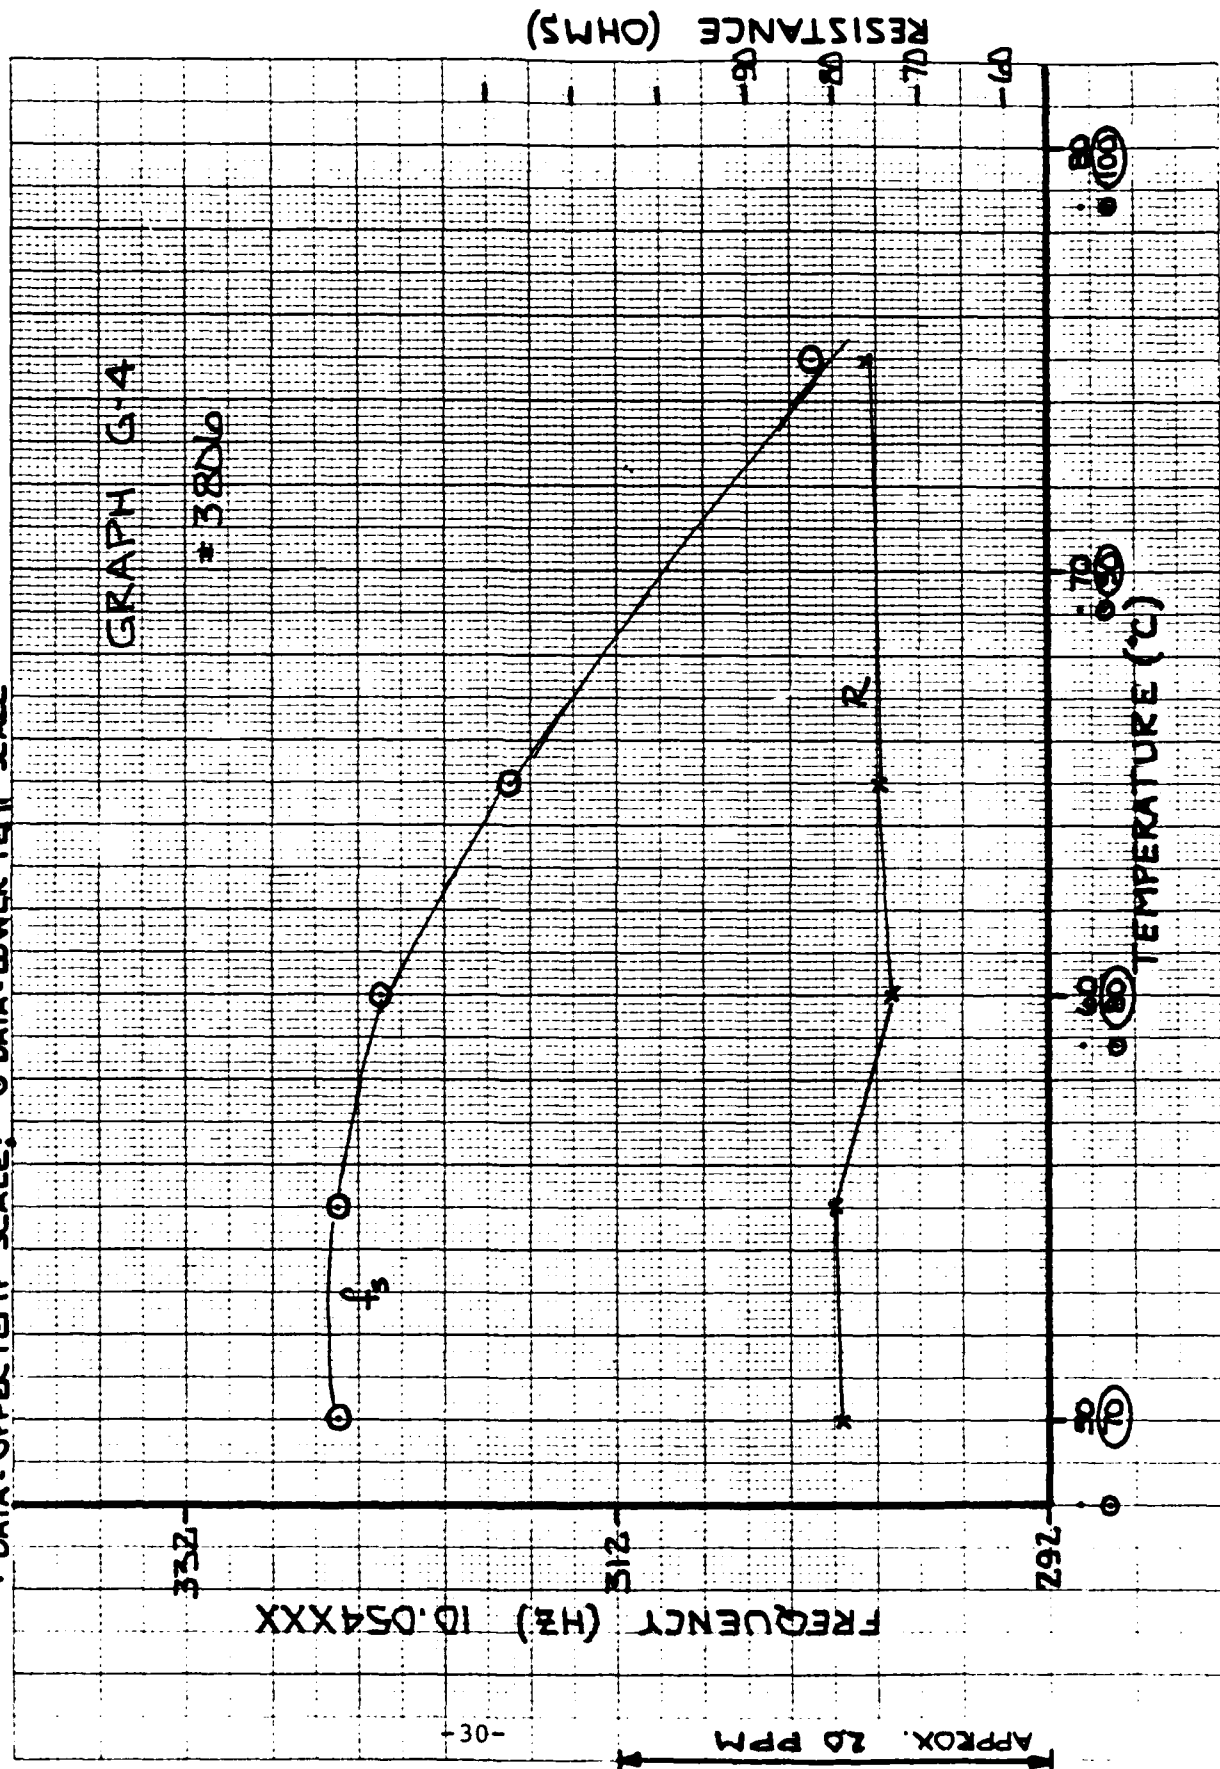


SC CUT CRYSTAL TURNOVER GRAPH

DATA: UPPER TEMP SCALE: ○ DATA: LOWER TEMP SCALE

GRAPH G-5

#3807

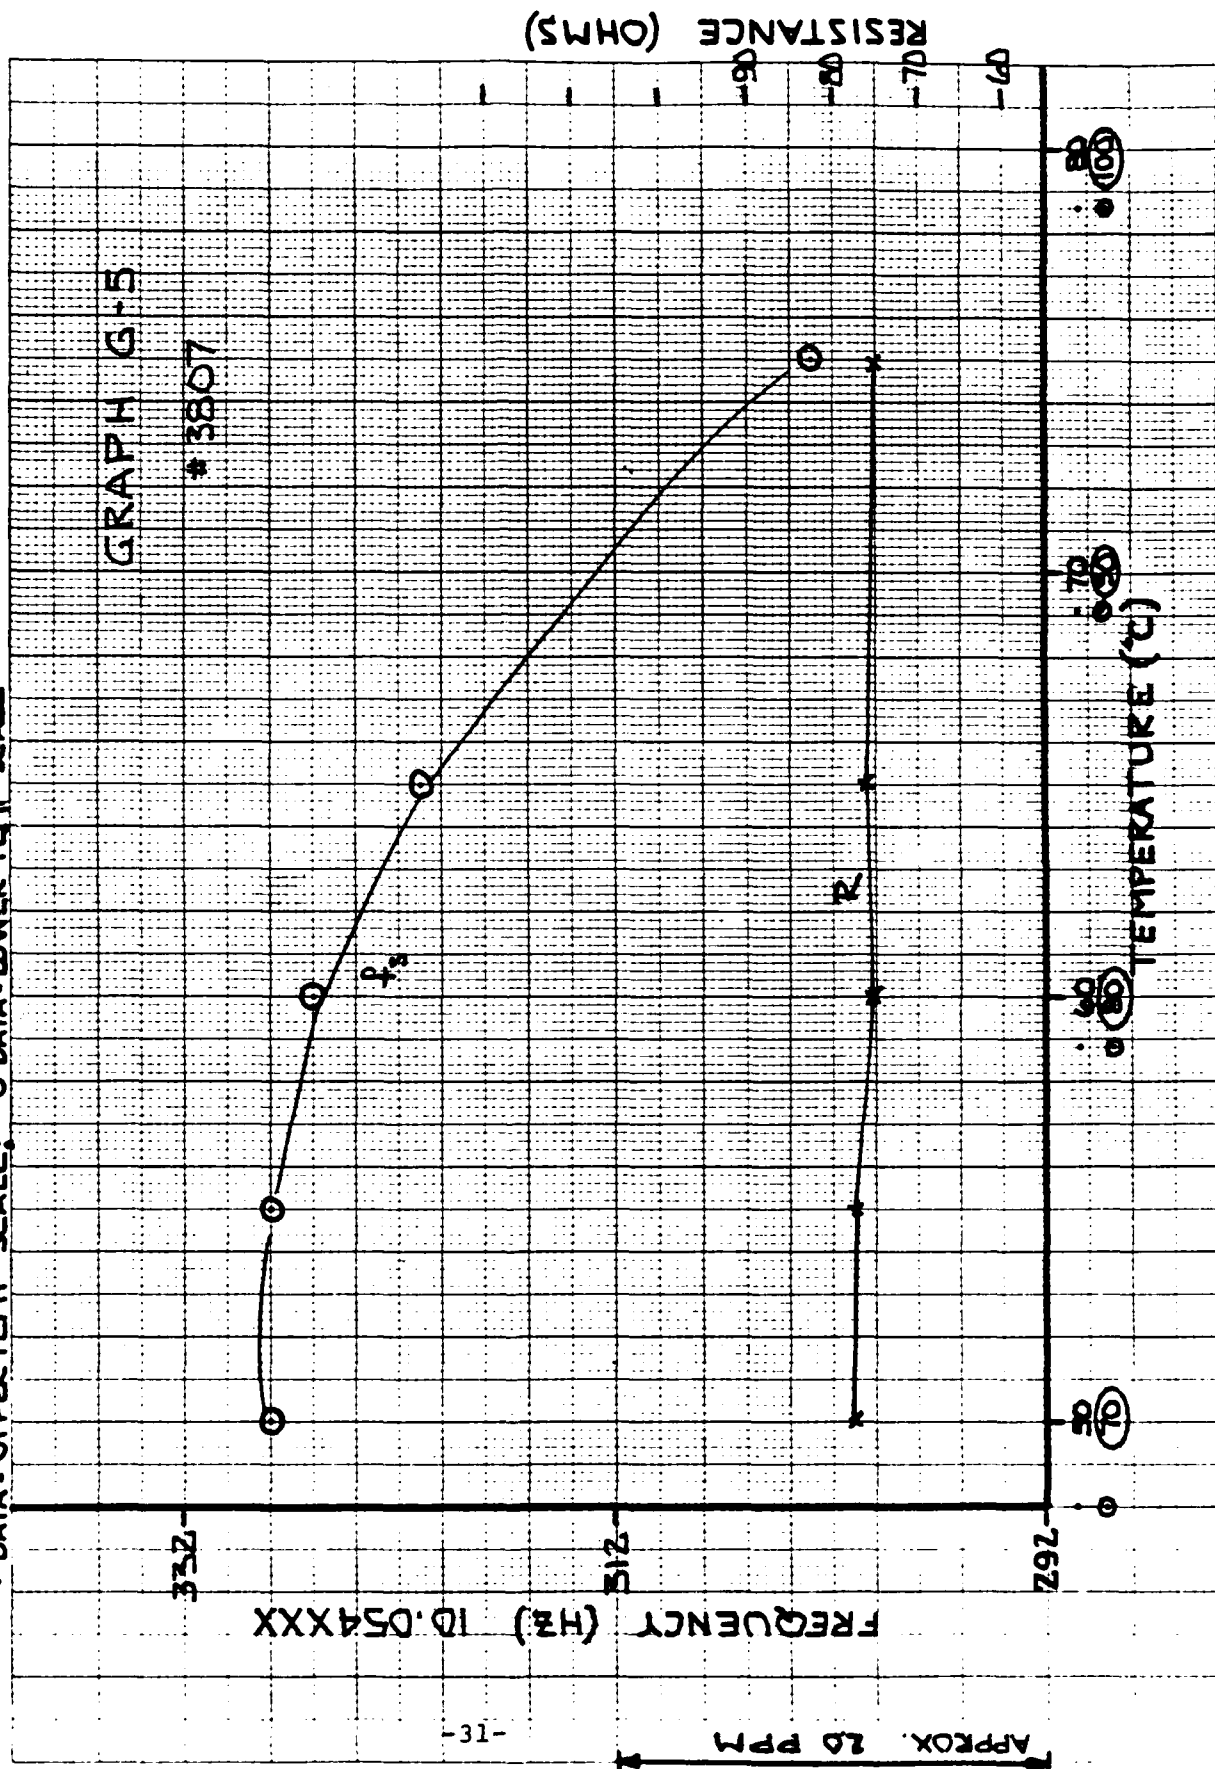

SC CUT CRYSTAL TURNOVER GRAPH

TABLE G-6


SUMMARY OF DATA PRESENTED IN GRAPHS G-7 THROUGH G-17

ACCELERATION			
S/N	RADIAL WORST CASE (PP10 <sup>10</sup> /g)	THICKNESS (UP/DOWN) (PP10 <sup>10</sup> /g)	COMMENTS
3803	7.0	2.7	Diamond Mount
3804	5.3	3.0	Diamond Mount
3806	8.0	4.8	Diamond Mount
3807	2.7	2.5	Diamond Mount
3803	6.5	4.4	'J' Mount
3804	7.1	4.3	'J' Mount
3806	5.7	4.8	'J' Mount
3807	5.5	2.0	'J' Mount
3803	6.8	4.6	'J' Mount Retest
3804	6.7	4.2	'J' Mount Retest
3807	6.0	2.6	'J' Mount Retest

SERNO. 3B03

10054330/3/SC

DATE 6-29-80

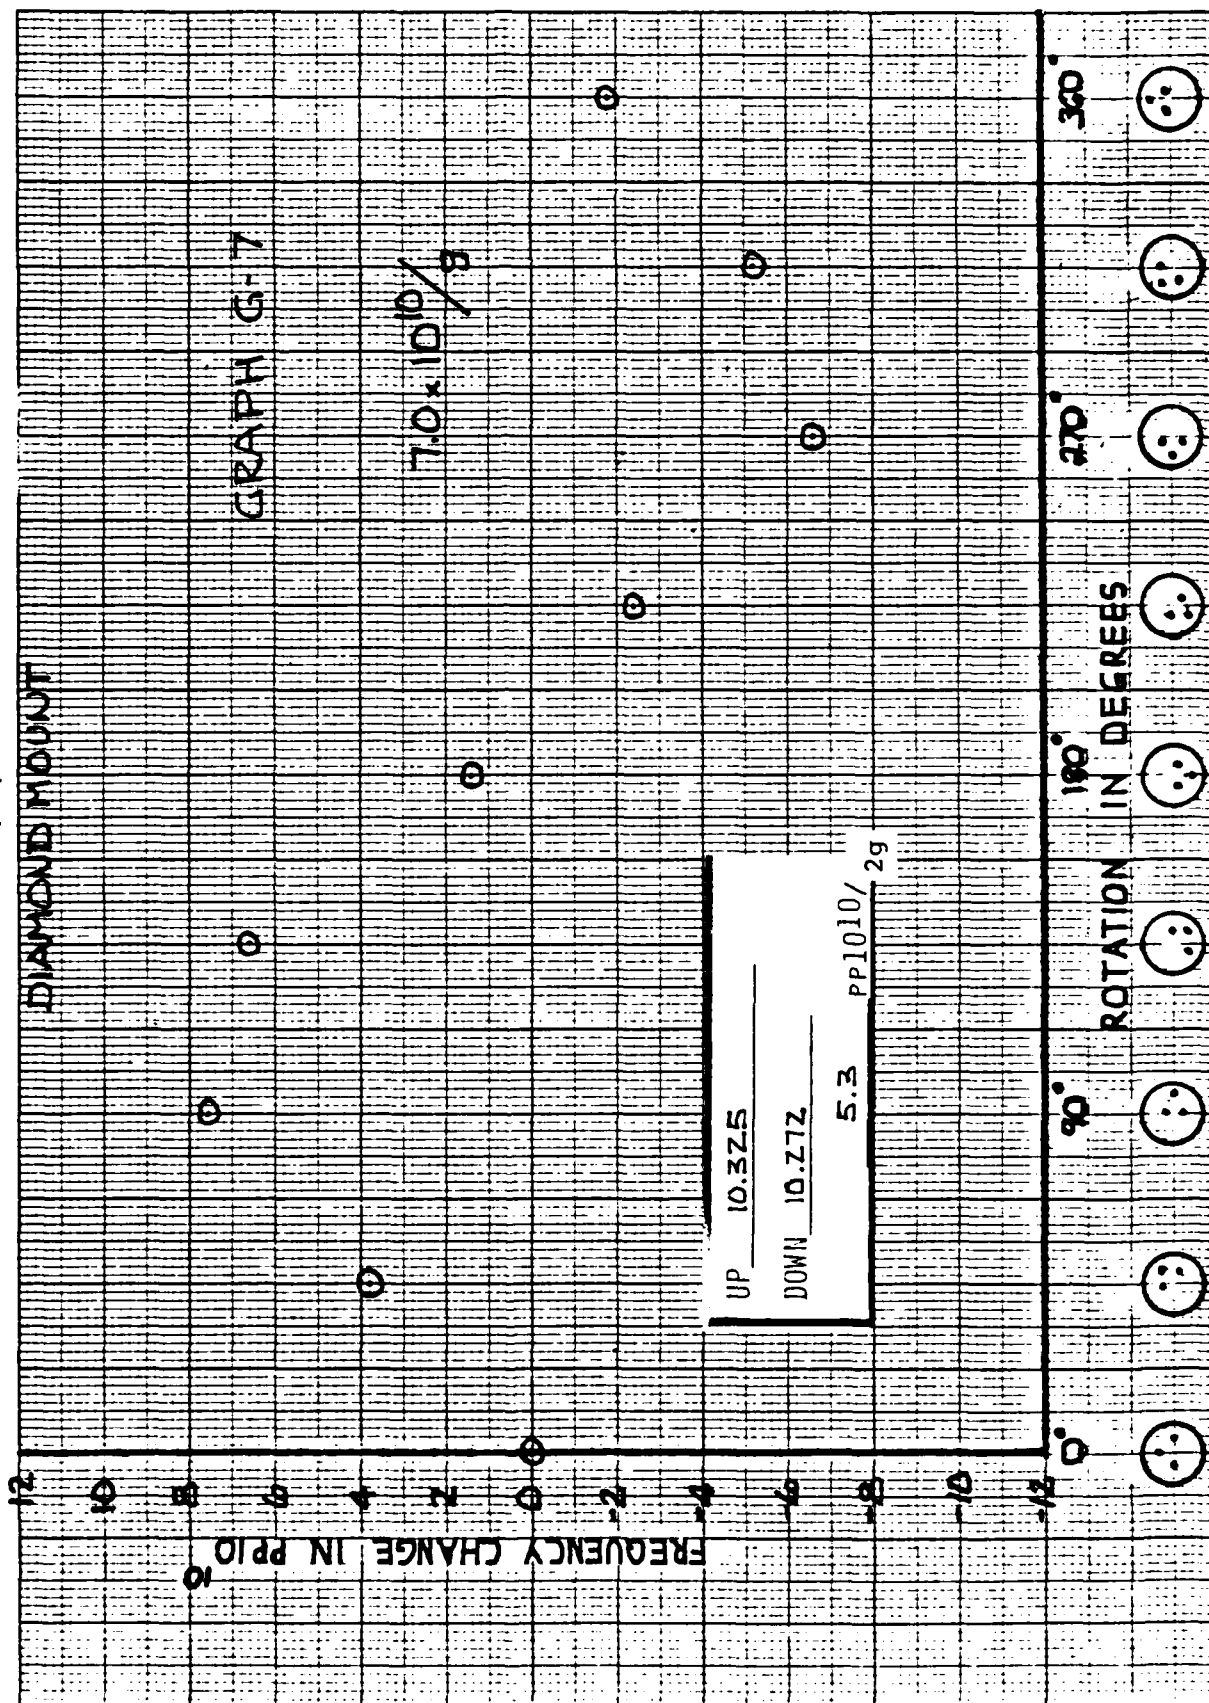


K-E 20 X 20 TO THE INCH • 1 X 10 IN. BY IN.

46 124C

SER. NO. 3804

10-054330-3/SC

DATE 7-1-80

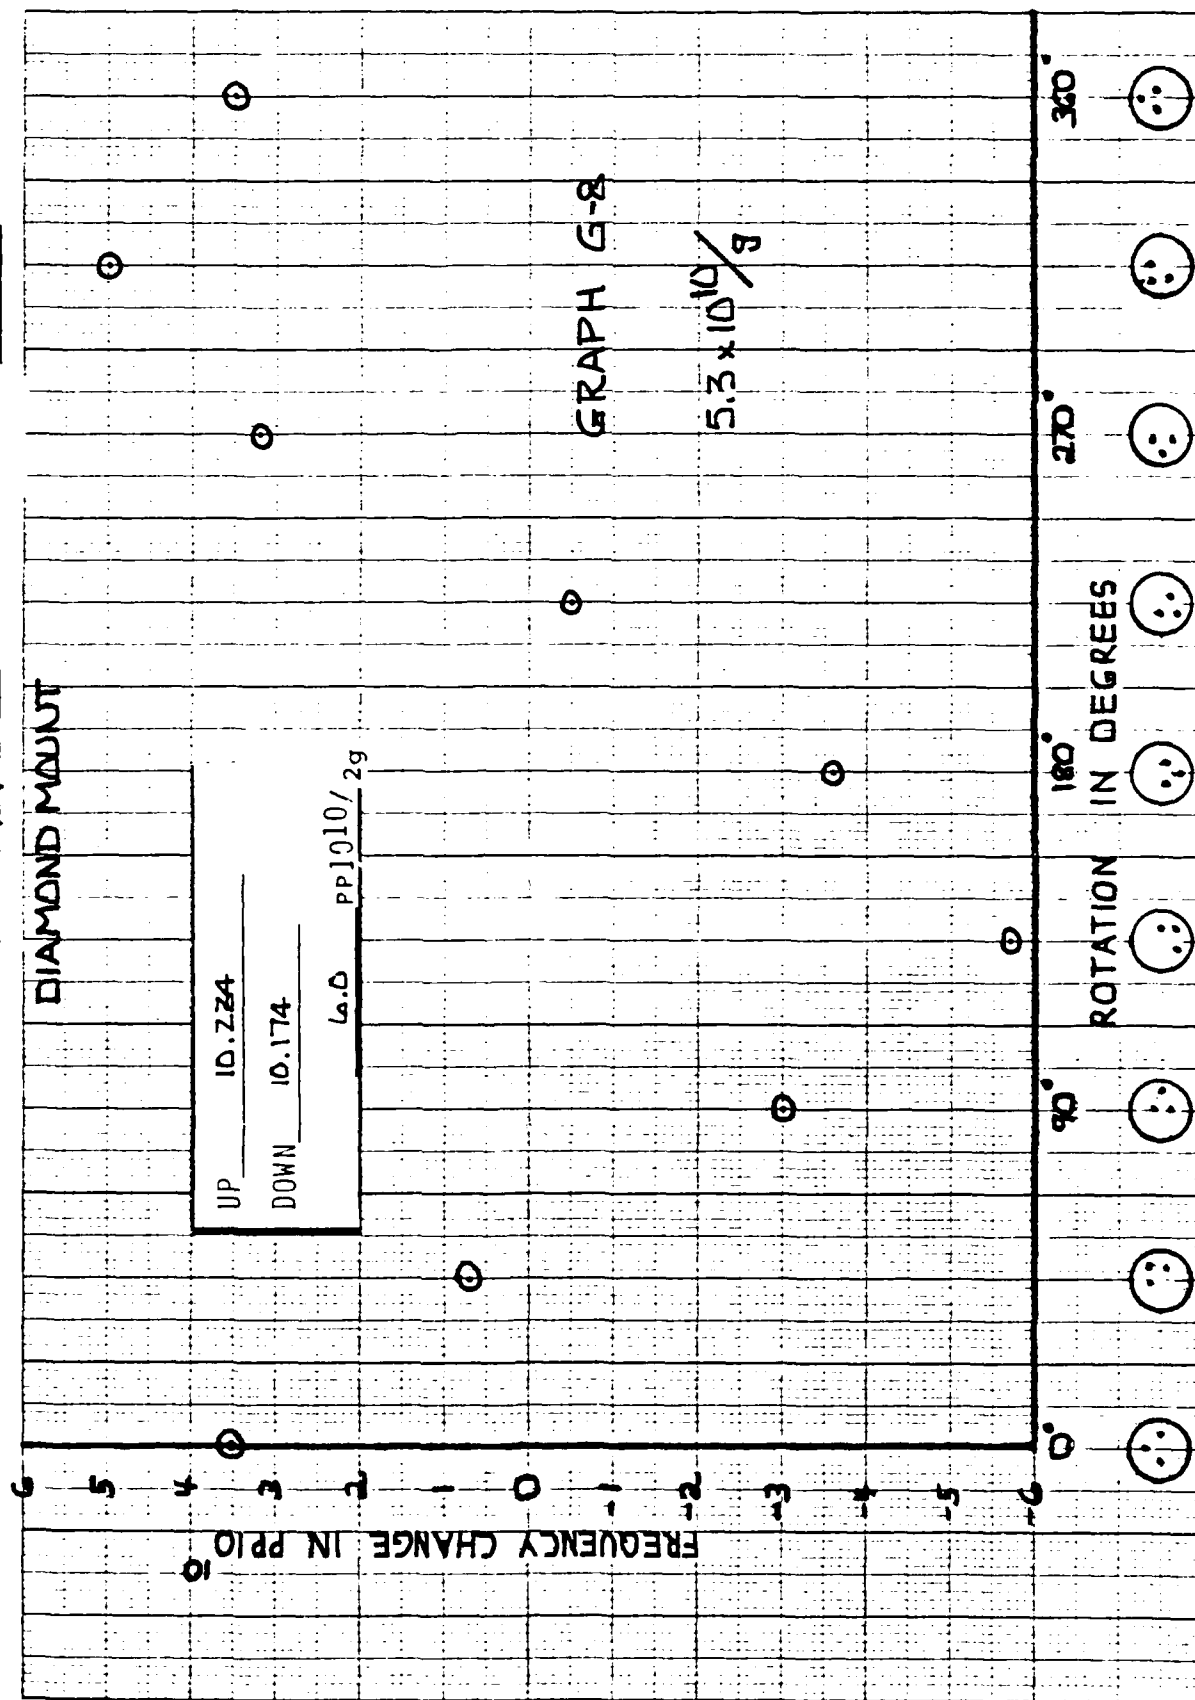




SERNO. 3806

10.054330/3/SC

DATE 6-29-80

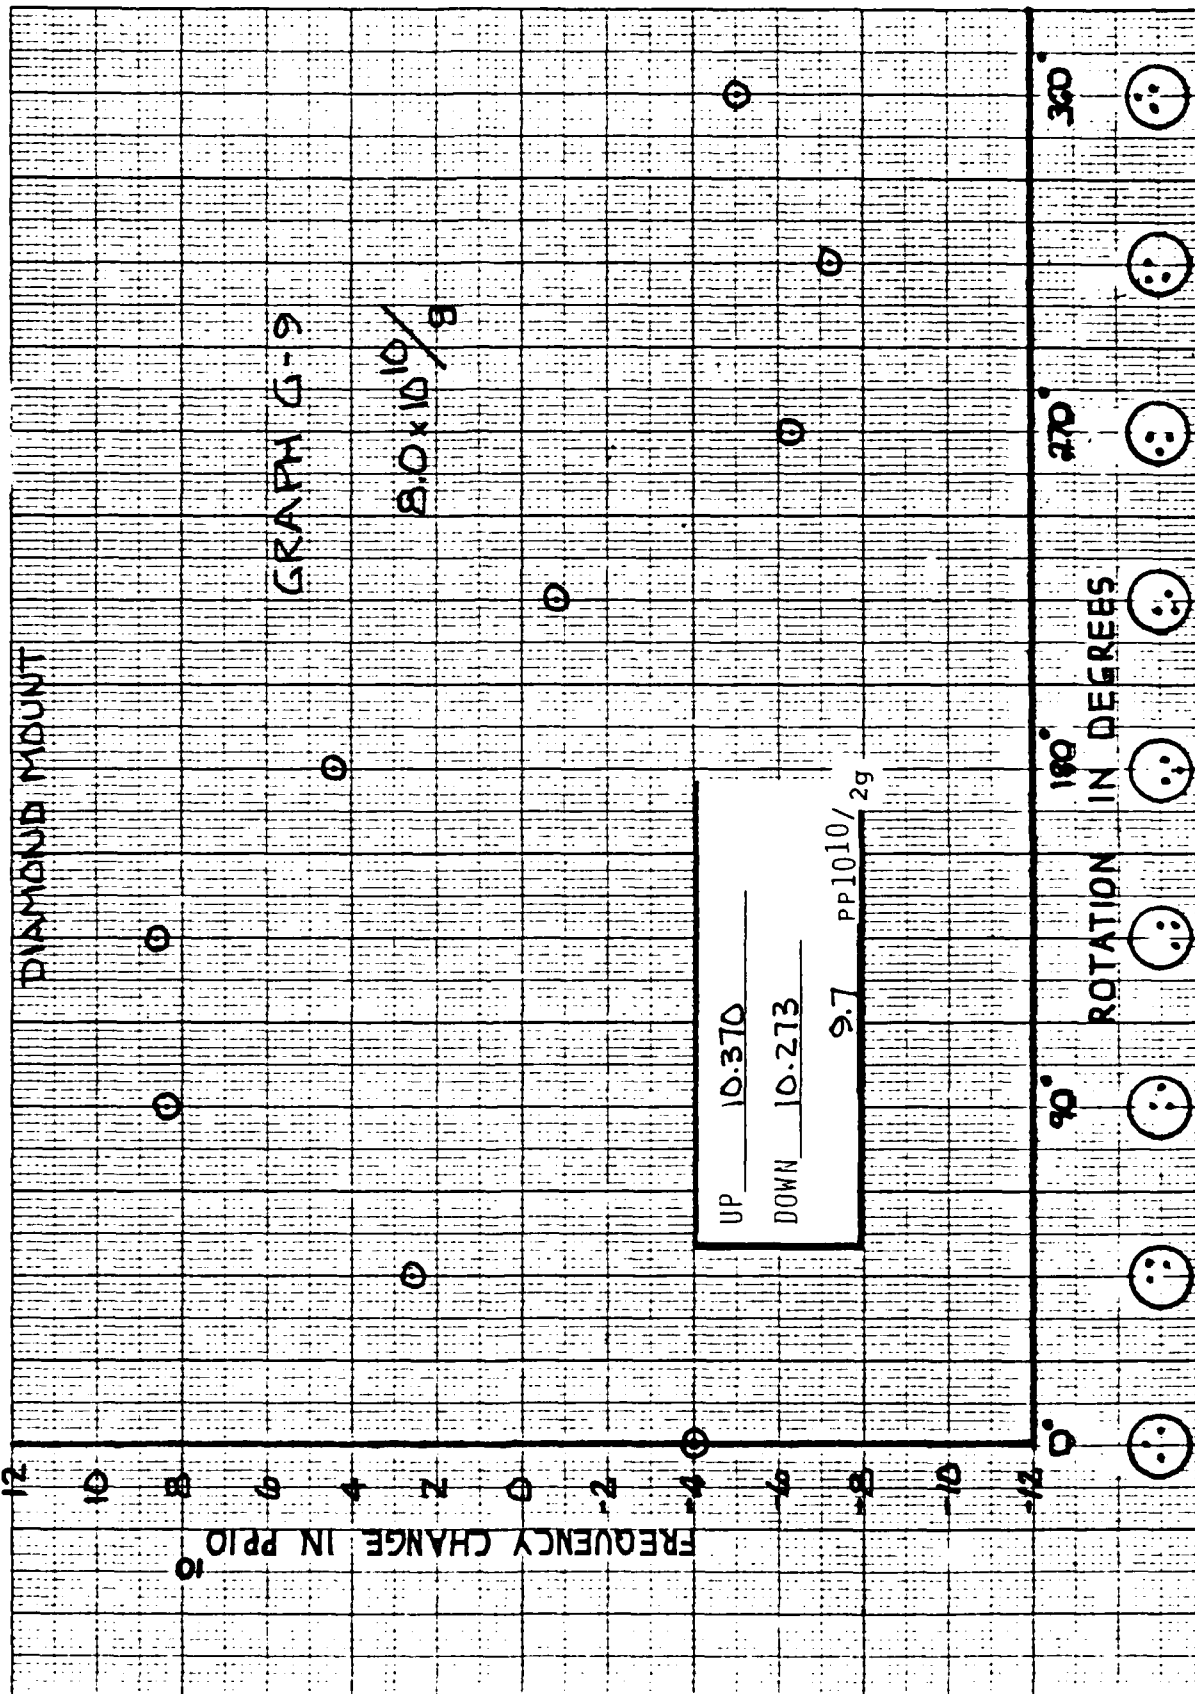


K-E 20 X 20 TO THE INCH 2 X 10 TO THE INCH  
KRUDEL RES-ED 10 0000004

46 124C

SERNO. 3807

10.054330/3/SC


DATE 7/2/80

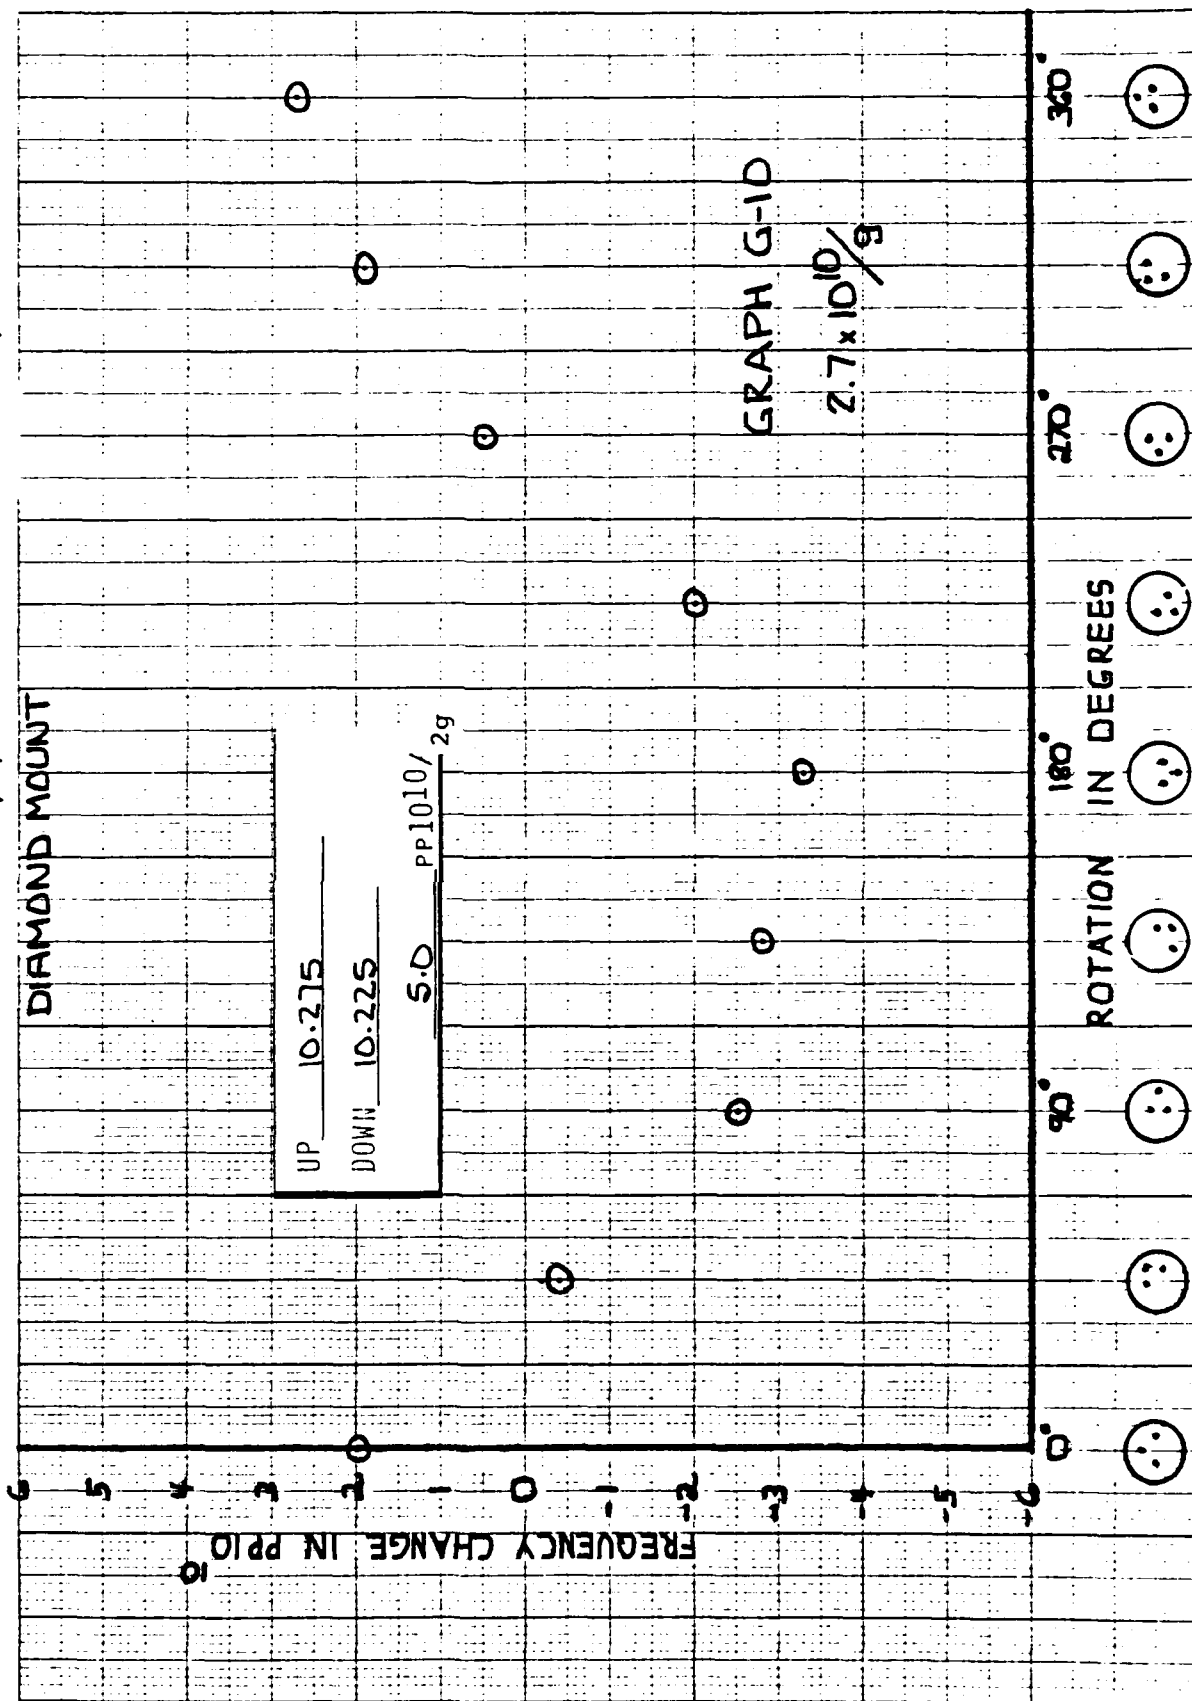

SERNO. 3803

10-054330/3/SC


DATE 8-7-80

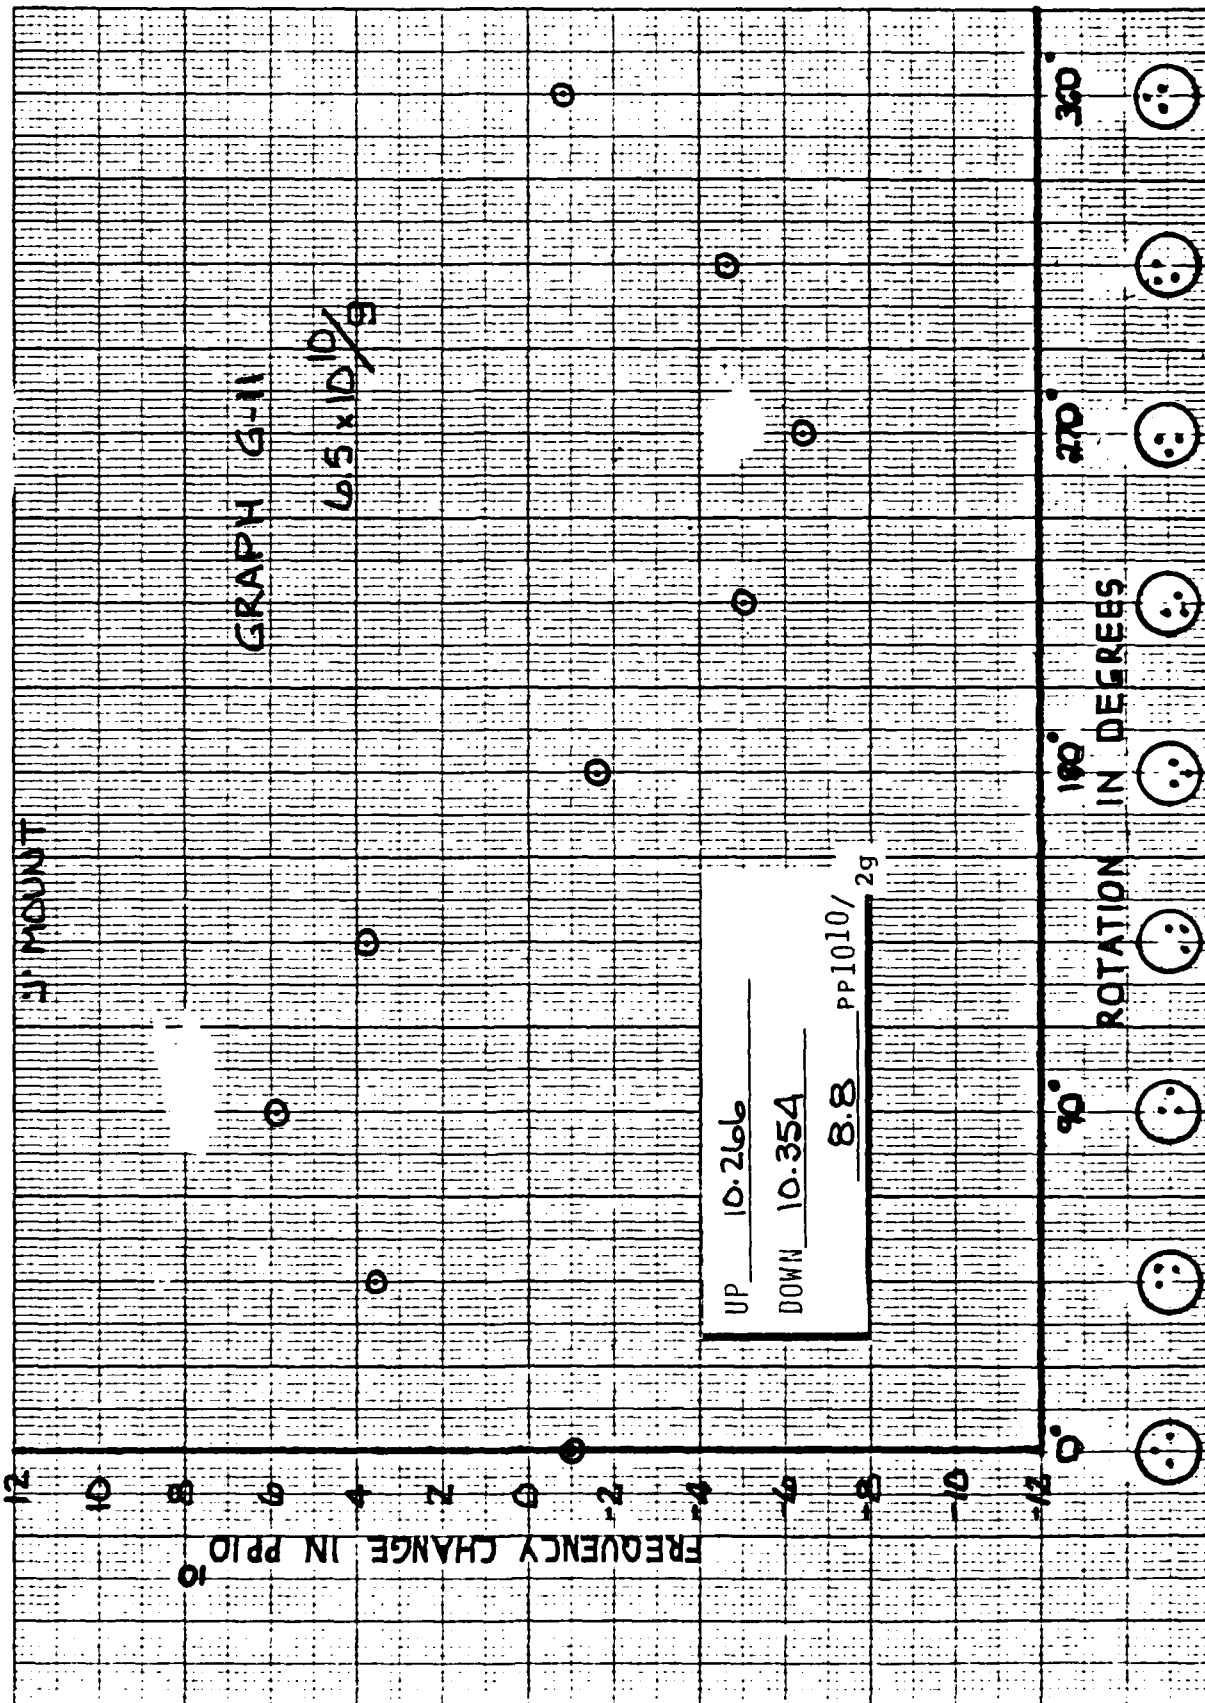

SERNO. 3804

10.054330/3/SC

DATE 8-7-80

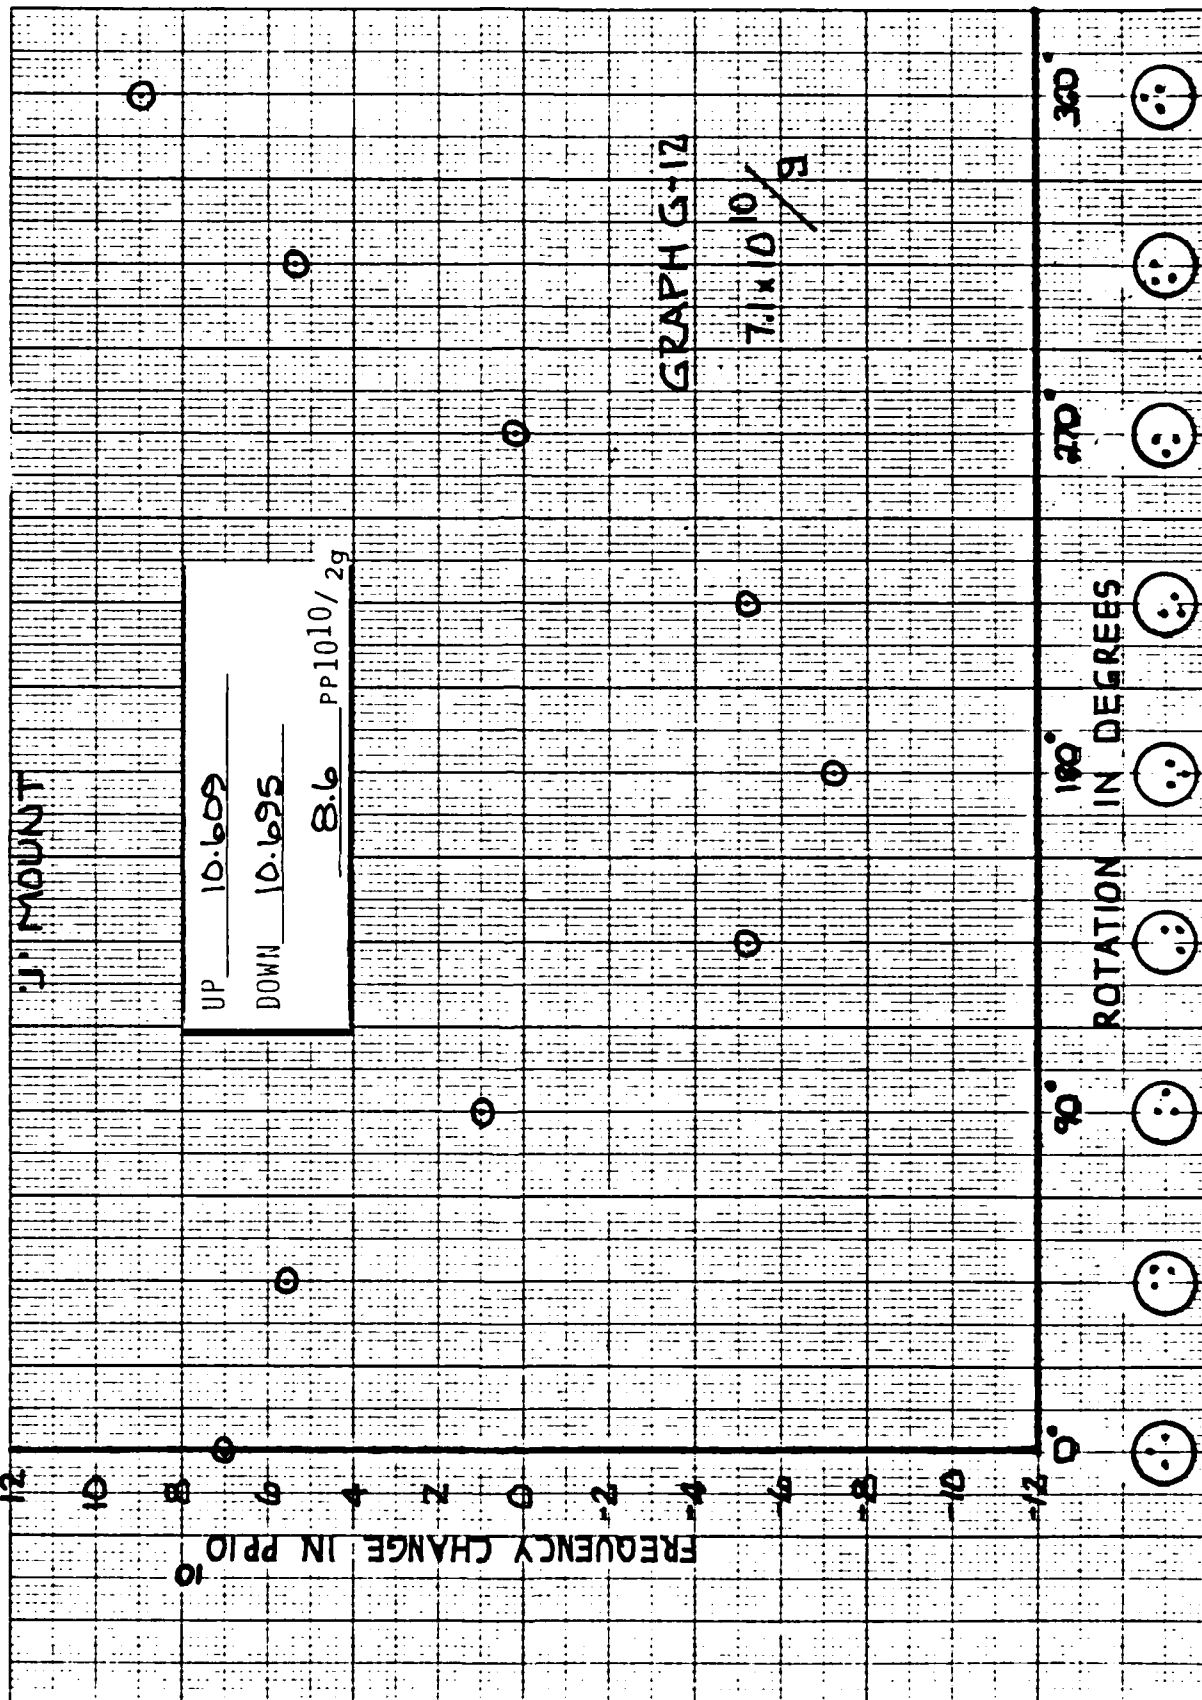


K-E 20 X 20 TO THE INCH 1/2 X 10 IN HUS  
NEUTRAL & FERN 10 1/2 IN HUS

46 124C

SERNO. 3806

10.054330/3/SC

DATE 8-7-80

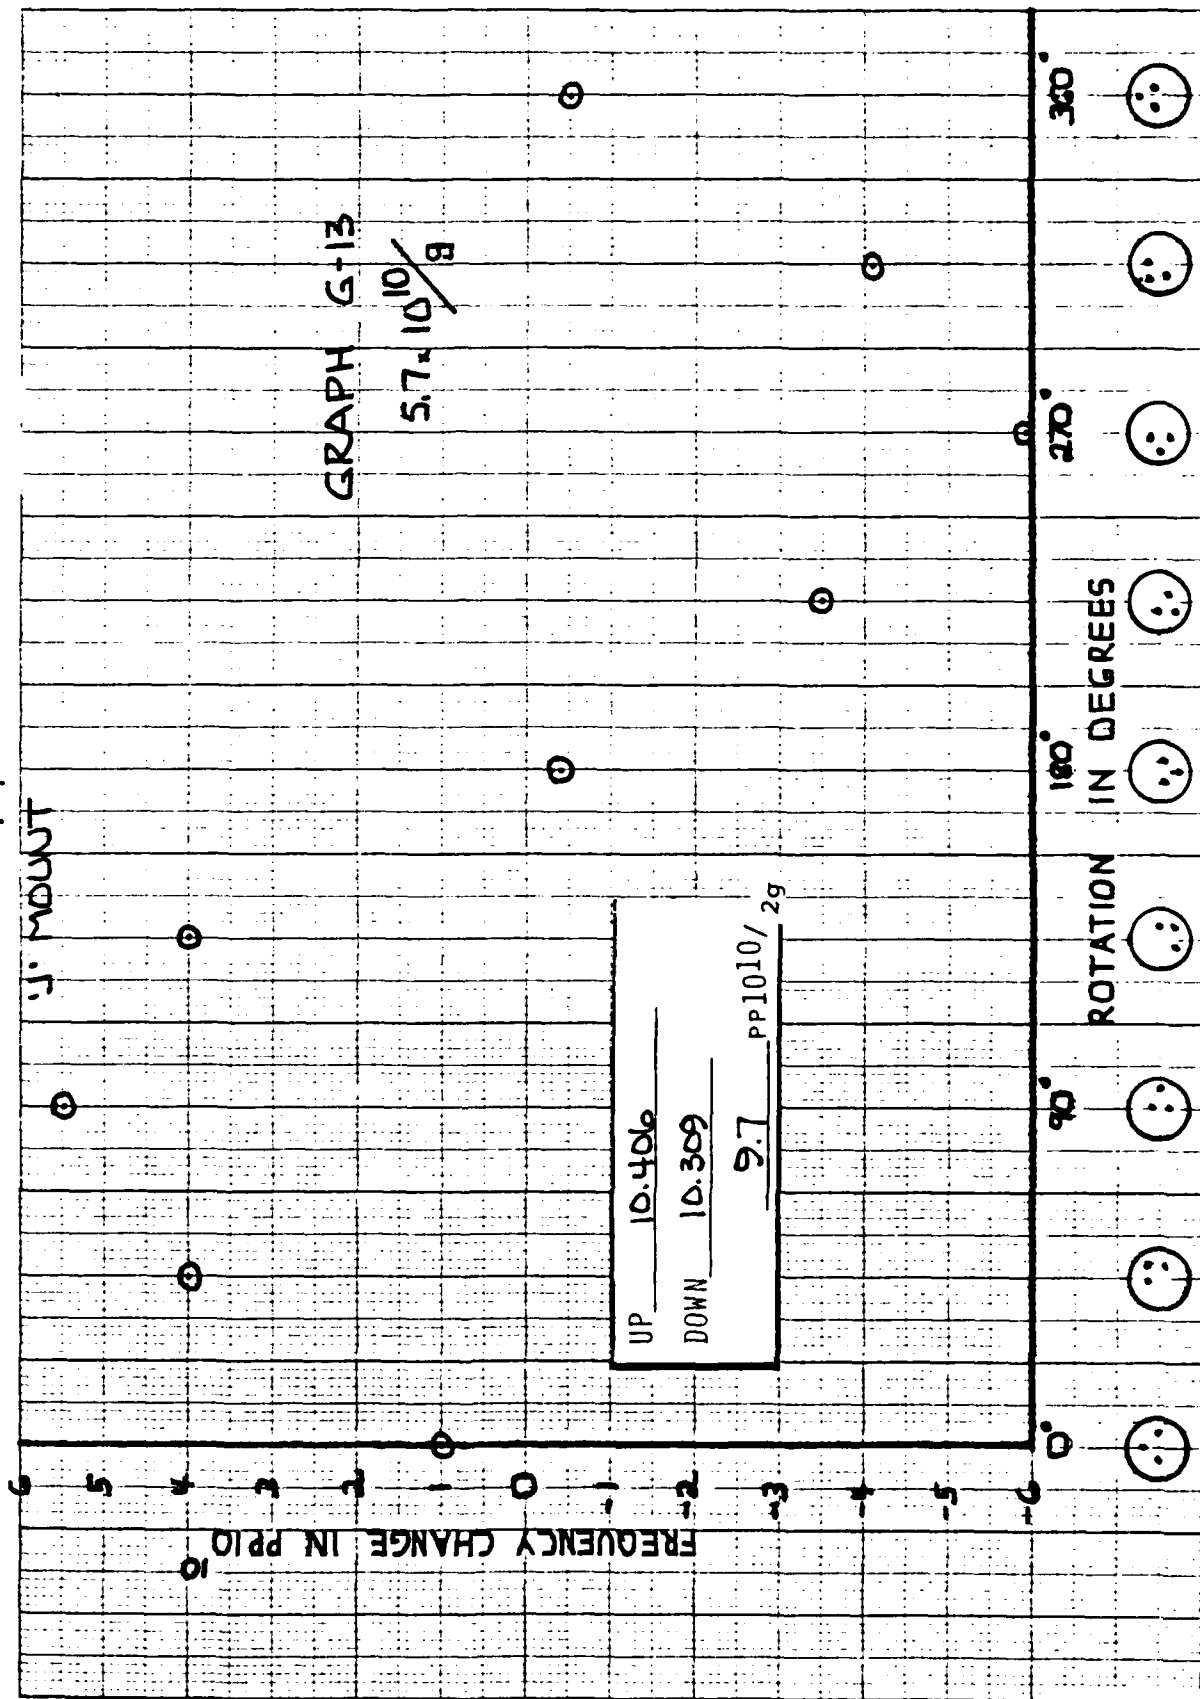


K-E 20 X 20 TO THE INCH • 7 X 10 IN. HT'S  
REIFFEL & ESNER CO. MADE IN U.S.A.

46124C

SERNO. 3807

10054330/3/SC


DATE 8-7-80

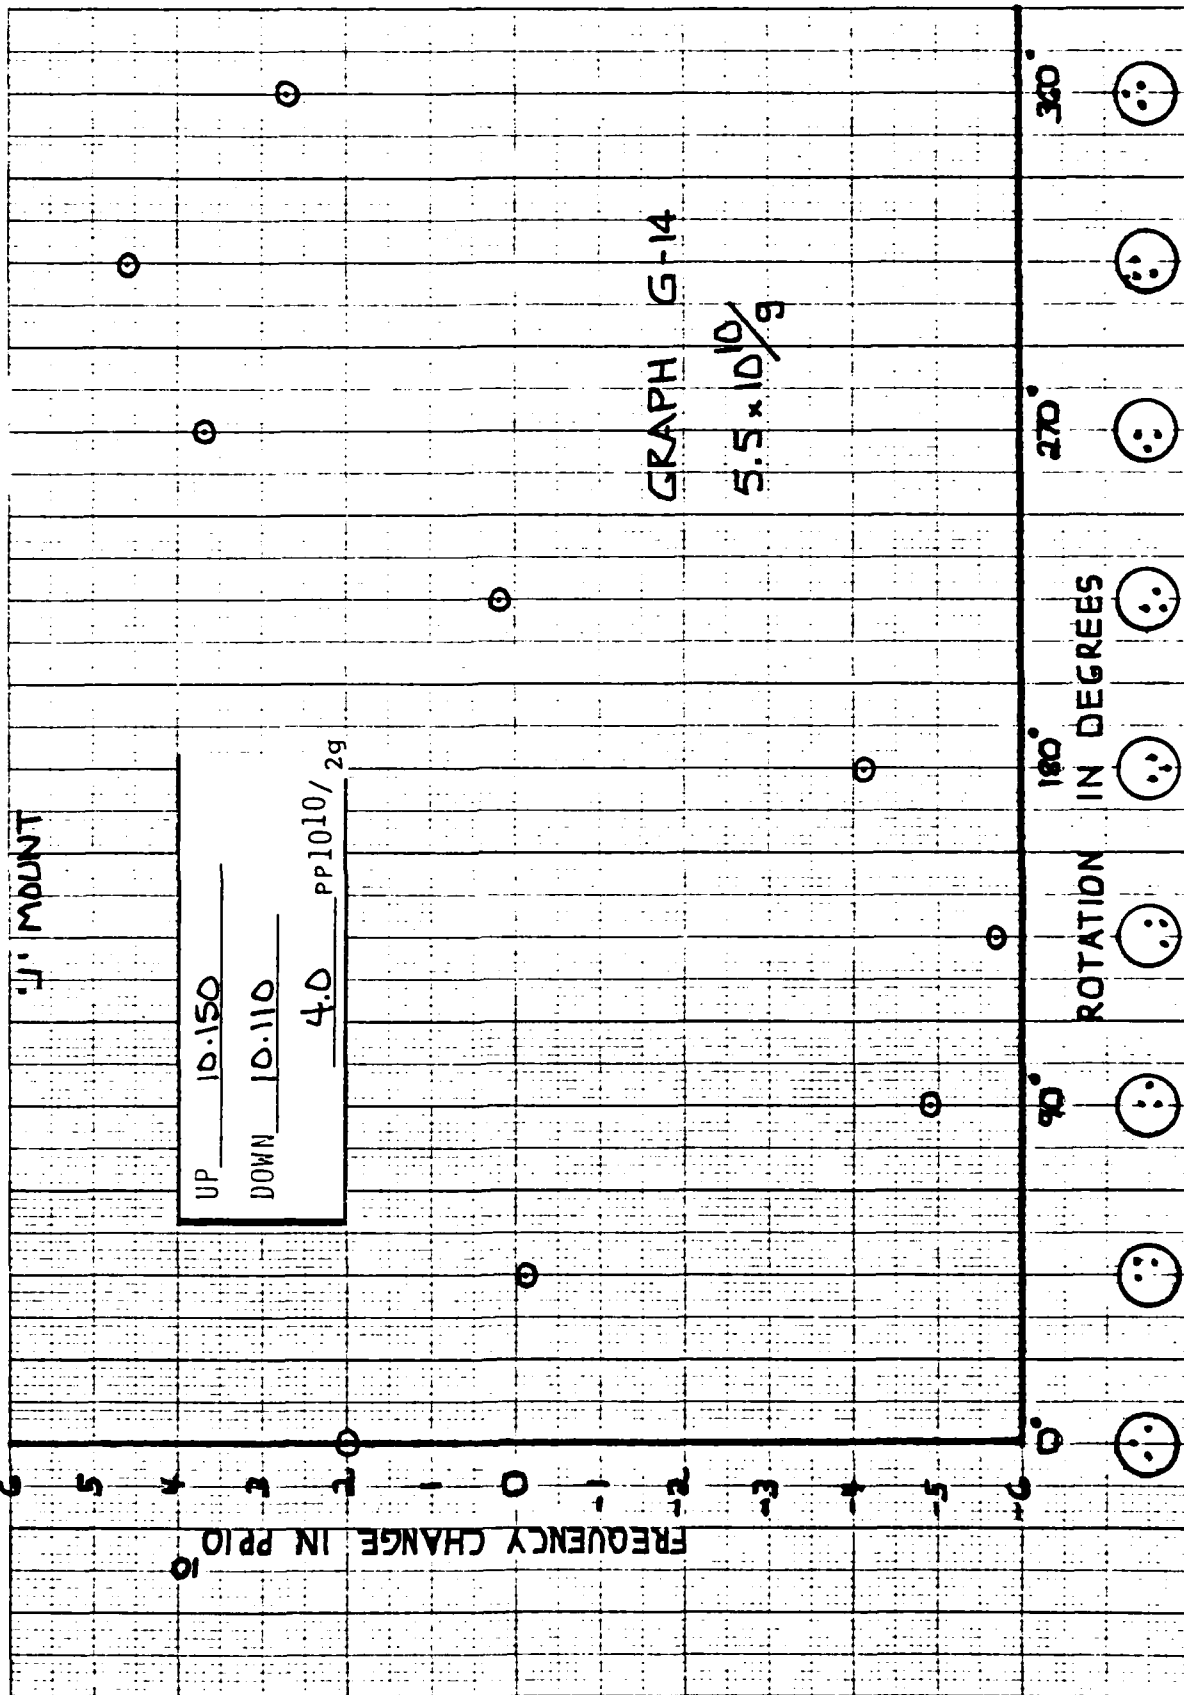

SERNO. 3803

10.054330/3/SC


DATE 9-5-80

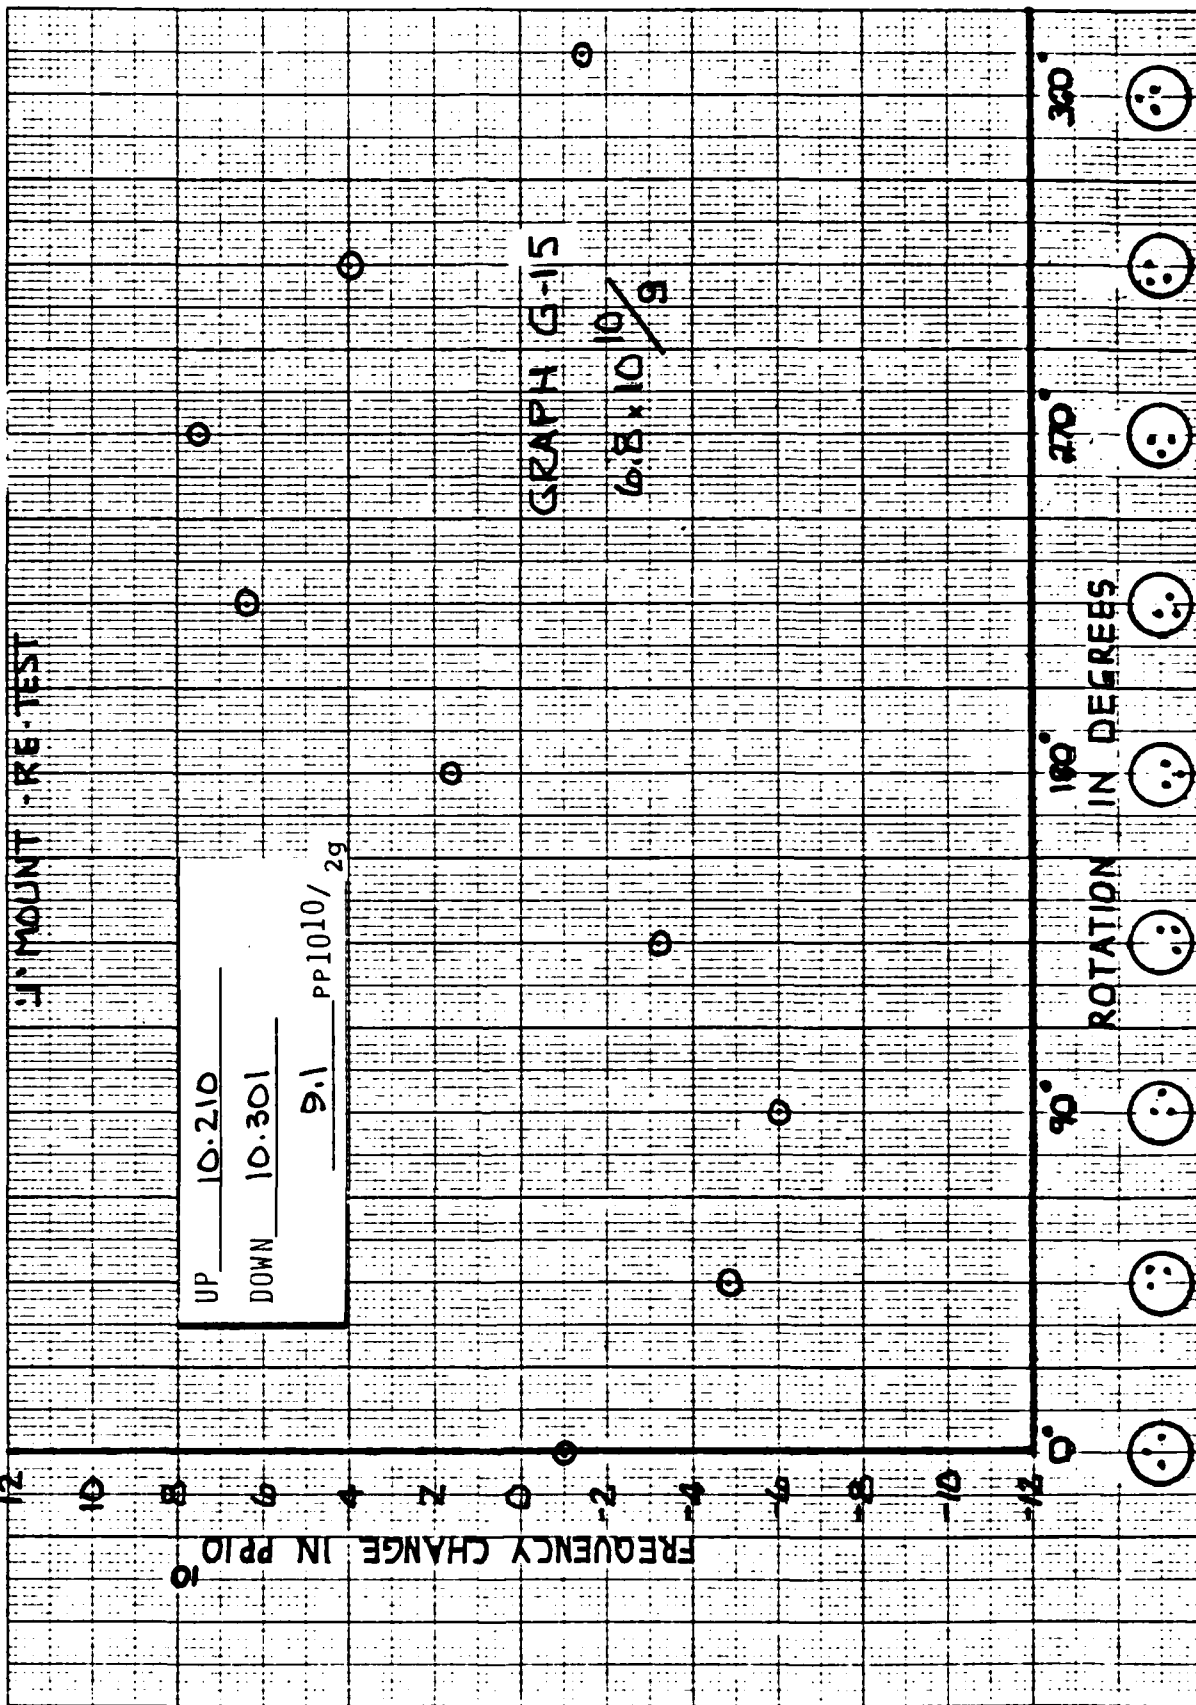

SERNO. 3804

10-054330 3/SC

DATE 9-5-80

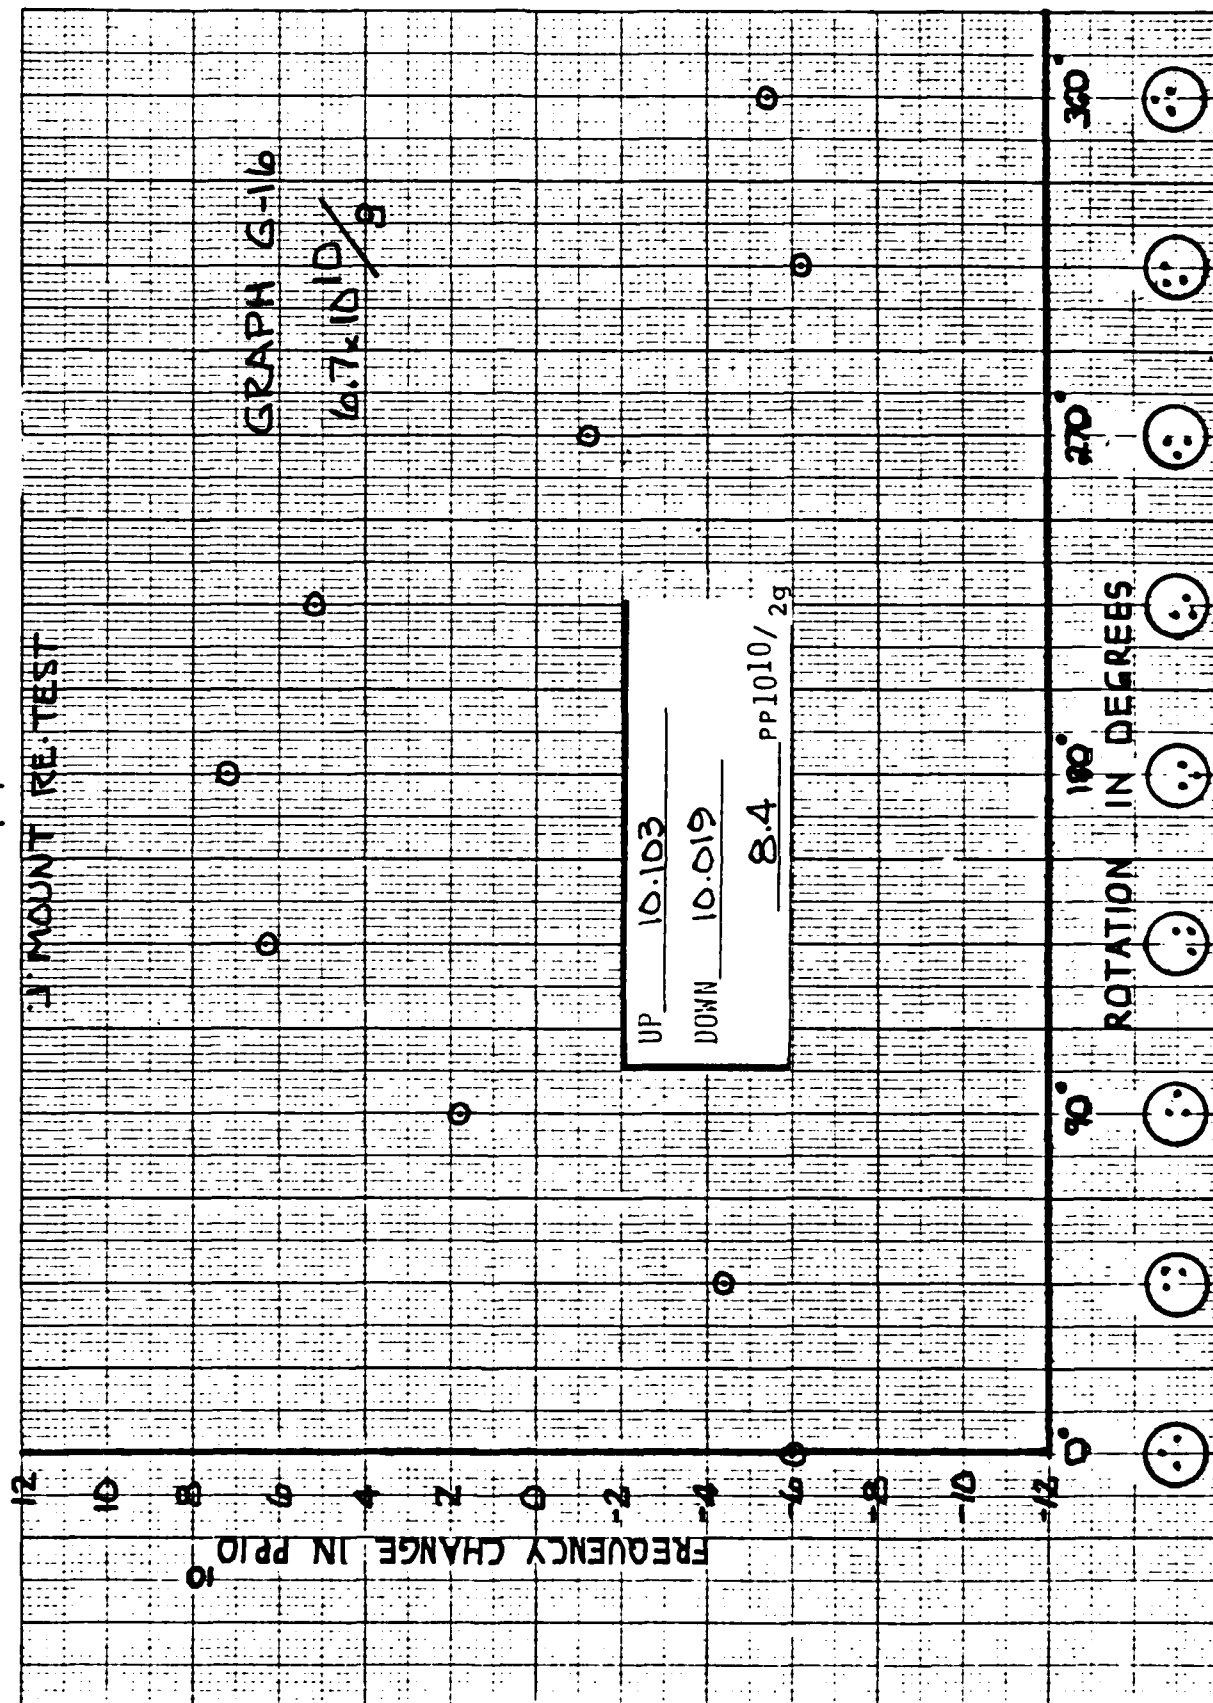



K-E 20 X 20 TO THE INCH • 7 X 10 PP-115  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46 124C

SER. NO. 3807

10.054330/3/SC

DATE 2-5-80

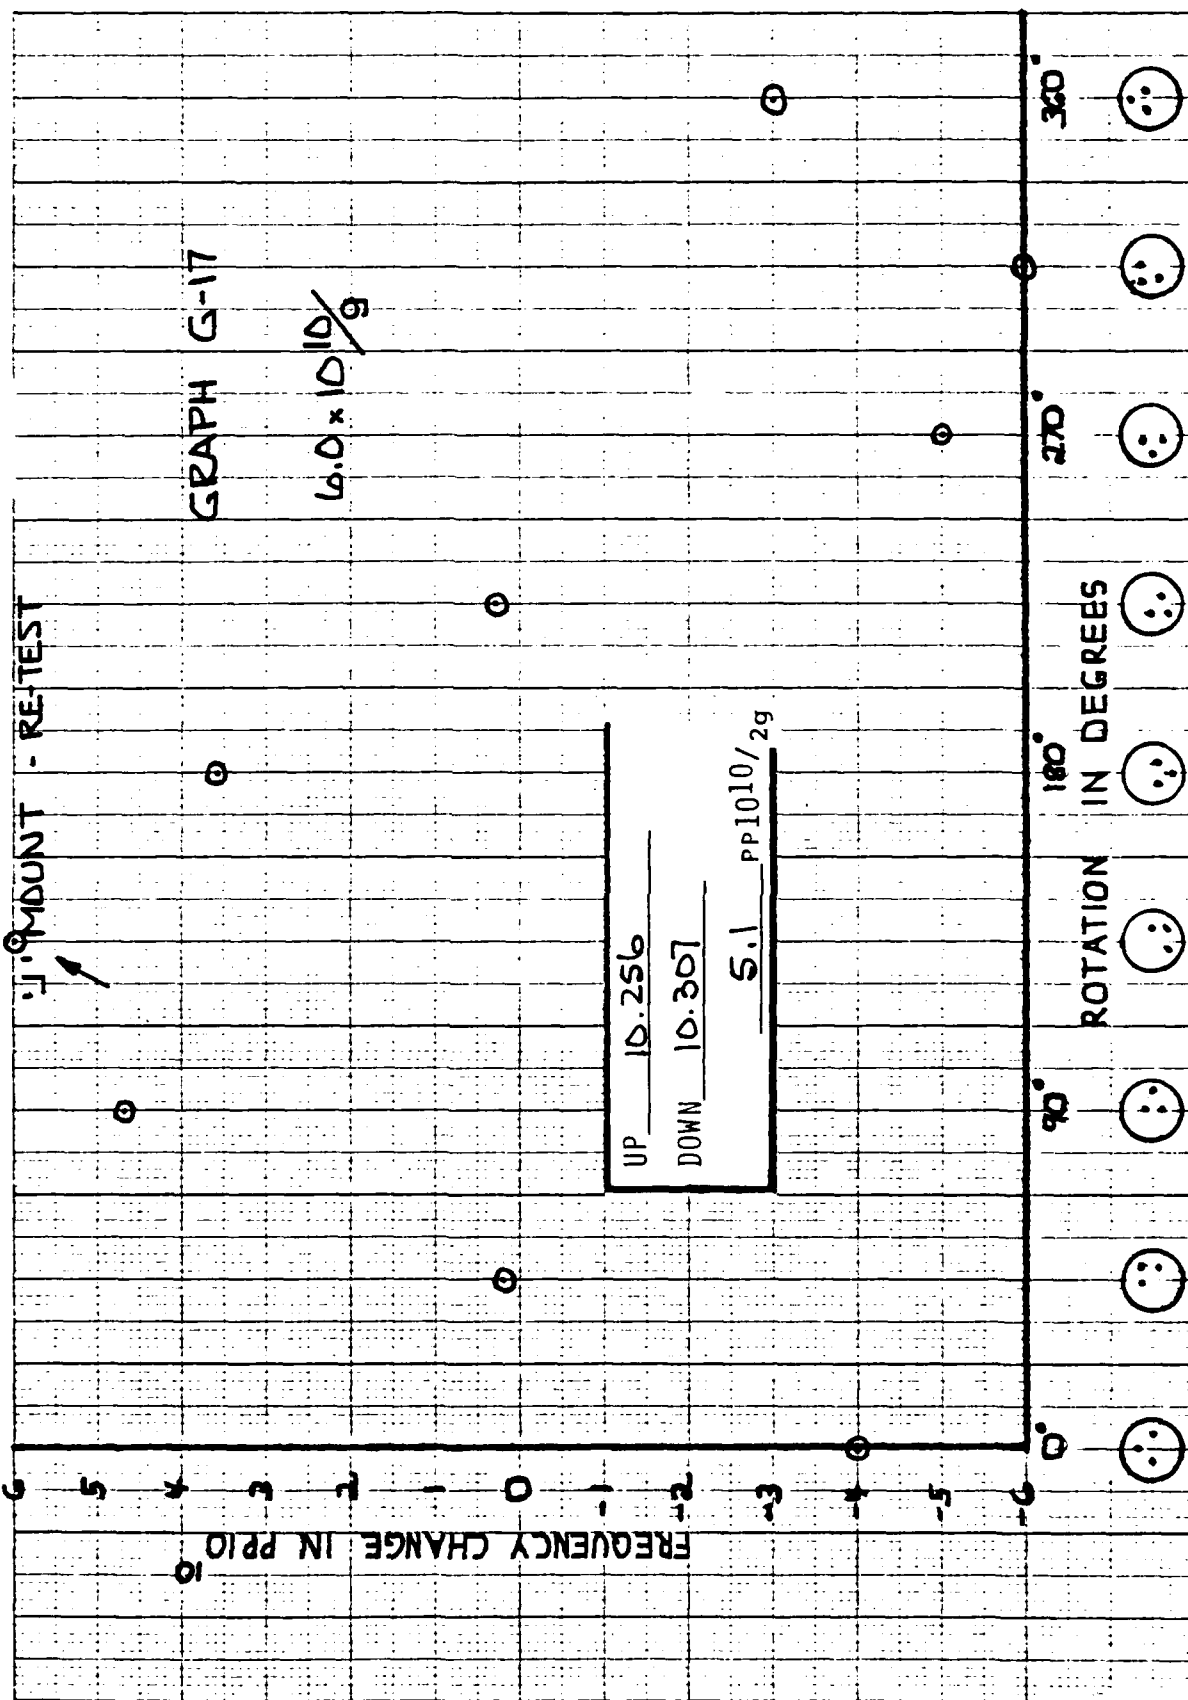


TABLE H-1

## CRYSTAL ASSEMBLY FINAL DATA SHEET

P/N		SPEC:		NOM. FREQ: 10.230400		MHZ		PROJ: 7554		FSO: 0140B	
S/N	f <sub>s</sub> 25 °C	R <sub>s</sub> n	f <sub>p</sub> 32 pF; 25 °C	Δf (Hz)	C <sub>0</sub> (pF)	C <sub>1</sub> x10 <sup>-16</sup> F x10 <sup>4</sup>	Q	T.O. TEMP.	SPURS dB	n	f <sub>p</sub> 25 °C
4181	10.230266	80	10.230286	20	4.5	1.43	1.36	68		10.230	438
4182	10.230306	80	10.230326	20	4.5	1.43	1.36	63		10.230	443
4183	10.230276	75	10.230298	22	4.5	1.57	1.32	66		10.230	430
4184	10.230342	75	10.230364	22	4.5	1.57	1.32	73		10.230	529
4185	10.230346	75	10.230366	20	4.5	1.43	1.45	63		10.230	461
4186	10.230264	80	10.230284	20	4.5	1.43	1.36	72		10.230	432
4187	10.230386	75	10.230406	20	4.5	1.43	1.45	~50		10.230	479
4188	10.230290	75	10.230312	22	4.5	1.57	1.32	68		10.230	440
4189	10.230296	75	10.230316	20	4.5	1.43	1.45	65		10.230	418
			4184 TUNED IN	ERROR	+100 HZ					-	
			ALL CRYSTALS	TUNED	@ 85 °C						
			AT 85 °C ALL	CRYSTALS EXCEPT	4184	ARE	10.230400 ± 10 HZ				


K-E 20 X 20 TO THE INCHES 7 X 10 IN THE  
NEUFEL & ESSER CO. MADE IN U.S.A.

240

SERNO. 4182

10.230400/3/SC

DATE 9-5-80

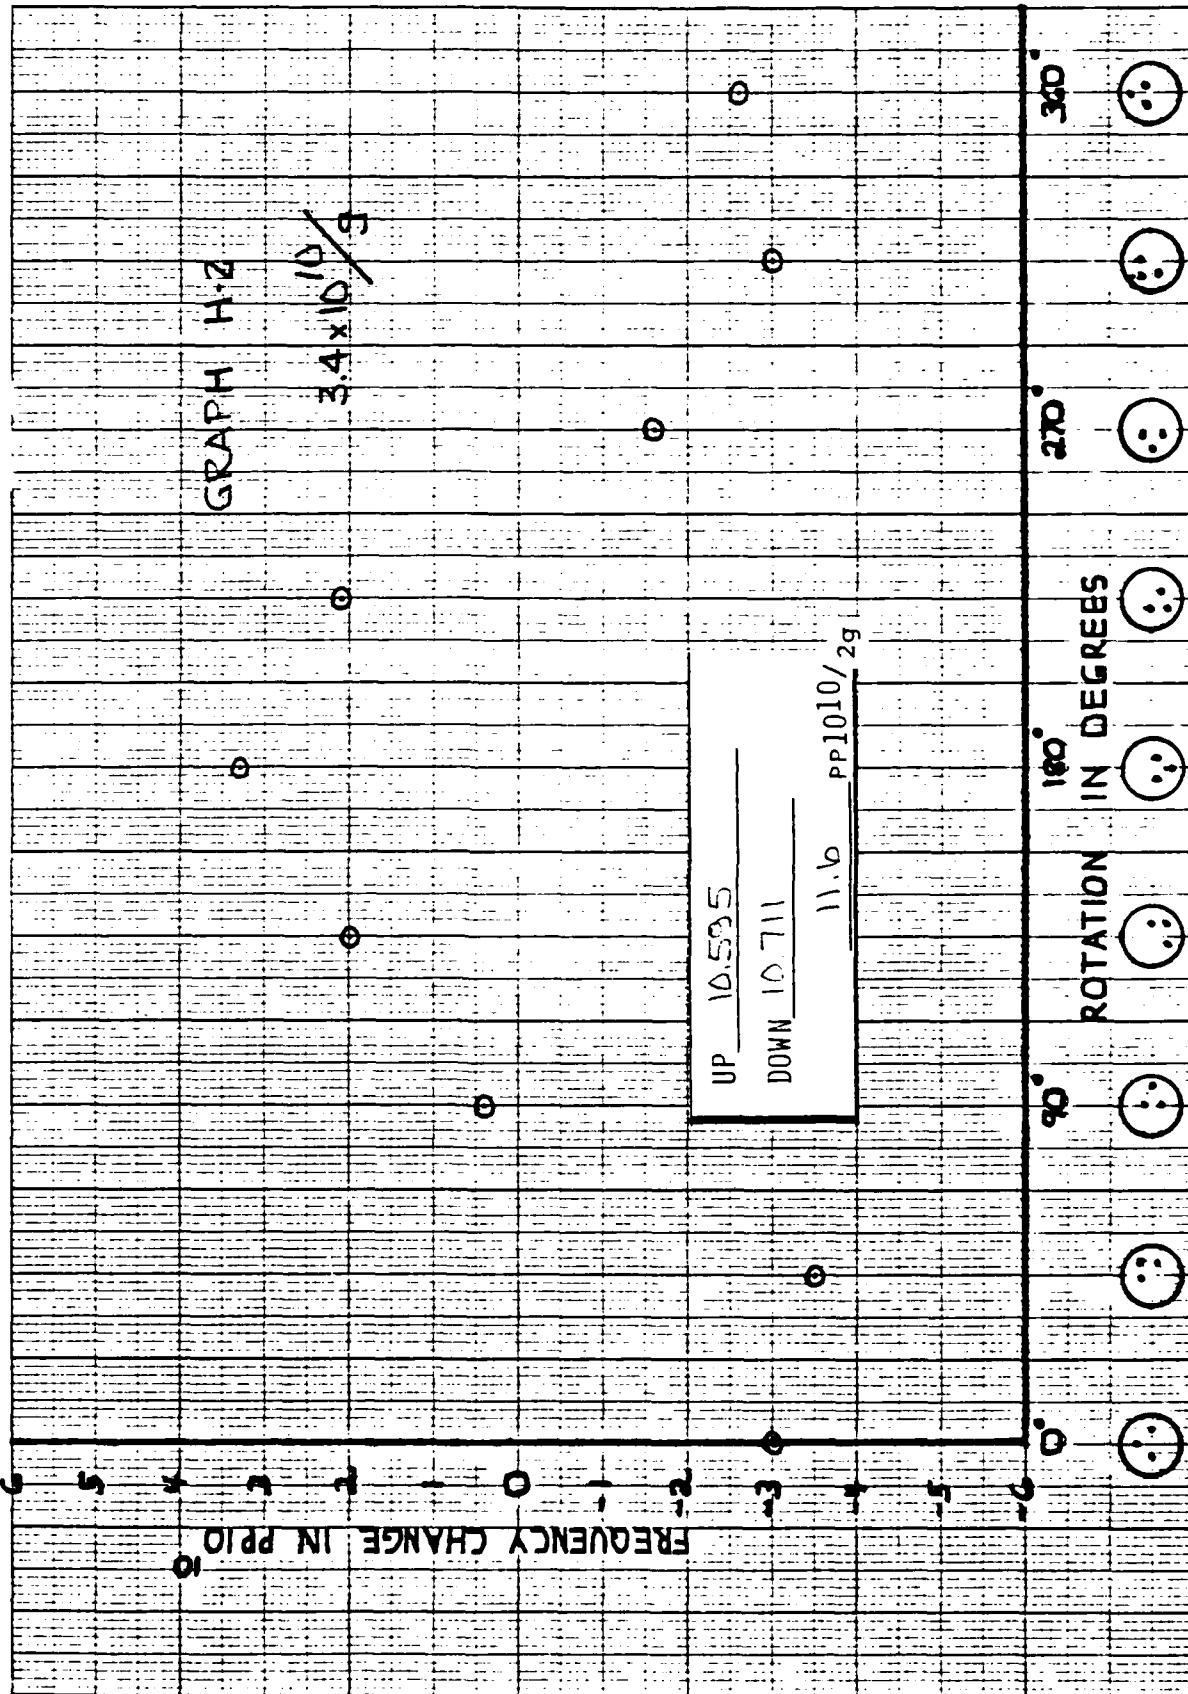


K-E 20 X 20 TO THE INCH • 7 X 10 IN. H.S.  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46 124C


SER. NO. 4184

10.230400/3/SC

DATE 2-5-80

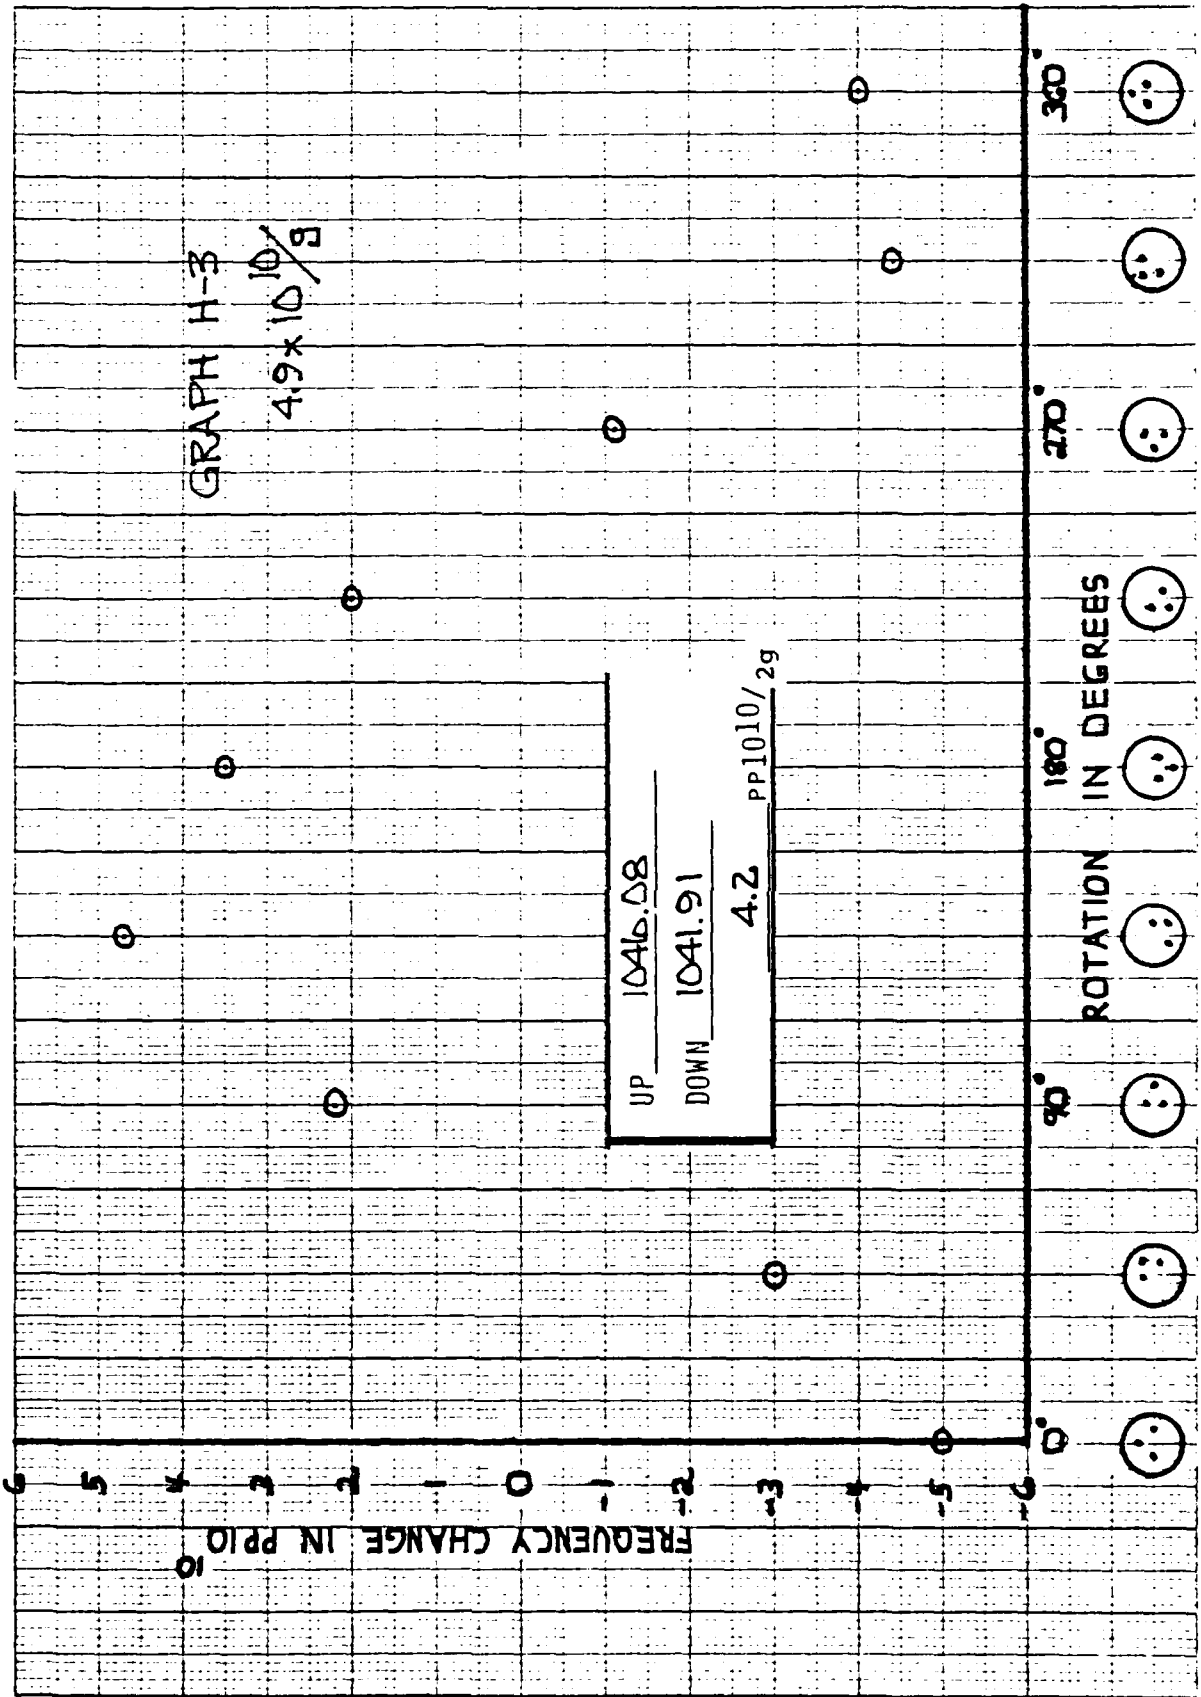


SERNO. 4185      10.230400/3/SC      DATE 9/5/80

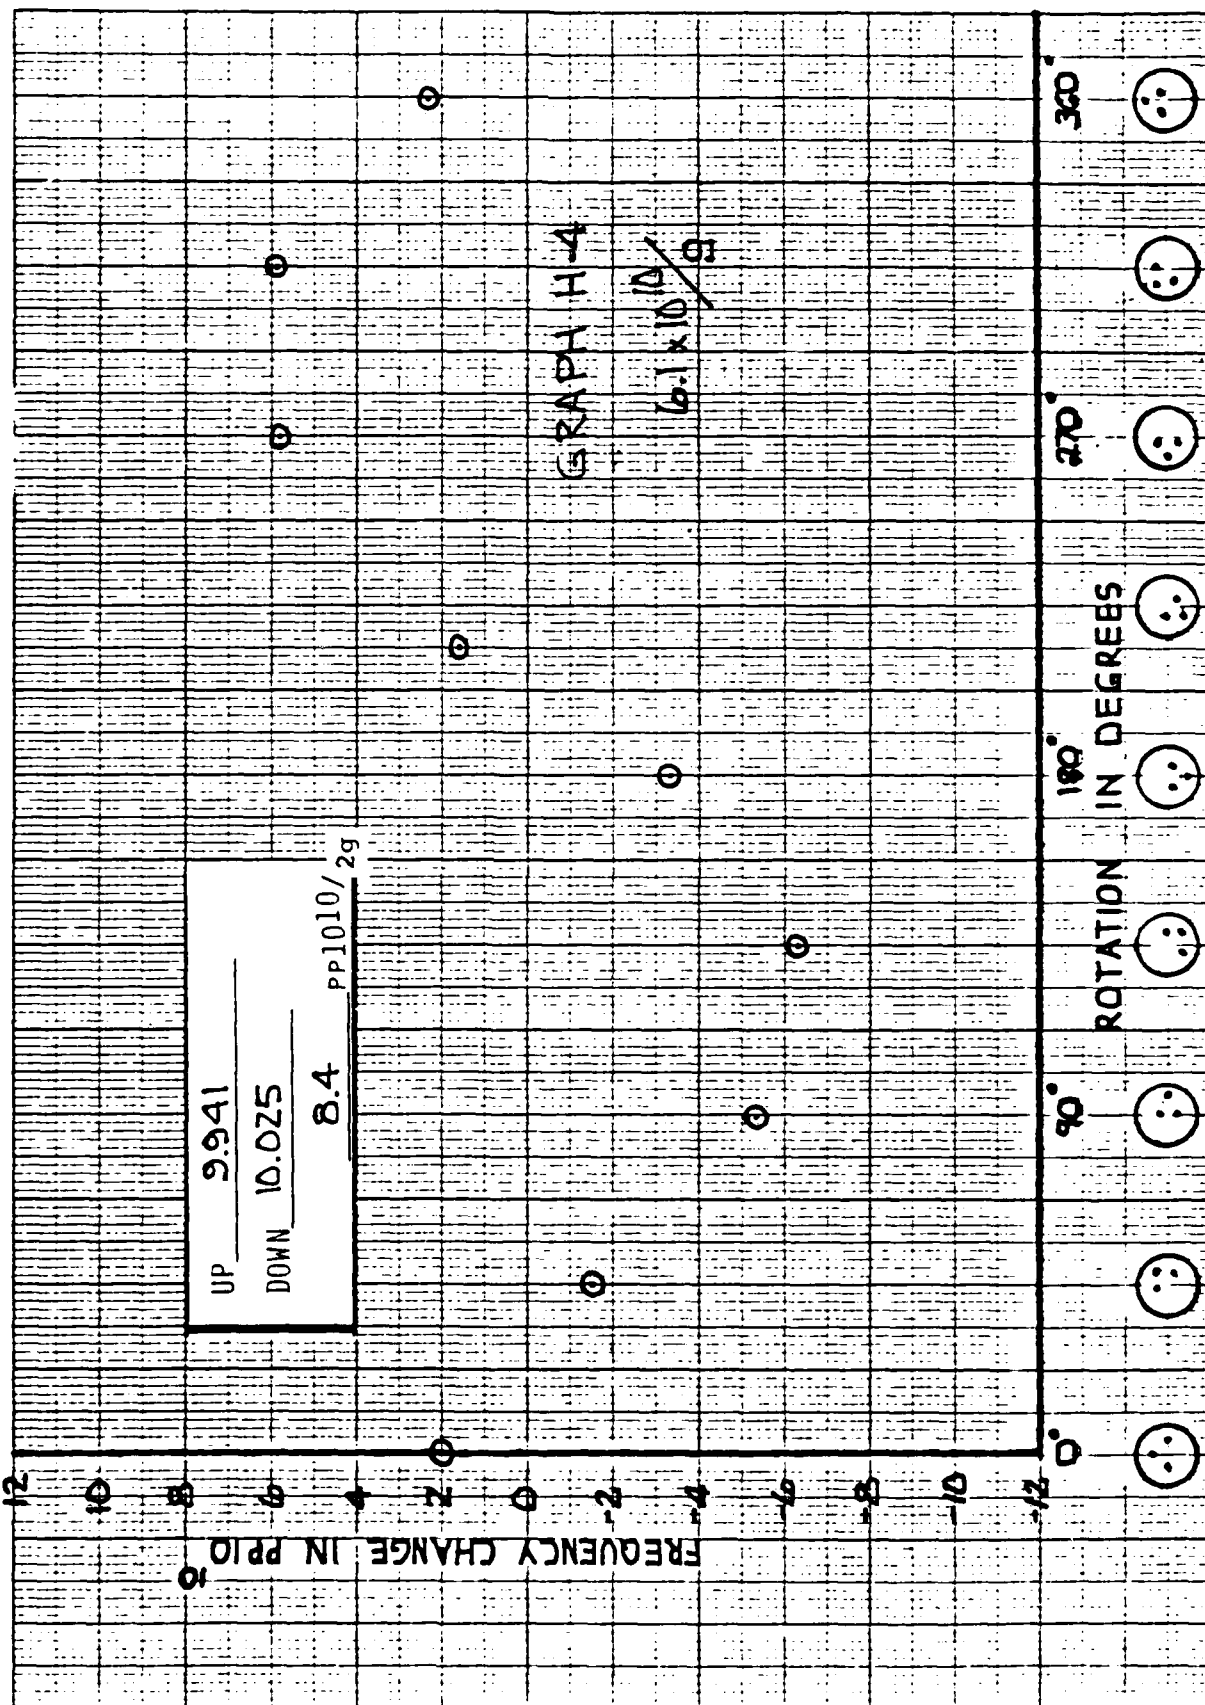







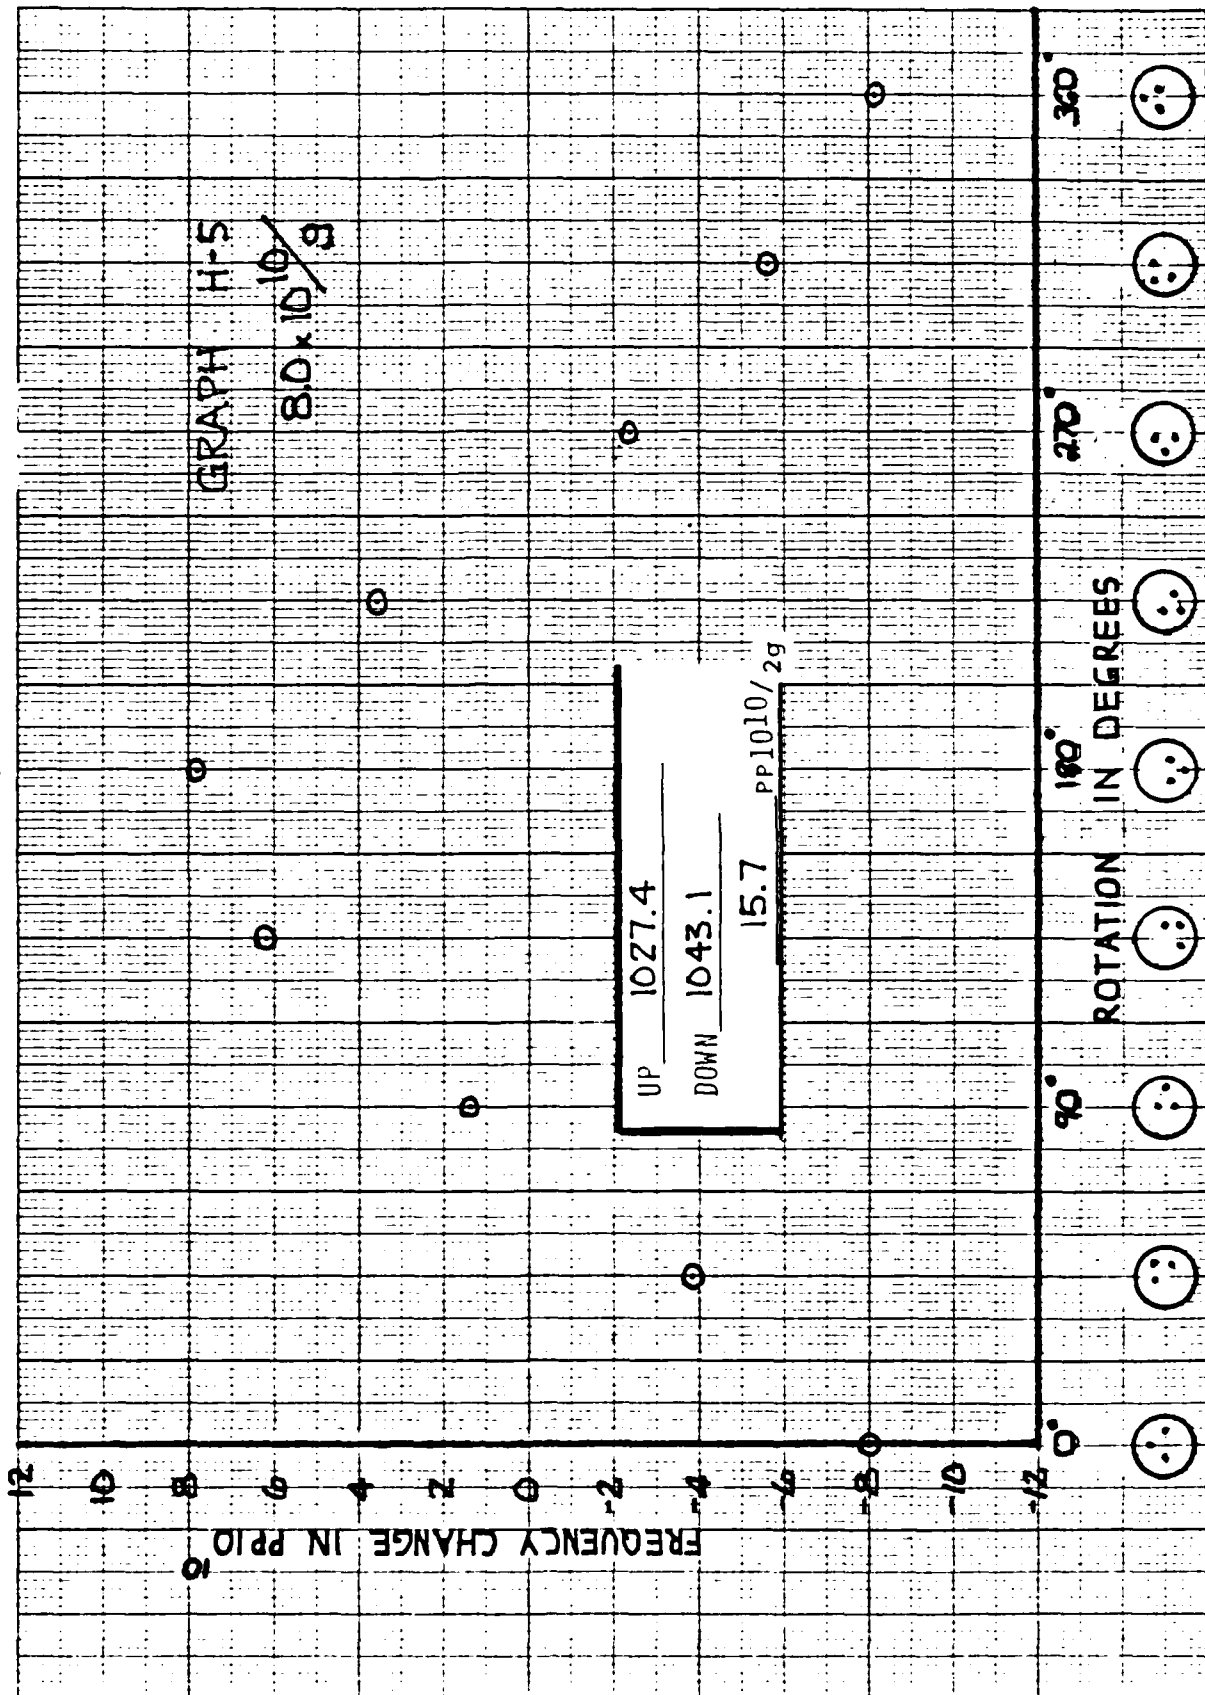






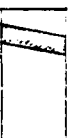

SERNO. 4187

10230400/3/SC

DATE 9-5-80



FIGURES J1 - J5

SERNO.	FIG	BOND LOCATION		
		LEFT	CENTER	RIGHT
4205	J-1	1  5	5  2	2  5
4207	J-2	0  1	2  3	0  0
4208	J-3	0  0	1  0	1  0
4142	J-4	2  1	2  3	1  2
4144	J-5	2  2	1  1	0  0

CENTER BOND MADE ON -X FLAT.

THE RATINGS AT EITHER SIDE OF EACH FIGURE  
DETERMINE THE RELATIVE AMOUNT OF "SQUASH  
OUT" OF THE GOLD RIBBON DURING BONDING.

<u>RATING</u>	<u>% SQUASH OUT</u>
0	100%
1	80%
2	60%
3	40%
4	20%
5	5%

TABLE J-6

SUMMARY OF 'g' SENSITIVITY DATA ON 5.000000 MHZ, FIFTH OVERTONE  
SC CUT CRYSTALS


SERNO	ACCELERATION	
	RADIAL WORST CASE (PP10 <sup>10</sup> /g)	THICKNESS (UP/DOWN) (PP10 <sup>10</sup> /g)
4205	2.6	0.4
4207	3.3	0.7
4208	2.7	0.8
4142	5.1	1.9
4144	4.5	1.5



K-E 20 X 20 TO THE INCH 7 X 10 INCHES  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46 124C

SERNO. 4205 5.0M/5/SC DATE 7-22-80

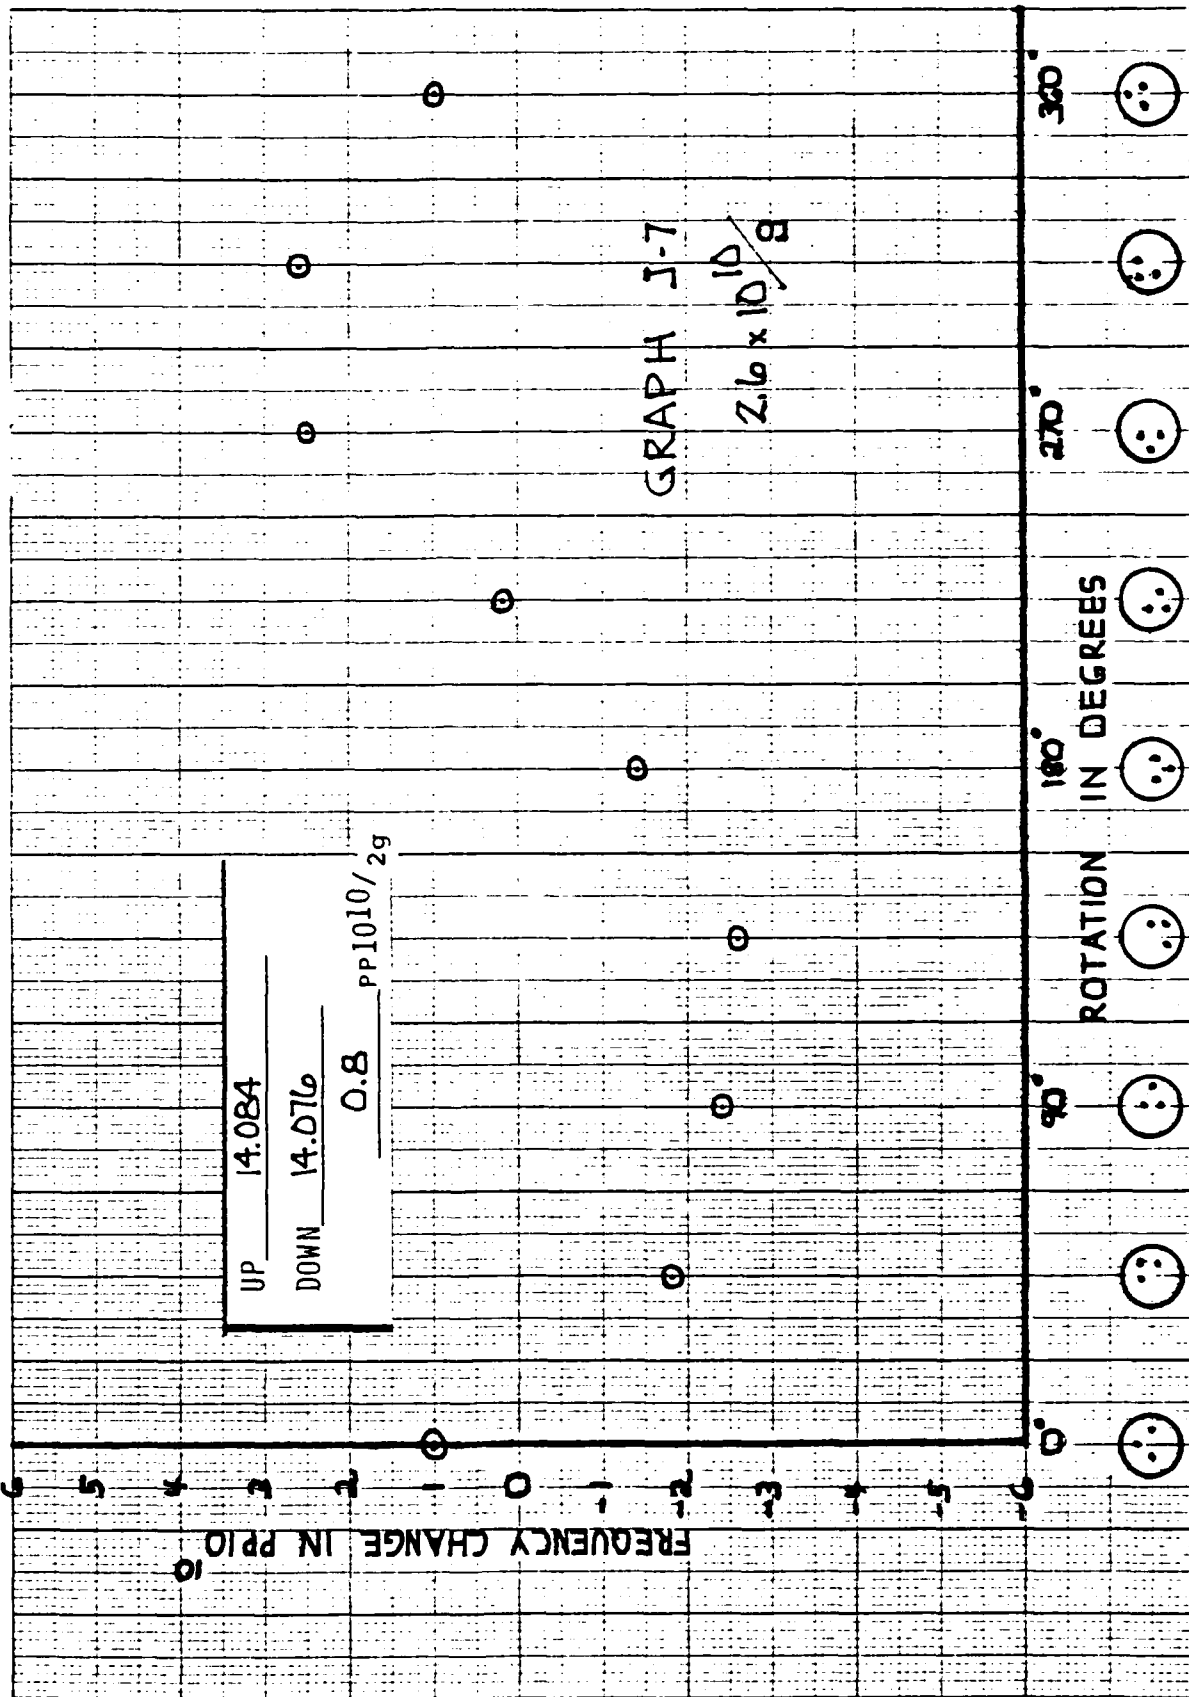


K-E 20 X 20 TO THE INCHES 1 X 10 PER MIN.

46124C

DATE 8-26-80

5.0/5/SC


SERNO. 4207

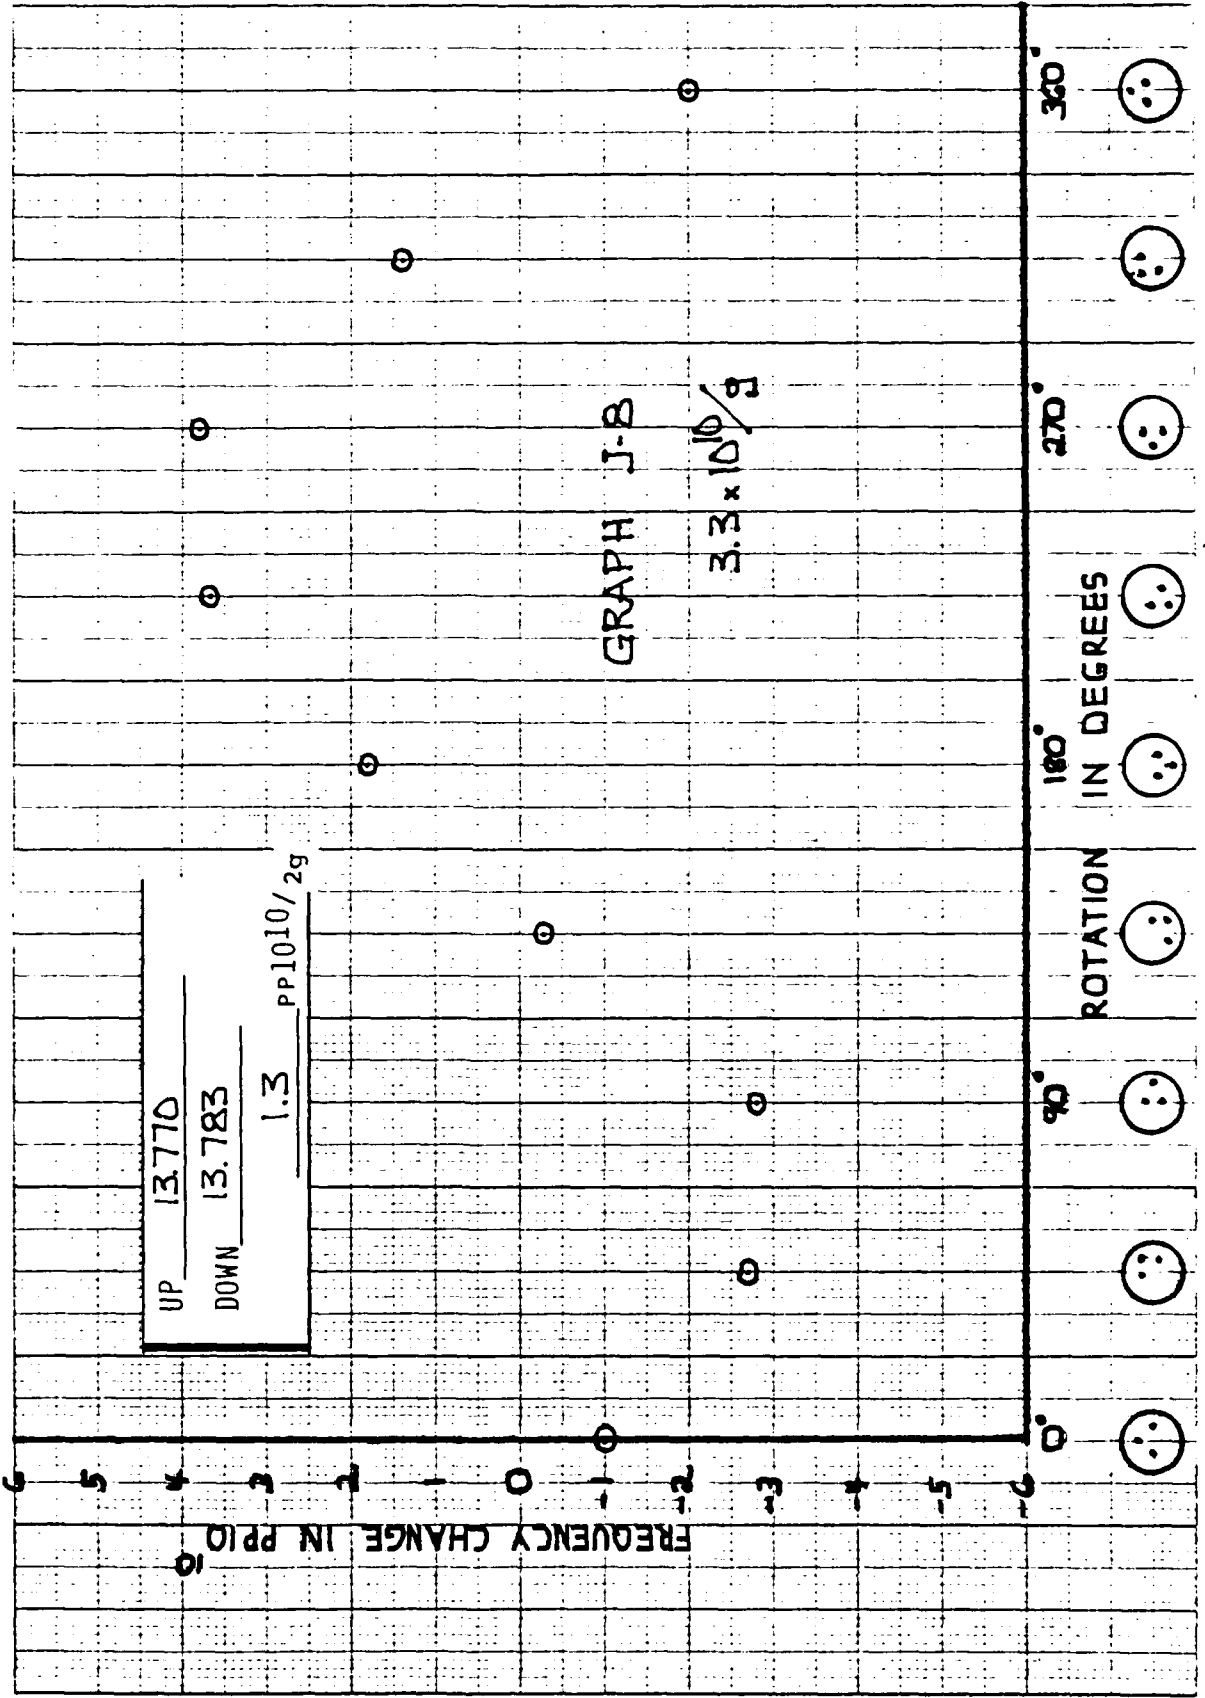

K-E 20 X 20 TO THE INCH 7 X 10 PER INCH  
KRIEGER & ESSER CO. MADE IN U.S.A.

46 124C

SERNO. 4208 5.0/5/SC DATE 8-26-80

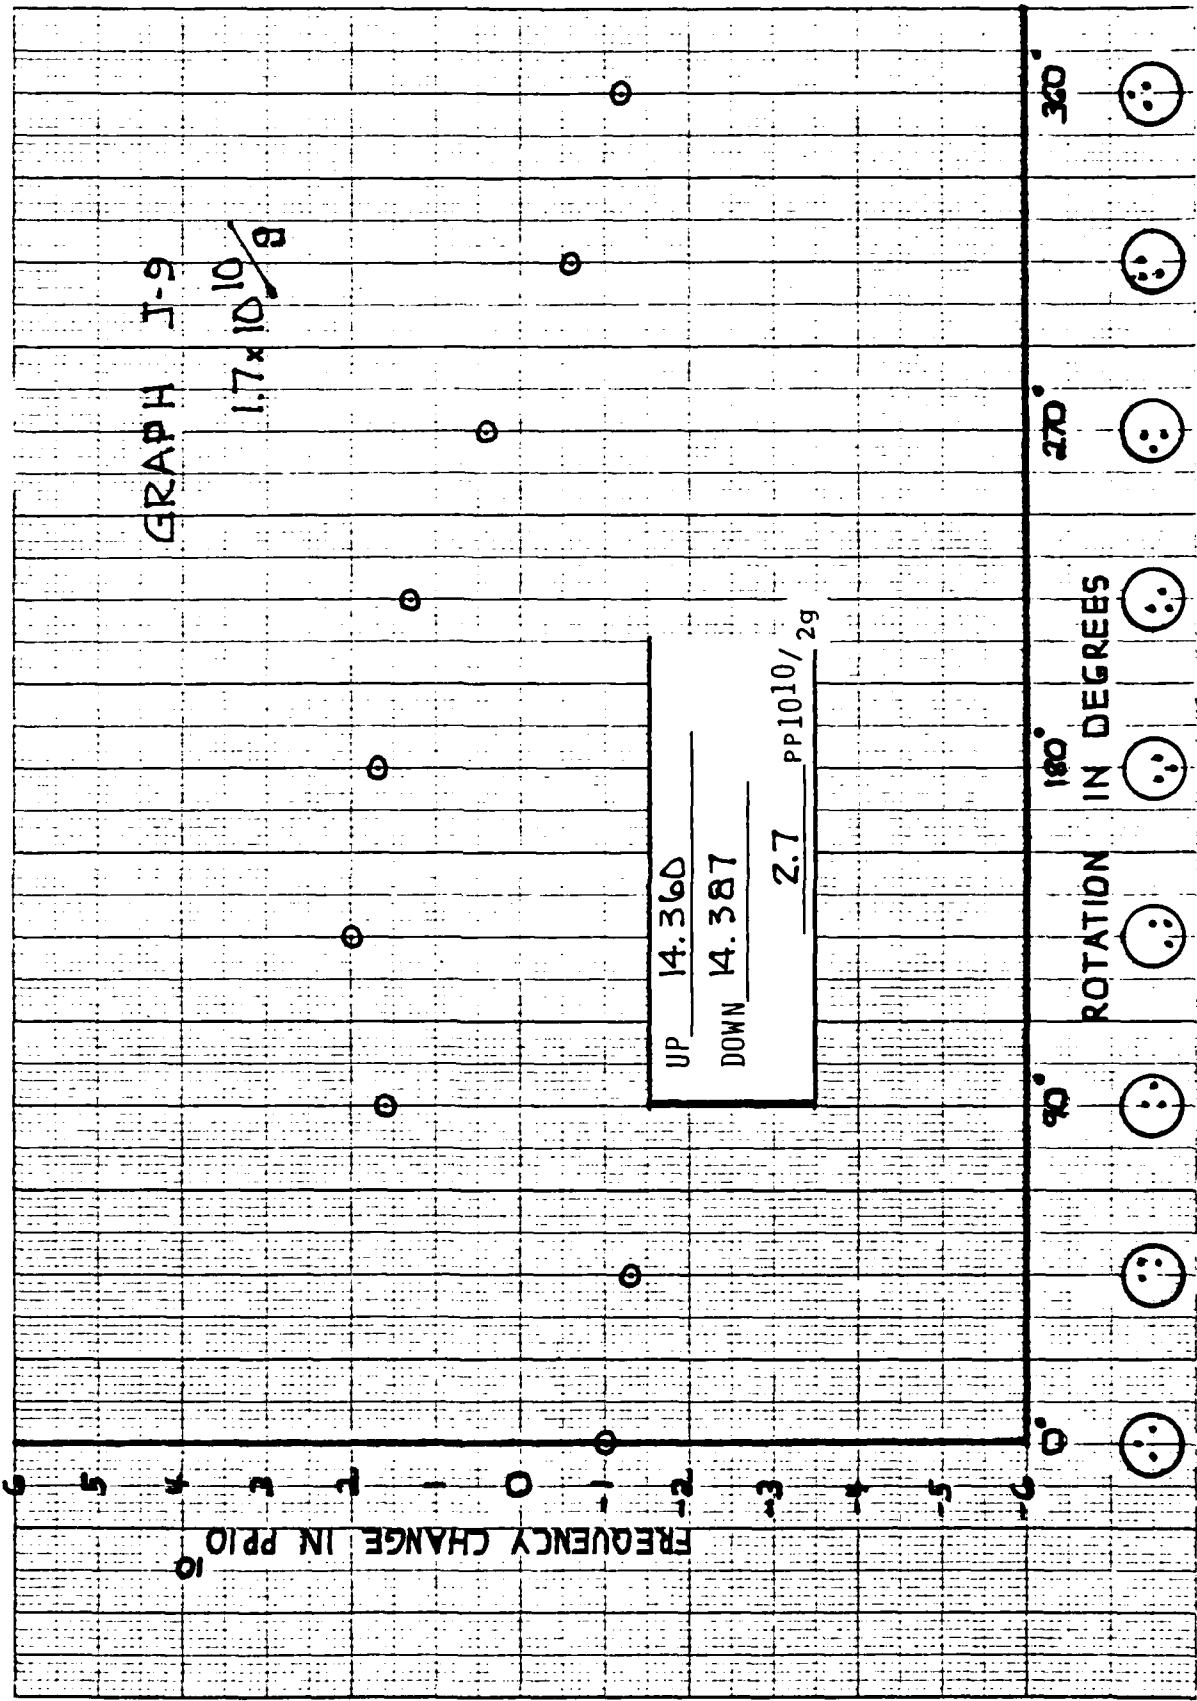


K-E 20 X 20 TO THE INCHES / X 10 IN. 100.  
KEUFEL & ESSER CO. MADE IN U.S.A.

46 124C

SERNO. 414Z

5.0/5/SC

DATE 8-26-80

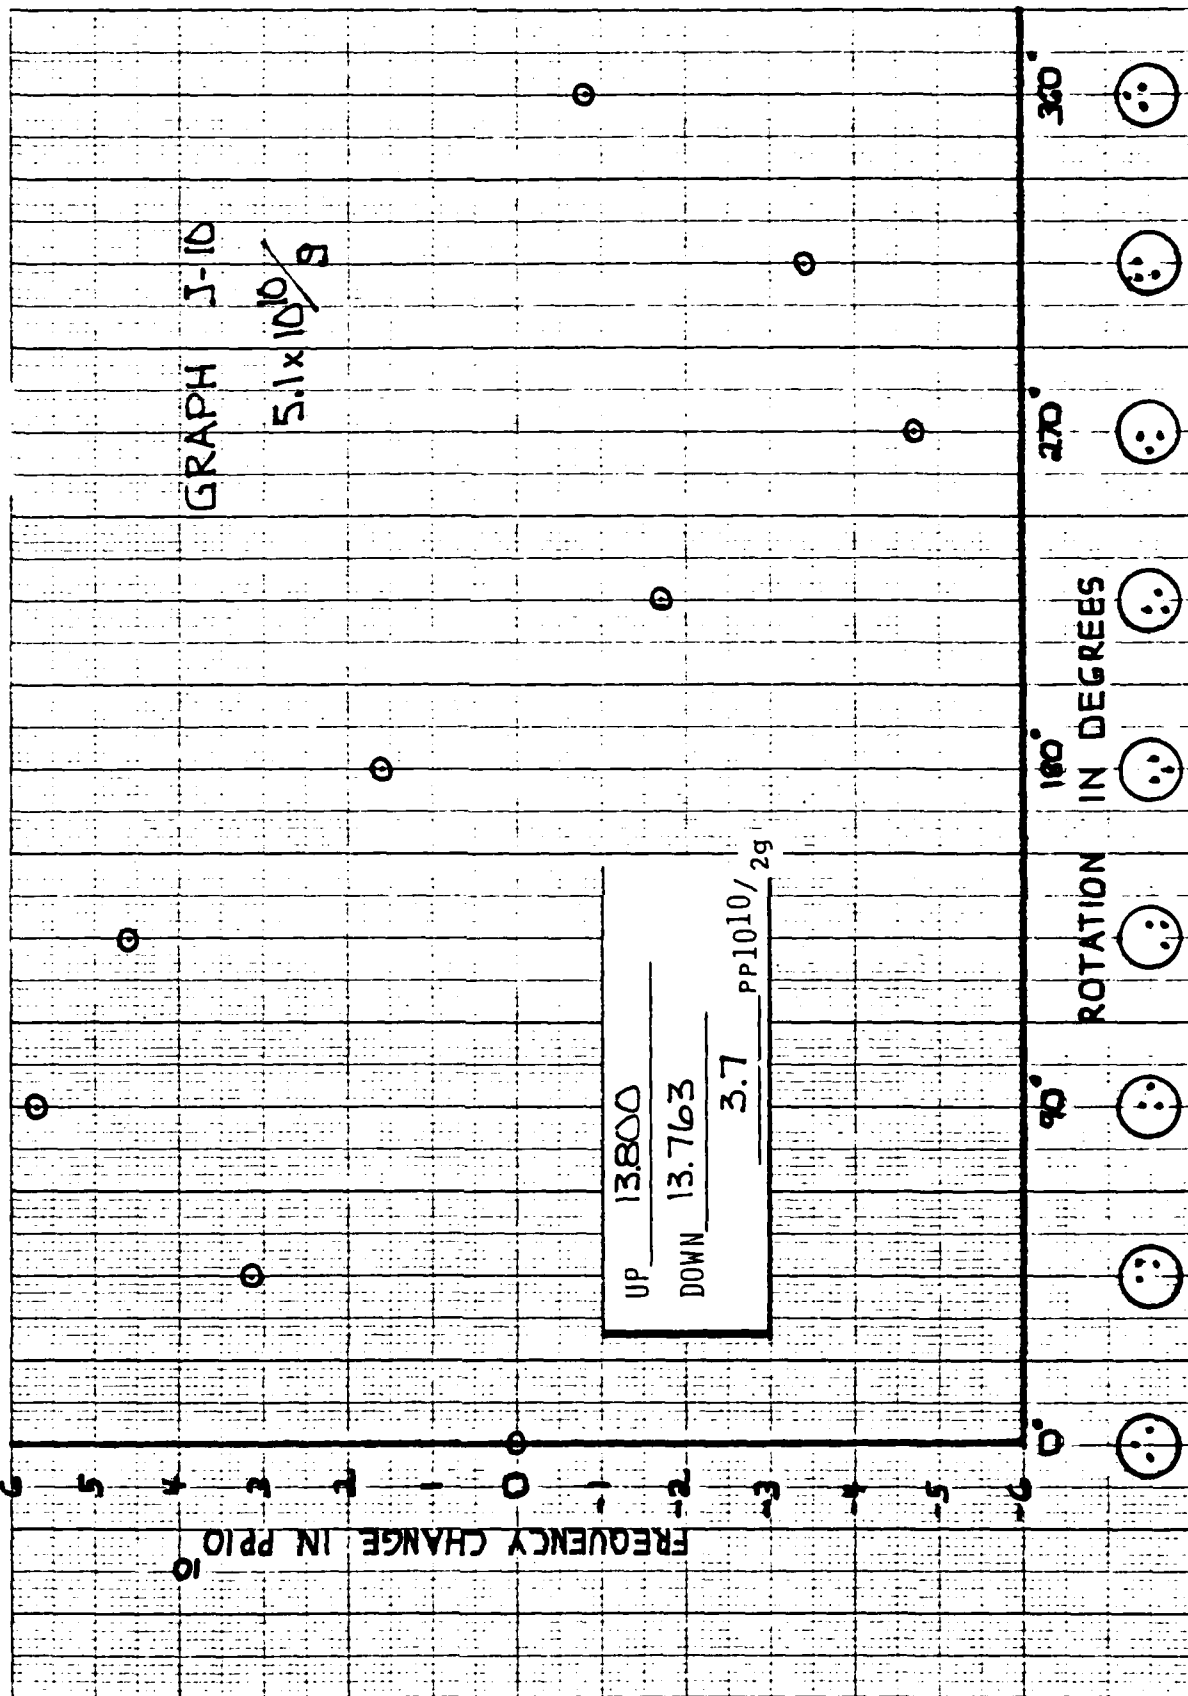

SERNO. 4144

5.0/5/SC

DATE 8-26-80



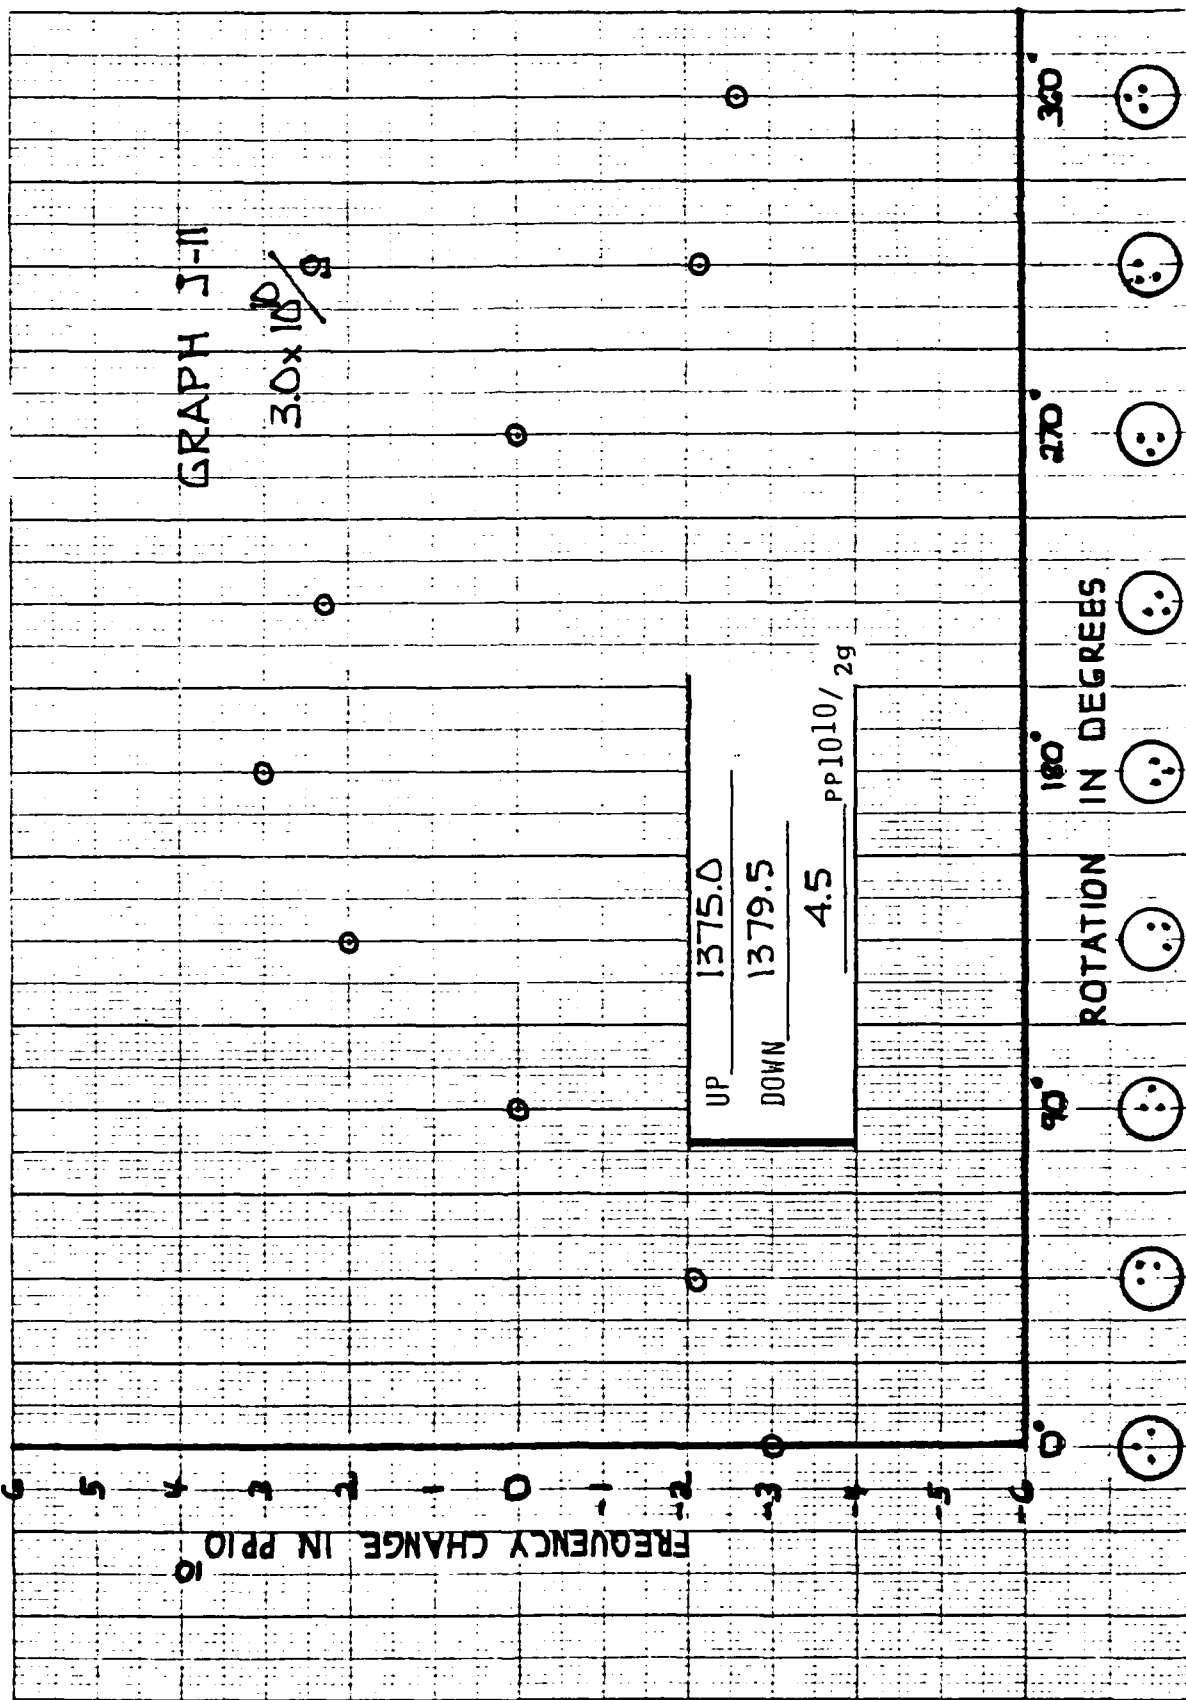


FIGURE K-1  
HOT TUNER HEAD

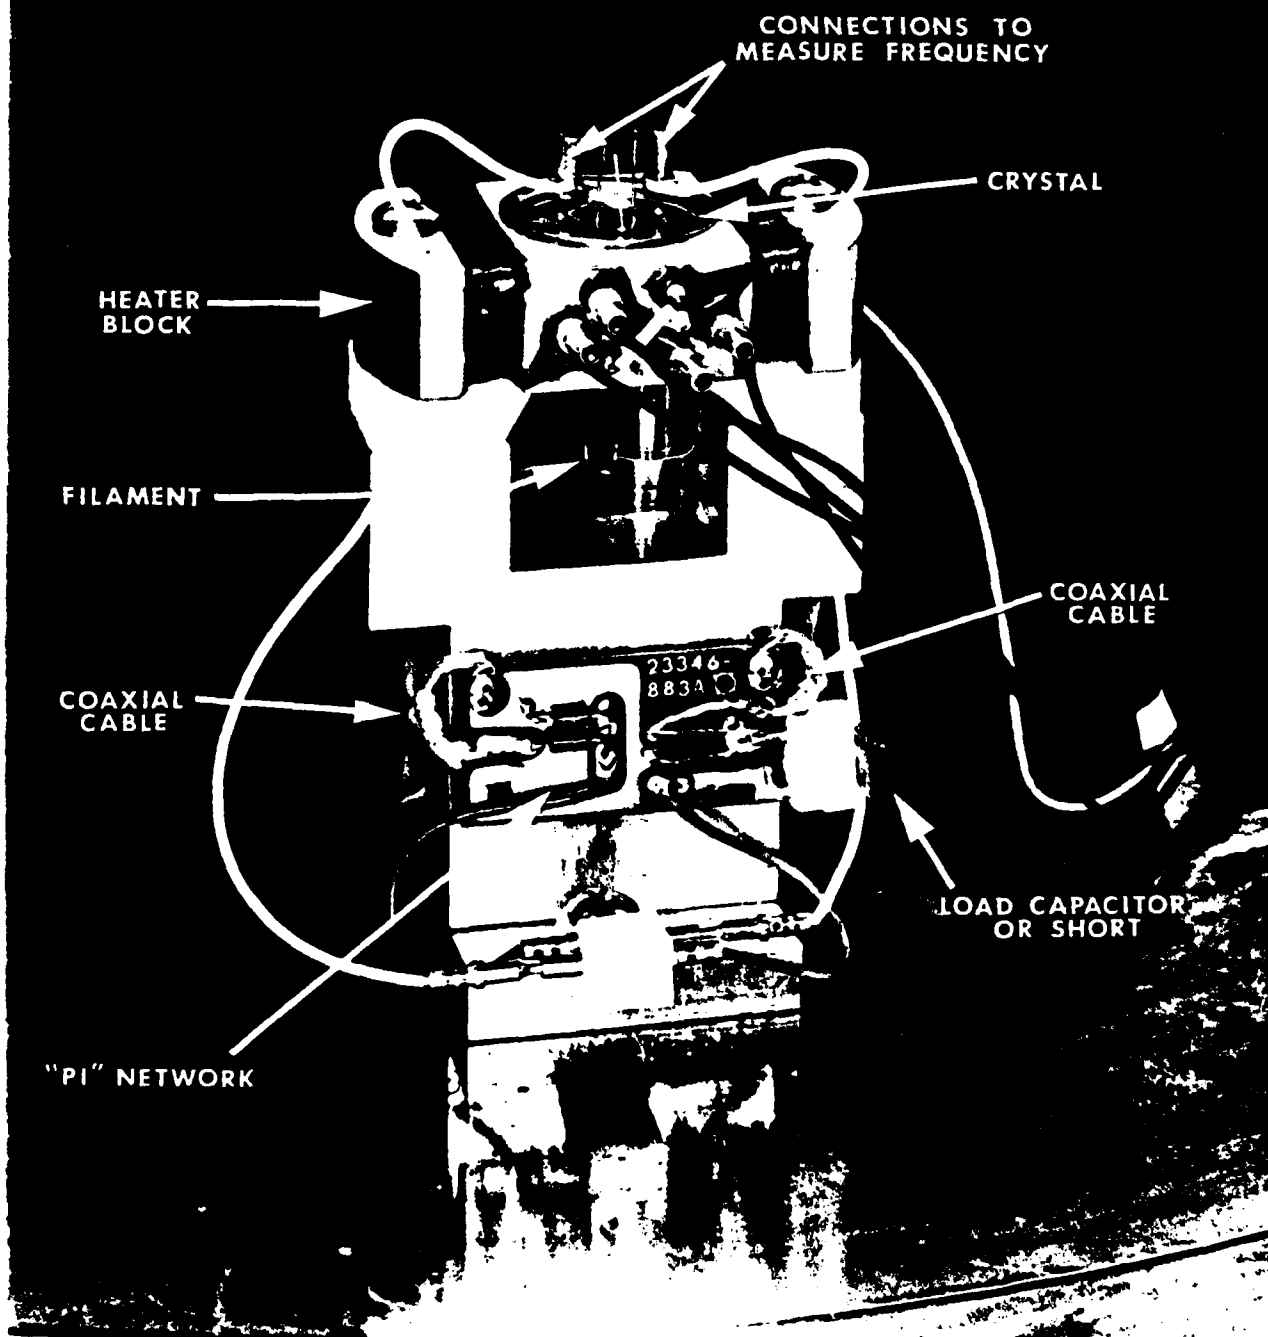

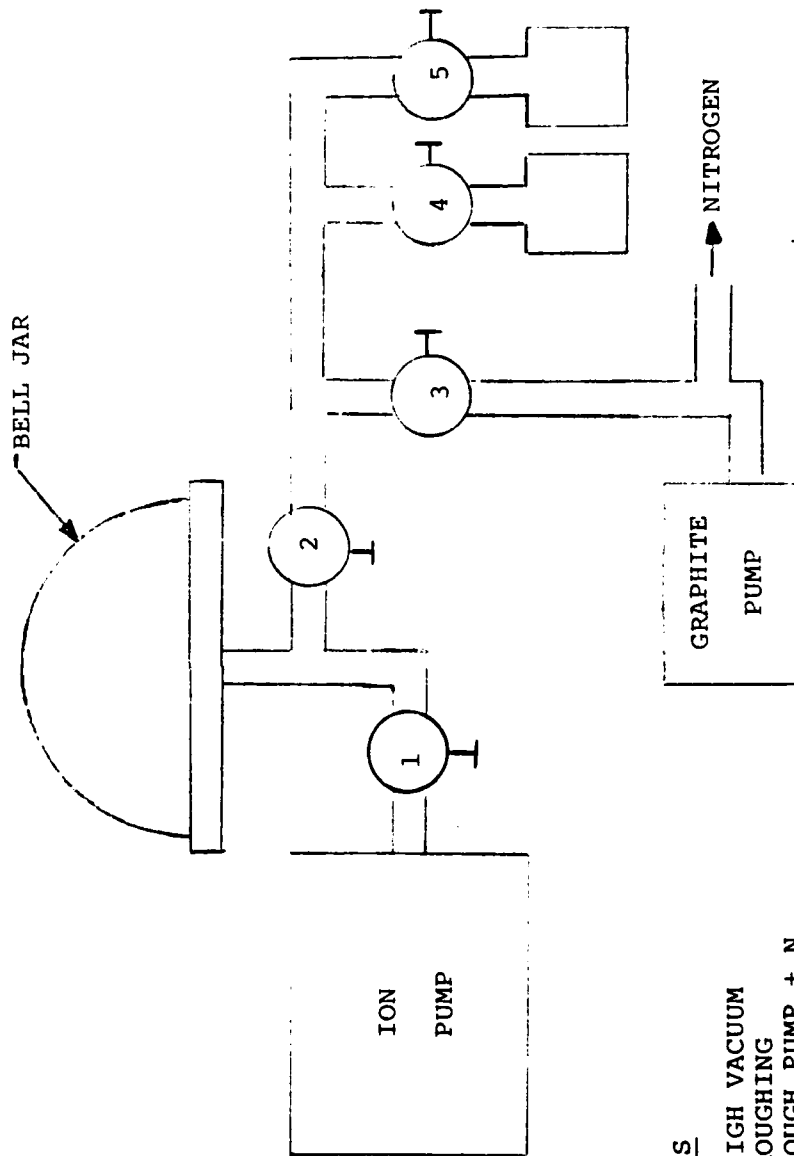

VALVES

- 1 - HIGH VACUUM
- 2 - ROUGHING
- 3 - ROUGH PUMP + N<sub>2</sub>
- 4 & 5 - VAC-SORB PUMPS

FIGURE K-2

HOT TUNER LAYOUT

APPENDIX I

"FURTHER DEVELOPMENTS ON SC CUT CRYSTALS"

B. Goldfrank  
A. Warner



## FURTHER DEVELOPMENTS ON 'SC' CUT CRYSTALS

Bruce Goldfrank and Art Warner

Frequency Electronics, Inc.  
New Hyde Park, New York 11040

### Introduction

'SC' cut crystals have found their way into many new designs. The applications, though many and varied, center around the requirements of good 'g' sensitivity, resistance to radiation, fast warmup and good temperature characteristics. The temperature and strain effects on the 'SC' cut crystal are such that a large improvement over AT cut crystals is possible. In particular, data will be given on the improvement in radiation resistance of the 'SC' over the 'AT'.

In order to produce a successful SC crystal unit, i.e., one that exploits this design to the fullest, significant changes in design philosophy, design parameters, measuring techniques, testing methods, and production tools must be made. Three of the more important changes involve angle control prior to final lapping, angle measurements, and frequency adjustment. Where low 'g' sensitivity is important, the crystal plates must be thermo-compression bonded using small, uniform, very precisely located mounting spots.

### Orientation

That the orientation of the plate must be closely controlled can be understood when we consider the typical AT frequency versus temperature curve. The center of the curve which is the inflection point, is at room temperature, and as the specified operating temperature goes higher, angle control becomes easier. For the SC, the inflection point is near 100°C and as the operating temperature approaches that point the angle control becomes difficult. 70°C to 80°C zero temperature coefficient (ZTC) for the SC cut is like 40°C to 50°C for the AT cut. At 80°C, one minute of arc error can shift the ZTC by 20°C. The benefit is, of course, that once angle control is achieved the temperature curve is much flatter.

Figure 1 shows a quartz bar and the stages of orientation, following the IEEE standard nomenclature,  $YX\psi\theta\phi\psi$ . Visualize a starting plate which is a Y cut, rotate it about the Z axis by the angle  $\phi$  and then rotate it about its new length,  $X'$ , by the angle  $\theta$ . The usual illustrations show the plate rectangular in shape. The final doubly oriented plate is usually shown the same size and shape as the starting plate. However, one can see that if we arrange to saw the


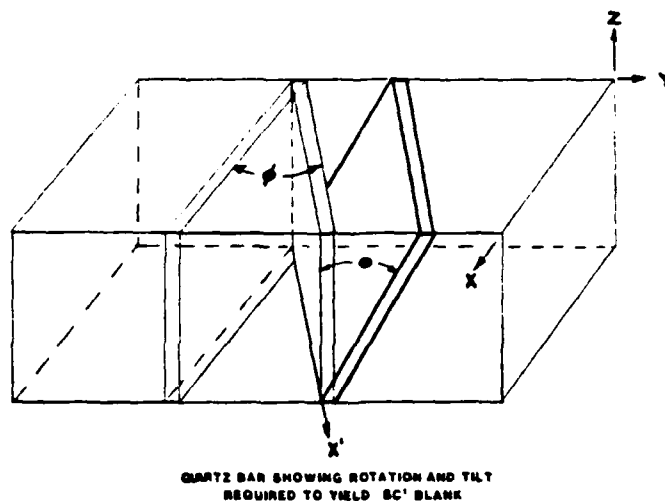


Figure 1. Stages of Orientation for a  $YX\psi\theta\phi\psi$  Blank

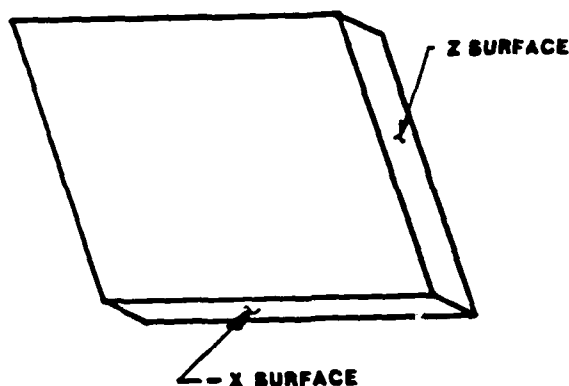

'SC' CUT CRYSTAL BLANK AS CUT FROM BAR

Figure 2. Quartz Blank As Cut From a Y Bar

Proc. 34th Ann. Freq. Control Symp., USAERADCOM,  
Ft. Monmouth, NJ 07703, May 1980.

doubly oriented plate from the bar, the shape will not be rectangular but will be as shown in Figure 2. If this were an AT, usual practice would be to simply mount it in the X-ray with the X axis vertical and compare the crystal face with the nearby 01.1 crystal plane at  $38^\circ 12.7'$ . However, with the SC we must first "undo" the  $\phi$  angle, that is tilt the plate until the 01.1 plane is in a vertical position. The tilt itself is not particularly critical, but now the mounting flat, or if you will, the rotation of the plate about its thickness, becomes extremely critical, since this rotation will now tilt the reference plane.

Our answer to this problem is to highly correct the -X and one Z surface of the quartz bar itself before cutting. This is straight forward since, of course, there are X-ray planes parallel to these surfaces. These highly corrected surfaces are then used not only to orient the bar in the saw, but also to orient the blank in the X-ray goniometer.

Now, which edge surface should we use for the X-ray reference flat? The X' axis lies in the Z surface, some  $14^\circ$  away from using the -X surface as a reference flat and the X' would be the normal choice.

In either case, the equation to convert from the angle measured by the X-ray, to the specified  $\theta$  angle is fairly simple, but it turns out there is an advantage to using the -X surface  $14^\circ$  away from the X' to locate the axis about which the X-ray angle is to be measured.

Figure 3 shows the relationship between the specified  $\theta$  angle for various  $\phi$  angles. The outer curve shows the equation developed by Ballato and Iafrate, and the other two curves show the corresponding angles  $\theta'$  and  $\theta''$  measured by the tilt-back method for both X' axis and the -X surface. We can see that the angle measured using the -X surface, the upper curve, is much closer to the  $38^\circ 13'$  reference plane, even closer than that of the AT. Also we can see the slope is about 1 in 6 or 6' error in measuring  $\phi$  results in 1' error in measuring  $\theta$ . You may also have noticed that for the SC cut at  $\phi = 23^\circ$ , that the  $14^\circ$  shift in reference flat location corresponds to a 5 or 6 degree shift in indicated angle, or almost 2 to 1. Two minutes error in reference flat equals one minute error in angle measurement. To keep this error to an absolute minimum, we use, as indicated earlier, the actual corrected surface generated on the quartz bar before it is cut. In addition we use a special jig that avoids any error due to chipping at the edges. Figure 4 shows the tilt back vacuum jig used with the X-ray. The reference surface makes contact along a line away from the crystal edge. Figure 5 shows this reference contact a little more clearly. Repeatability using this method is about 10 seconds of arc. The  $\phi$  angle is measured by a  $90^\circ$  turn of the quartz blank. No tilt is needed in this case, because the X-ray plane in this position is within  $1\frac{1}{2}$  degrees of vertical, again closer than the AT for this measurement.

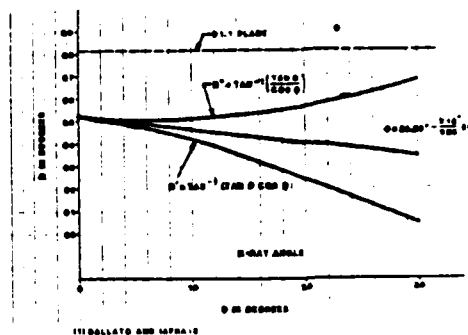


Figure 3. Relationship Between Specified  $\theta$  and  $\phi$  Angles and Those Measured By The Tilt-Back X-ray Method

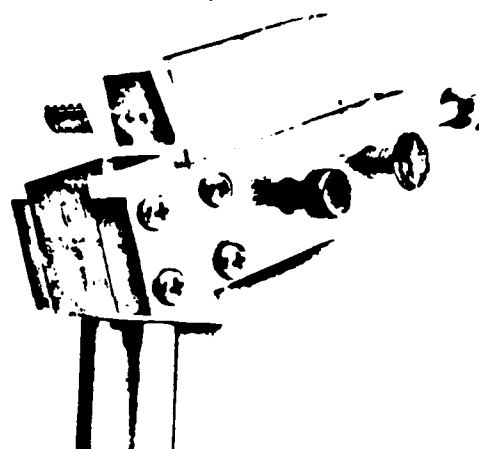


Figure 4. Tilt-Back Vacuum Jig Used With The Double-Crystal X-ray Goniometer

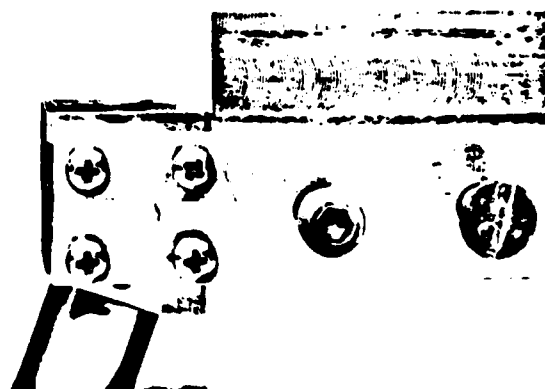


Figure 5. Tilt-Back Jig Showing -X Surface Contact

Figure 6 shows the precision saw. The setting is accomplished by a tilt and a rotation. Figure 7 is another view. One advantage of the tilt and rotation, rather than a double tilt is that the tilt and the rotation angles are exactly those measured by the X-ray. So necessary corrections to the saw table are directly applied from the X-ray reading. To obtain actual specified  $\theta$  and  $\phi$  angles, in practice, it is only necessary for the operator to enter the X-ray dial reading into a pre-programmed calculator and push the button.

#### Advantages of -X Surface Reference and Tilt Method of Orientation

1. An existing double crystal X-ray goniometer set for AT cut can be used with no change other than the tilt jig.
2. The angle is close enough to 01.1 plane for calibrating of standards by a turnover method.
3. Orientation of the sensitive reference flat is generated right on the quartz bar before cutting.
4. The  $\phi$  angle is determined without a tilt jig and is simply measured by the X-ray.
5. By using a standard reference crystal, accuracies of a few seconds of arc are possible.
6. There is a direct correspondence between saw table angles and the angles measured by the X-ray.
7. Specified angles are obtained easily by using a simple programmed calculator.
8. The  $14^\circ$  psi angle generated automatically turns out to be the correct mounting point for the crystal plate.

#### Frequency Adjustment

The fact that the inflection point of the SC temperature frequency curve is above the operating temperature makes room temperature frequency adjustment a disaster. The slope is about 10 Hz per degree at 5 MHz. In addition frequency adjustment by circuit means is limited to about 1/4 of that of the AT. Therefore frequency adjustment at or near the temperature at which the crystal is to be operated is imperative. Figure 8 shows a small heater used in the vacuum deposition chamber. Temperature sensing control is by a thermistor bridge, the lead wires from the crystal are of special material and pass thru the temperature controlled block on their way to a network which sets the operating phase conditions. Deposition is by evaporation from a small tungsten filament.

#### Crystal Mounting

Figure 9 shows an experimental approach to thermo-compression (TC) ribbon mounting of the crystal plate. The ribbon is nickel, and it has a gold triangular strip bonded thereon. The TC bond will be gold to gold, and in the shape of a long thin rectangle, about  $5 \times 50$  mils. This method permits a better location of the mounting points with respect to the center of the plate, and also permits TC bonding to very thin plates.

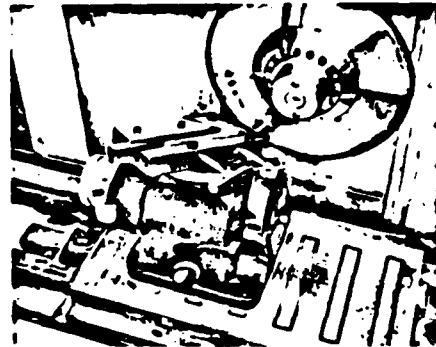


Figure 6. One View of the Precision Saw

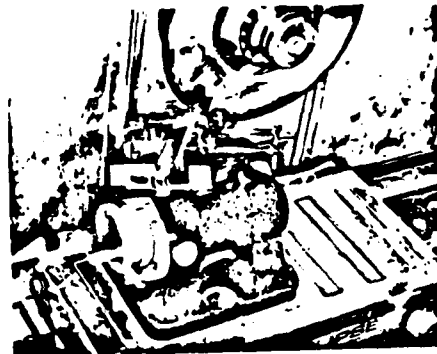


Figure 7. One View of the Precision Saw

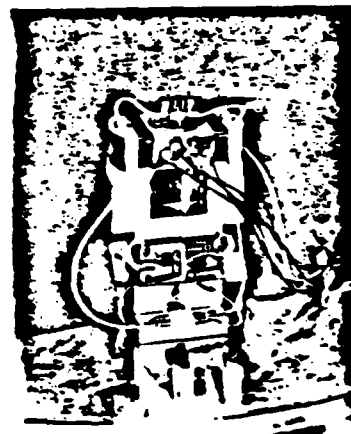


Figure 8. Crystal Unit Heater For Gold Evaporation in Vacuum

Figure 10 is a photo of one such bond on a 5 MHz 5th overtone plate. Figure 11 is a drawing of a typical thermo-compression bond. Recent discussions with and calculations by Prof. Peter Lee, of Princeton University, have indicated the extreme importance of the mounting points in obtaining a low 'g' sensitivity crystal unit. He indicates a  $\psi$  angle near  $-15^\circ$  as optimum for a 3 point  $90^\circ$  mount. It is interesting to note that the natural angle generated in cutting the blank, ( $-14.8^\circ$ ) which Frequency Electronics uses, the experimental angle reported by Kusters, Adams, and others of Hewlett Packard in 1977, and Peter Lee's calculated angle are all essentially the same. I believe the naturally generated angle is the correct one, but further experimentation will be necessary with precisely mounted units, to verify this.

#### Radiation Effects


An unexpected bonus came to light when some 24 MHz SC units in oscillators intended for use in the Galileo Probe of Jupiter were subjected to radiation of 1.0 megarads. The SC units changed 1 part in  $10^{14}$ /rad versus 2 parts in  $10^{12}$  per rad for AT units. This is about 2 orders of magnitude improvement in radiation susceptibility. This again needs further study.

#### Conclusion

Figure 12 shows a graph of one 5 MHz doubly contoured SC unit made at Frequency Electronics, Inc. subjected to a 2G acceleration by a simple turn-over test. Plate up to plate down was  $1\text{PP}10^{11}$ . Rotation in the vertical plane shows less than  $1\text{PP}10^{10}$  per G. Future studies will be aimed at increasing the yield of such units.

#### Acknowledgment

This work was supported in part by a grant from USAERDCOM, #DAAK20-79-C-0272.

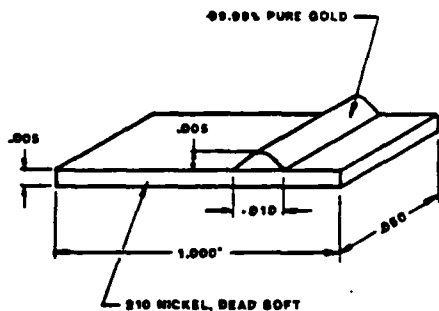

NICKEL-GOLD RIBBON FOR THERMAL-COMPRESSION BONDING

Figure 9. Experimental Gold Bonded Nickel Mounting Ribbon

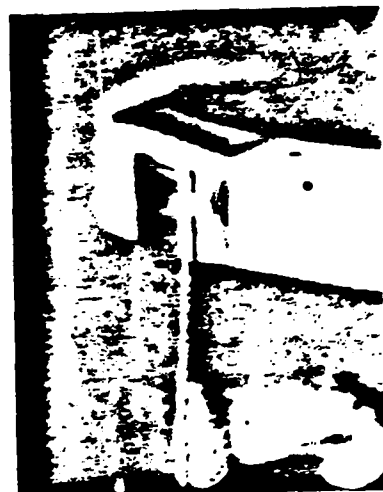


Figure 10. Experimental Thermo-Compression Bond To A 5 MHz SC Plate

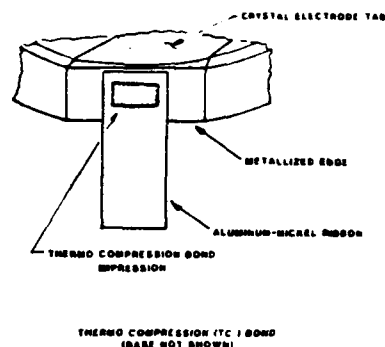


Figure 11. Typical Thermo-Compression Bond

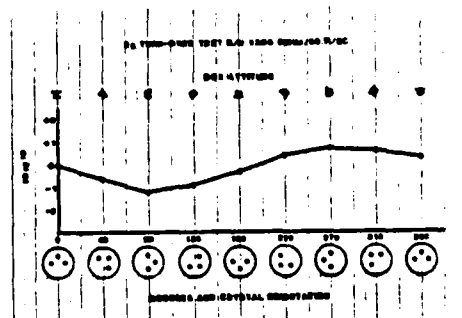


Figure 12. Turn-Over Test of One 5 MHz, 5th Overtone SC Unit Showing a 'g' Sensitivity of Less Than  $1\text{PP}10^{10}$

APPENDIX II

CRYSTAL DESIGNS

QUARTZ		FREQUENCY	O.T.	CUT	JOB NO.	FSC NO.	
PQSQ		20.000000	5	SC	7554		
NO.	OPERATION	THICKNESS or FREQUENCY	DESIGN	BLANK DIM.	.375x .030	'Z' ANG.	φ=23.75° θ=34.05°
1	P/L (FUND) #5	3.716MHz ±10KHz					
2	P/L (FUND) #3	3.990MHz ±5KHz					
3	ETCH	4.000MHz ±2KHz					
4							
5	POLISH (5TH) C/O	20.075MHz ±2KHz					
6	BEVEL #9	.030 x 12 D10P					
7	BEVEL #9	.030 x 12 D10P					
8			DK=70.87				
9	ETCH	20.080MHz ±2KHz	DESIGNED PLATE BACK: 1.0F <sup>2</sup>				
10			ELECTRODE DIAM: .265				
11			HEADER : T0-8				
12			MOUNT : LOW PROF. DIAM. "J" MOUNT				
			BOND METHOD : EPOXY				
MARKING DETAIL			SPECIFICATIONS		SPEC:		
TOP 			FREQ. CAL. AT : T.O. w/ 20pF				
			FREQ. TOL. : ± 20 Hz				
SIDE 			TURNOVER TEMP. : 65°C to 85°C				
			OPERATING TEMP. : N/A				
			C <sub>0</sub> : 4.7 pF ± 0.5 pF				
			C <sub>1</sub> : 1.4 x 10 <sup>-16</sup> F ± 0.14 x 10 <sup>-16</sup> F				
			'Q' : 450,000 MIN.				
QUANTITY REQUIRED :			RESISTANCE : .00 Ω MAX				
SPECIAL INSTRUCTIONS			Δf AT 20 pF : 74 Hz ± 10 Hz				
DIMPLED CAN			SPURIOUS MODES : -3dB ± 250 KHz				
			DATA REQUIREMENTS: TEST PLAN 4				
			CONDITIONING : 1 HRS 190 °C				
			SEAL RANGE : 5 x 10 <sup>-8</sup>				
DESIGNED DATE APPROVED DATE			H <sub>2</sub> FIRING : 3 1/2 HRS 270 °C				

22477-893-06A

RELEASED: 2-16-79

INIT: (3d)

QUARTZ		FREQUENCY	O.T.	CUT	JOB NO.	FSC NO.		
PQSQ		23.116690	5	SC	7554			
NO.	OPERATION	THICKNESS or FREQUENCY	DESIGN	BLANK DIM.	.375 x .030	'Z' ANG.	$\phi = 23.75^\circ$ $\theta = 34.05^\circ$	
1	P/L #5	4278 $\pm$ 10 KHz						
2	P/L #3	4599 $\rightarrow$ 4608						
3	ETCH	4611 KHz $\pm$ 1 KHz						
4	POLISH	% 23.219 MHz $\pm$ 2 KHz						
5	BEVEL	10D $\phi$ .310						
6	RE-BLOCK							
7	BEVEL	10D to .310						
8	ETCH	23.225 MHz $\pm$ 2 KHz						DESIGNED PLATE BACK: 1.0F <sup>2</sup>
9								ELECTRODE DIAM: .265
10								HEADER : TO-8
11								MOUNT : Lo. Pres. DIAMOND
12								BOND METHOD : EPOXY
MARKING DETAIL			SPECIFICATIONS		SPEC:			
TOP SERNO'S SCALE CODE YY = YEAR DIGITS ZZ = WEEK DIGITS SIDE 24.325570 MHz 7554 YYZZ 			FREQ. CAL. AT : T.O w/ 20pF FREQ. TOL. : $\pm$ 20 HZ TURNOVER TEMP. : 70°C $\pm$ 10°C OPERATING TEMP. : C <sub>0</sub> : 3.6 pF $\pm$ 0.4 pF C <sub>1</sub> : 1.0 $\times 10^{-15}$ F $\pm$ 10% 'Q' : 350 K MIN. RESISTANCE, : 100 $\Omega$ MAX. $\Delta f$ AT 20 pF : 74 HZ $\pm$ 10 HZ SPURIOUS MODES : -3 dB $\pm$ 250 KHz DATA REQUIREMENTS: TEST PLAN 4 CONDITIONING : 1 HRS 180 °C SEAL RANGE : 5 $\times 10^{-8}$ H <sub>2</sub> FIRING : 4 HRS 270 °C					
QUANTITY REQUIRED :								
SPECIAL INSTRUCTIONS								
DESIGNED <i>B. Goldfrank</i> 3/24/80 DATE APPROVED DATE								

QUARTZ		FREQUENCY	O.T.	CUT	JOB NO.	FSD NO.
PQSQ		24.325570	5	8C	7554	
NO.	OPERATION	THICKNESS or FREQUENCY	DESIGN	BLANK DIM.	(.375x.030) 9.53x.762	2' ANG. φ=23.75° θ=34.05
1	P/L #5	4525 ± 10 KHz				
2	P/L #3	4837 → 4847				
3	ETCH	4851 ± 2 KHz				
4	POLISH C/O	24.436 MHz ± 2 KHz				
5	BEVEL	10D to .310				
6	RE-BLOCK					
7	BEVEL	10D to .310				
8	ETCH	24.443 MHz ± 2 KHz				
9			ELECTRODE DIAM: .265			
10			HEADER : TD-8			
11			MOUNT : LO PROF. DIAM.			
12			BOND METHOD : EPOXY			
MARKING DETAIL			SPECIFICATIONS		SPEC: Y 1032	
TOP 			SERNO'S FREQ. CAL. AT : T.O. w/ 20 pF FREQ. TOL. : ± 20 Hz TURNOVER TEMP. : 70°C ± 10°C OPERATING TEMP. : C <sub>0</sub> : 3.6 pF ± 0.4 pF C <sub>1</sub> : 1.0 × 10 <sup>15</sup> F ± 10% 'Q' : 350 K MIN RESISTANCE, : 100 Ω MAX. Δf AT 20 pF : 74 Hz ± 10 Hz SPURIOUS MODES : -3 dB ± 250 KHz DATA REQUIREMENTS: TEST PLAN 4 CONDITIONING : 1 HRS 180 °C SEAL RANGE : 5 × 10 <sup>-8</sup> H <sub>2</sub> FIRING : 4 HRS 270 °C		SIDE 24.325570 MHz 7554 YYZZ	
QUANTITY REQUIRED :						
SPECIAL INSTRUCTIONS						
DESIGNED <i>3/24/80</i> DATE APPROVED DATE						



APPENDIX III

'g' SENSITIVITY DATA

TABLE III-1

SUMMARY OF 'g' SENSITIVITY TESTING IN PP10<sup>10</sup>/g

SERNO	RADIAL WORST CASE	THICKNESS (UP/DOWN)	SERNO	RADIAL WORST CASE	THICKNESS (UP/DOWN)
1370	1.5	1.4	3725	3.1	1.2
1371	4.2	0.6	3726	7.8	0.5
1373	6.5	1.0	3728	7.1	1.5
1374	8.5	0.5	3729	3.5	2.2
1375	7.5	1.8	3653	11.7	1.9
1376	1.4	1.7	3655	5.7	0.3
1377	3.5	N/A	3734	2.2	1.3
1378	2.5	N/A	3735	6.9	0.1
1379	3.5	1.0	3736	1.9	0.3
1380	1.0	0.05	3903	2.4	0.6
1382	7.5	0.8	3910	2.0	0.5
1383	5.6	1.4	3920	1.2	1.3
1384	3.0	1.1	3921	2.9	2.3
1385	4.5	0.15	3922	1.2	2.3
1386	1.3	1.6	3923	1.9	0.7
3721	3.3	0.9	4204	4.5	1.4


K-E 20 X 20 TO THE INCHES 1 X 10 TO THE INCHES  
 REPRODUCED FROM THE ORIGINAL

461240

SERNO. 1370

5.0M/5

DATE 9/8/80

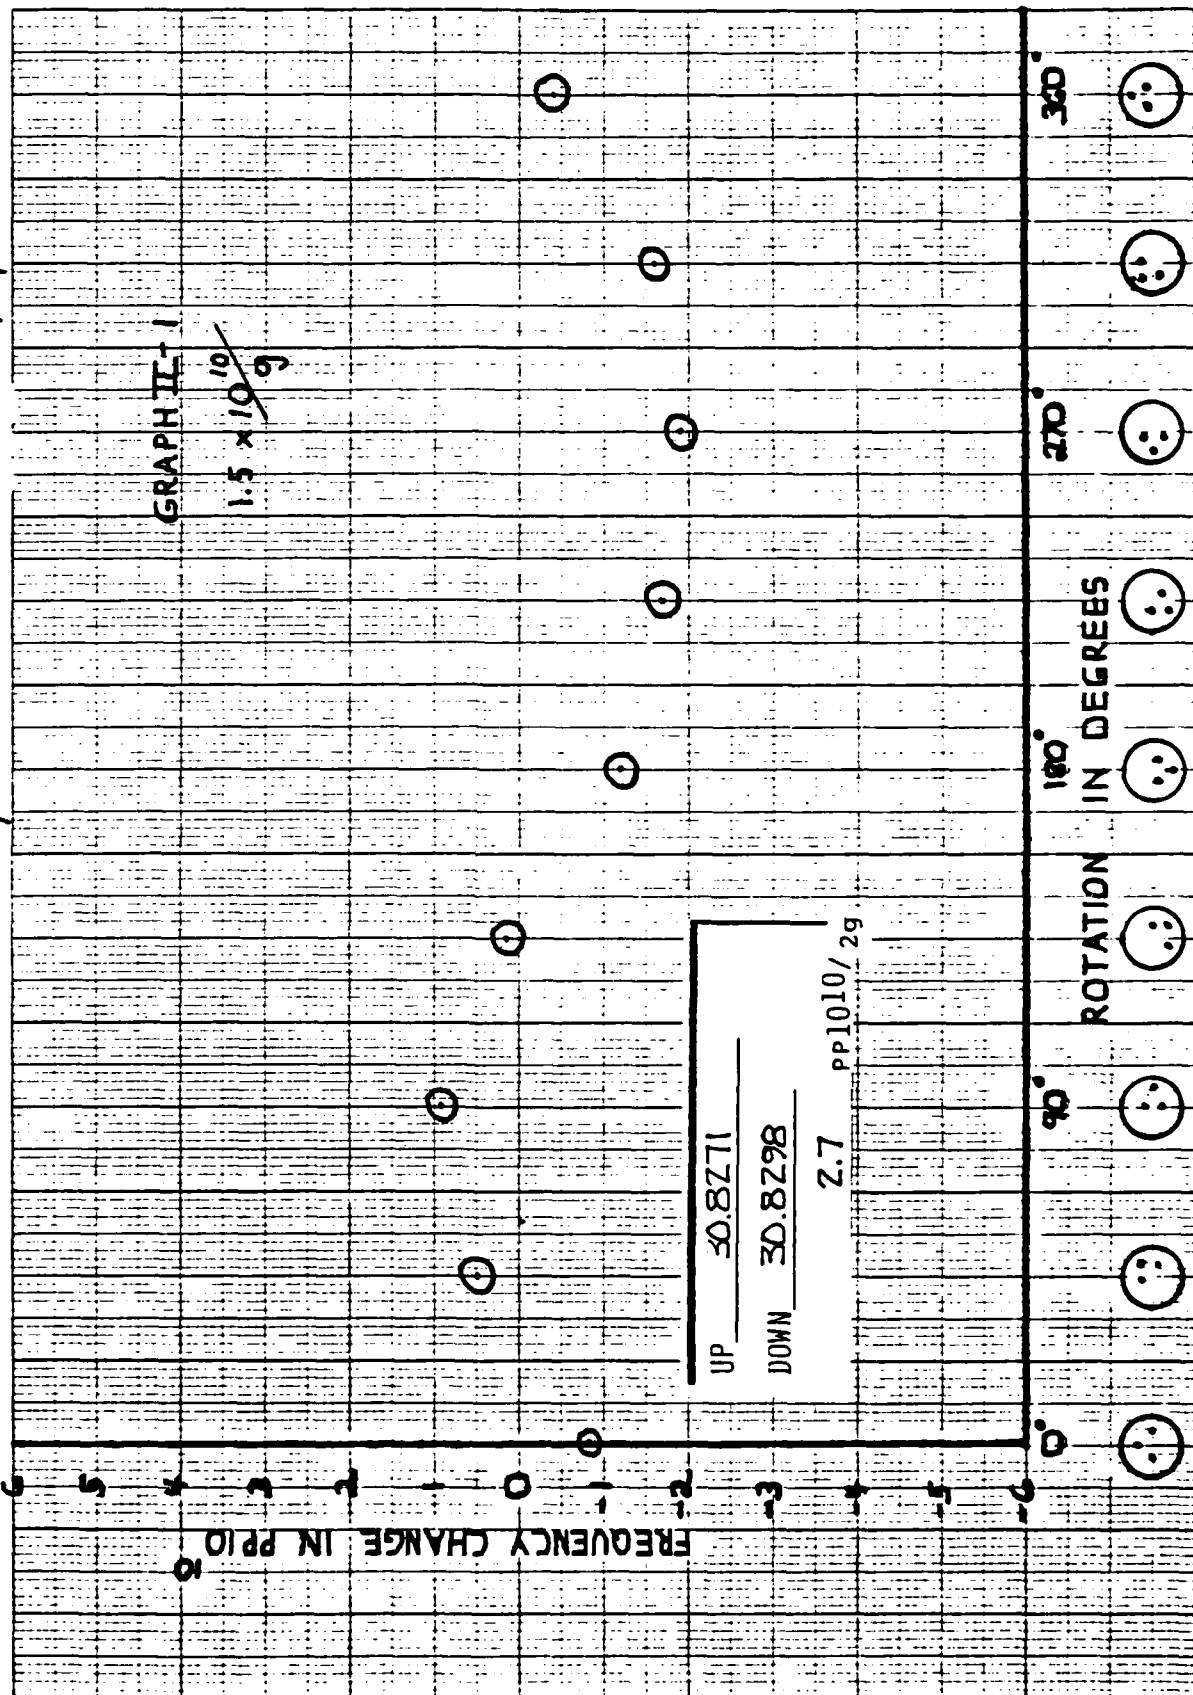


K-E 20 X 20 TO THE INCH 7 X 10 IN. HES  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46 124C

DATE 9/8/80

50M/5


SERNO. 1371

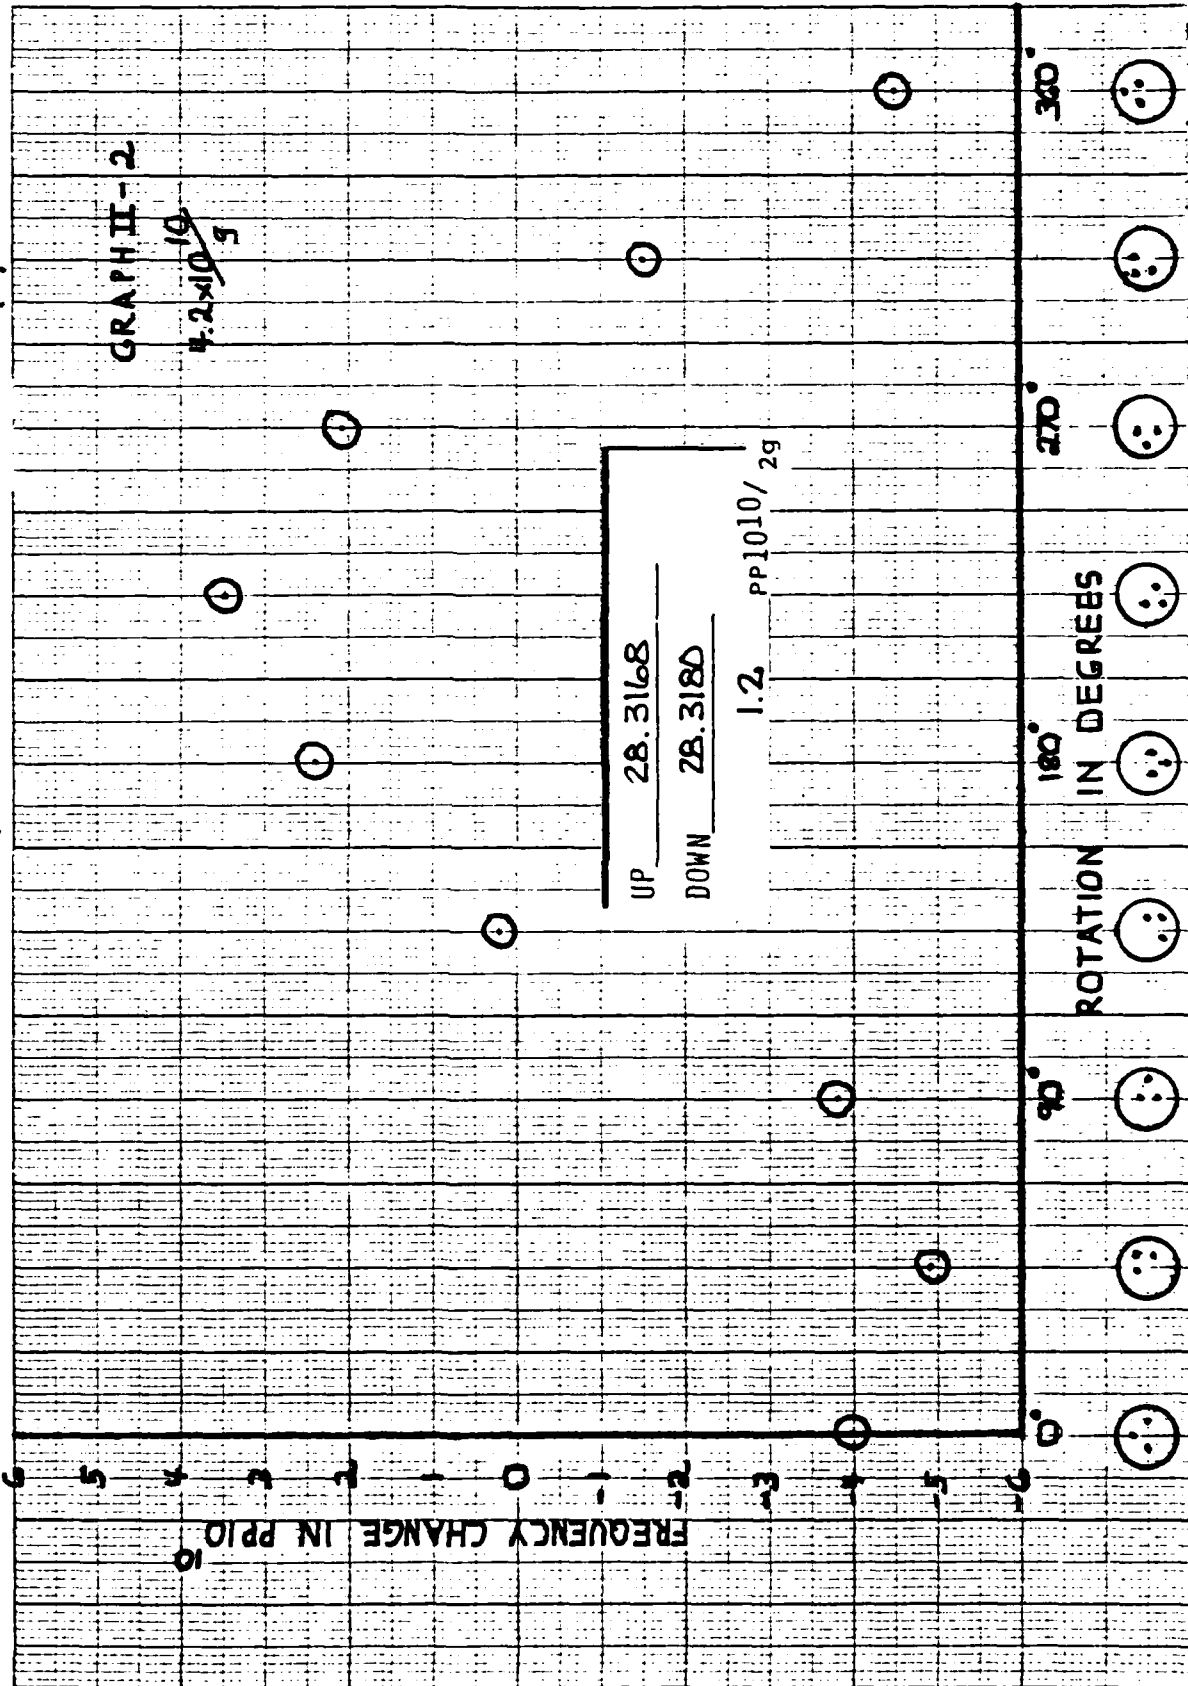

SERNO. 1373

5.07/5


DATE 9/8/80

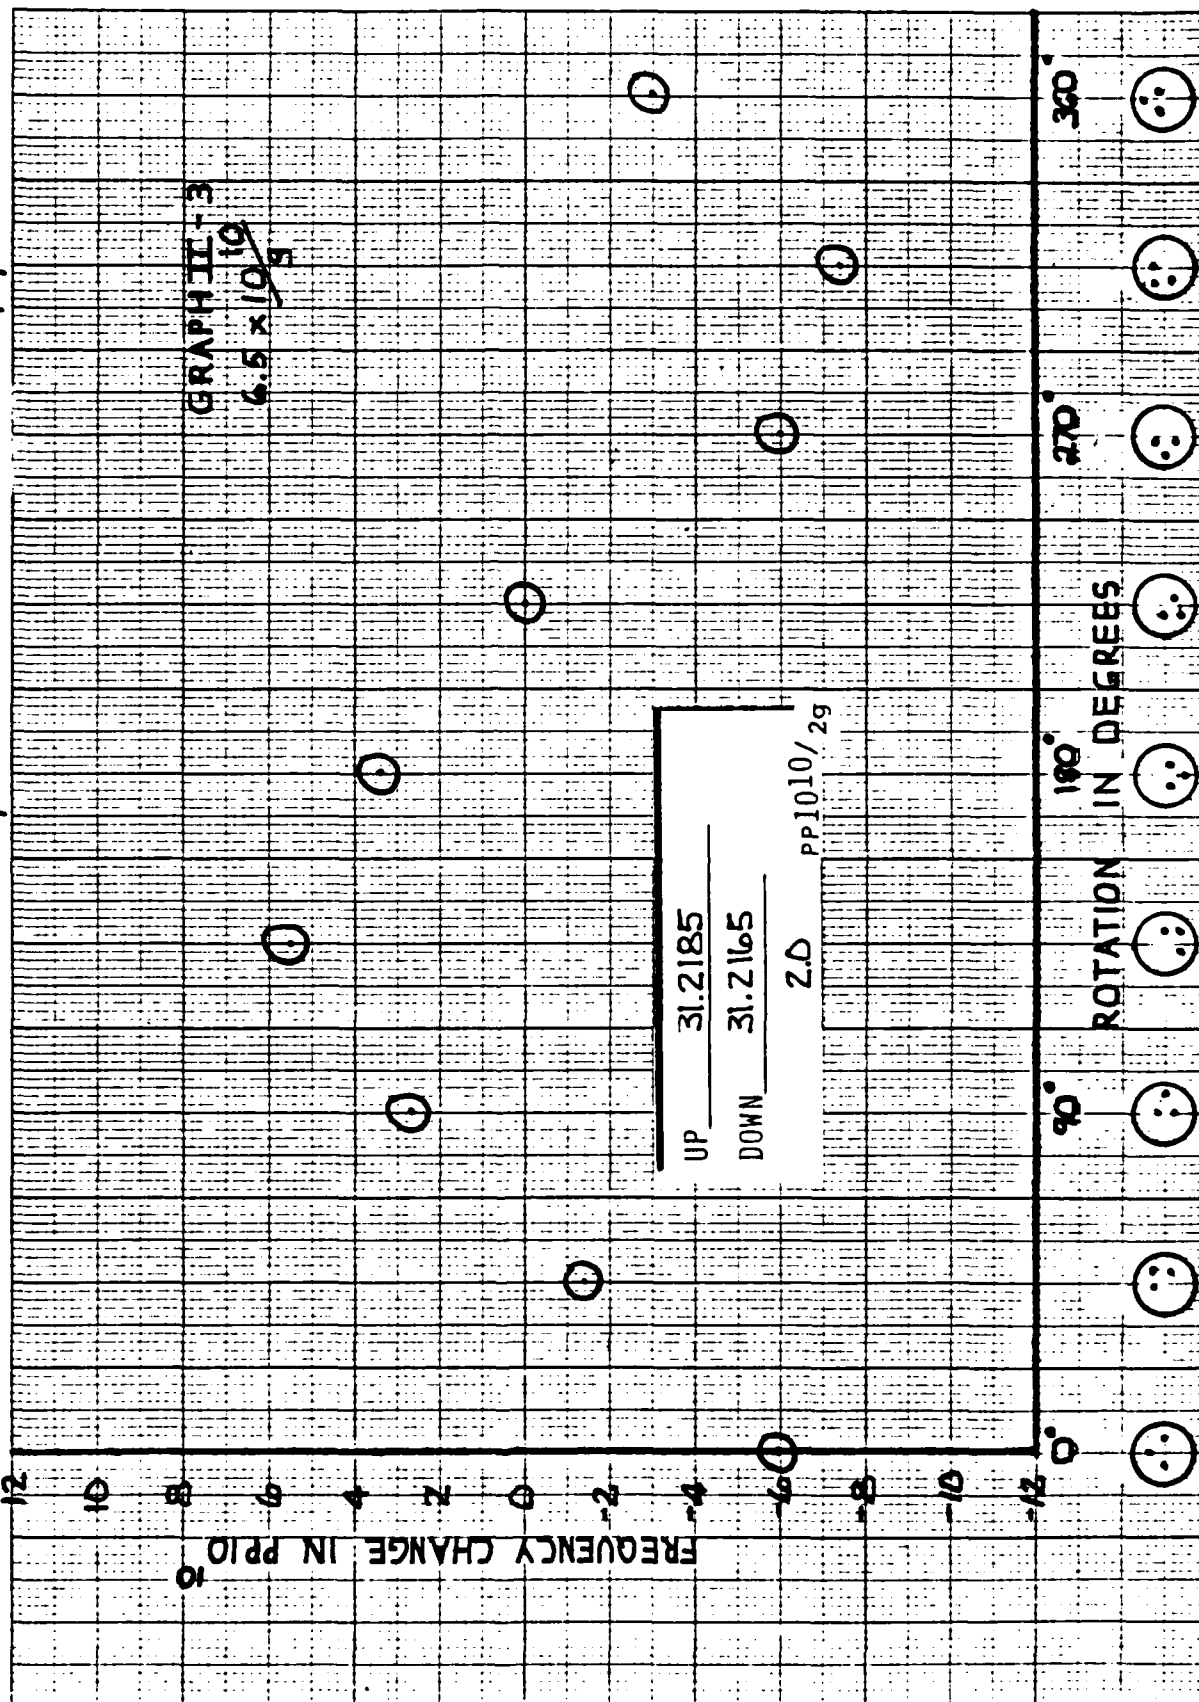

DATE 9/8/80

MADE IN U.S.A.

44-38861-1000

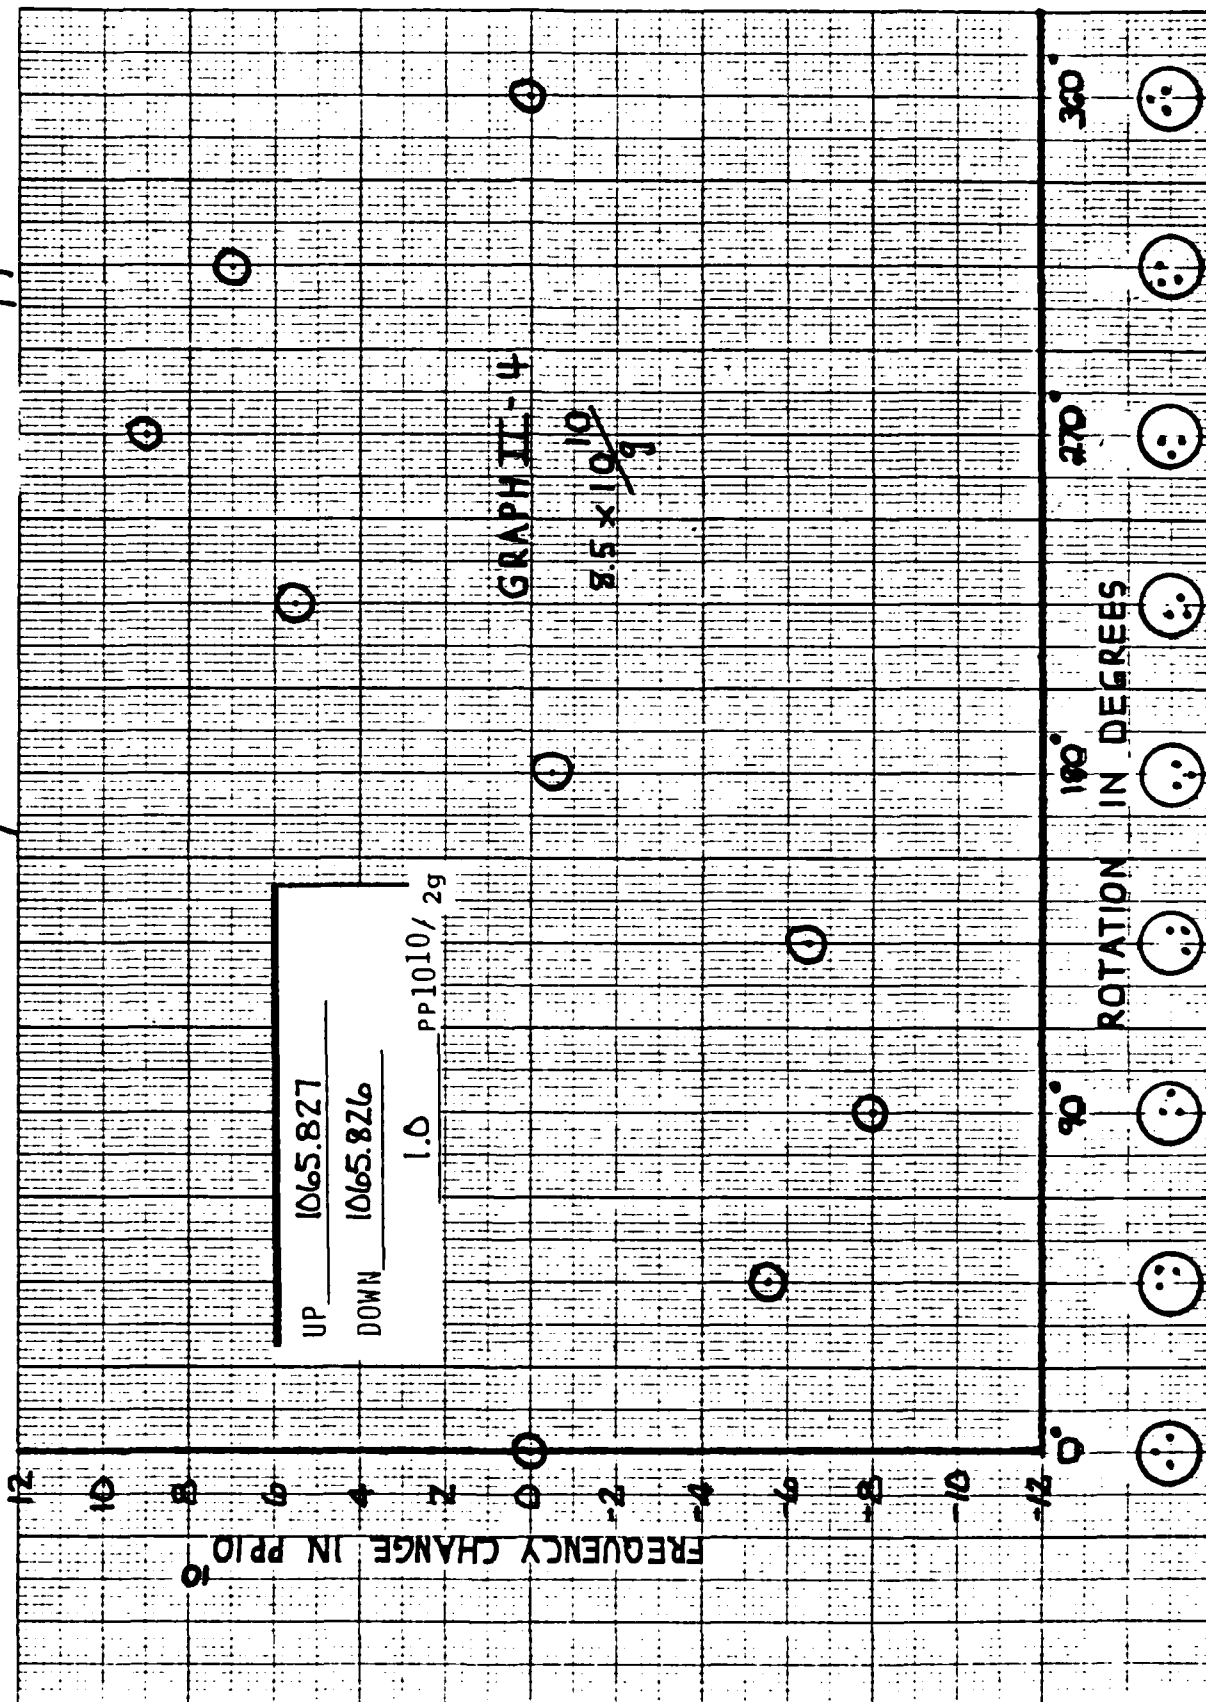


NYE KEUFEL & ESSER CO. MADE IN U.S.A.

461240

SERNO. 1375

5.0M/5

DATE 9/8/80

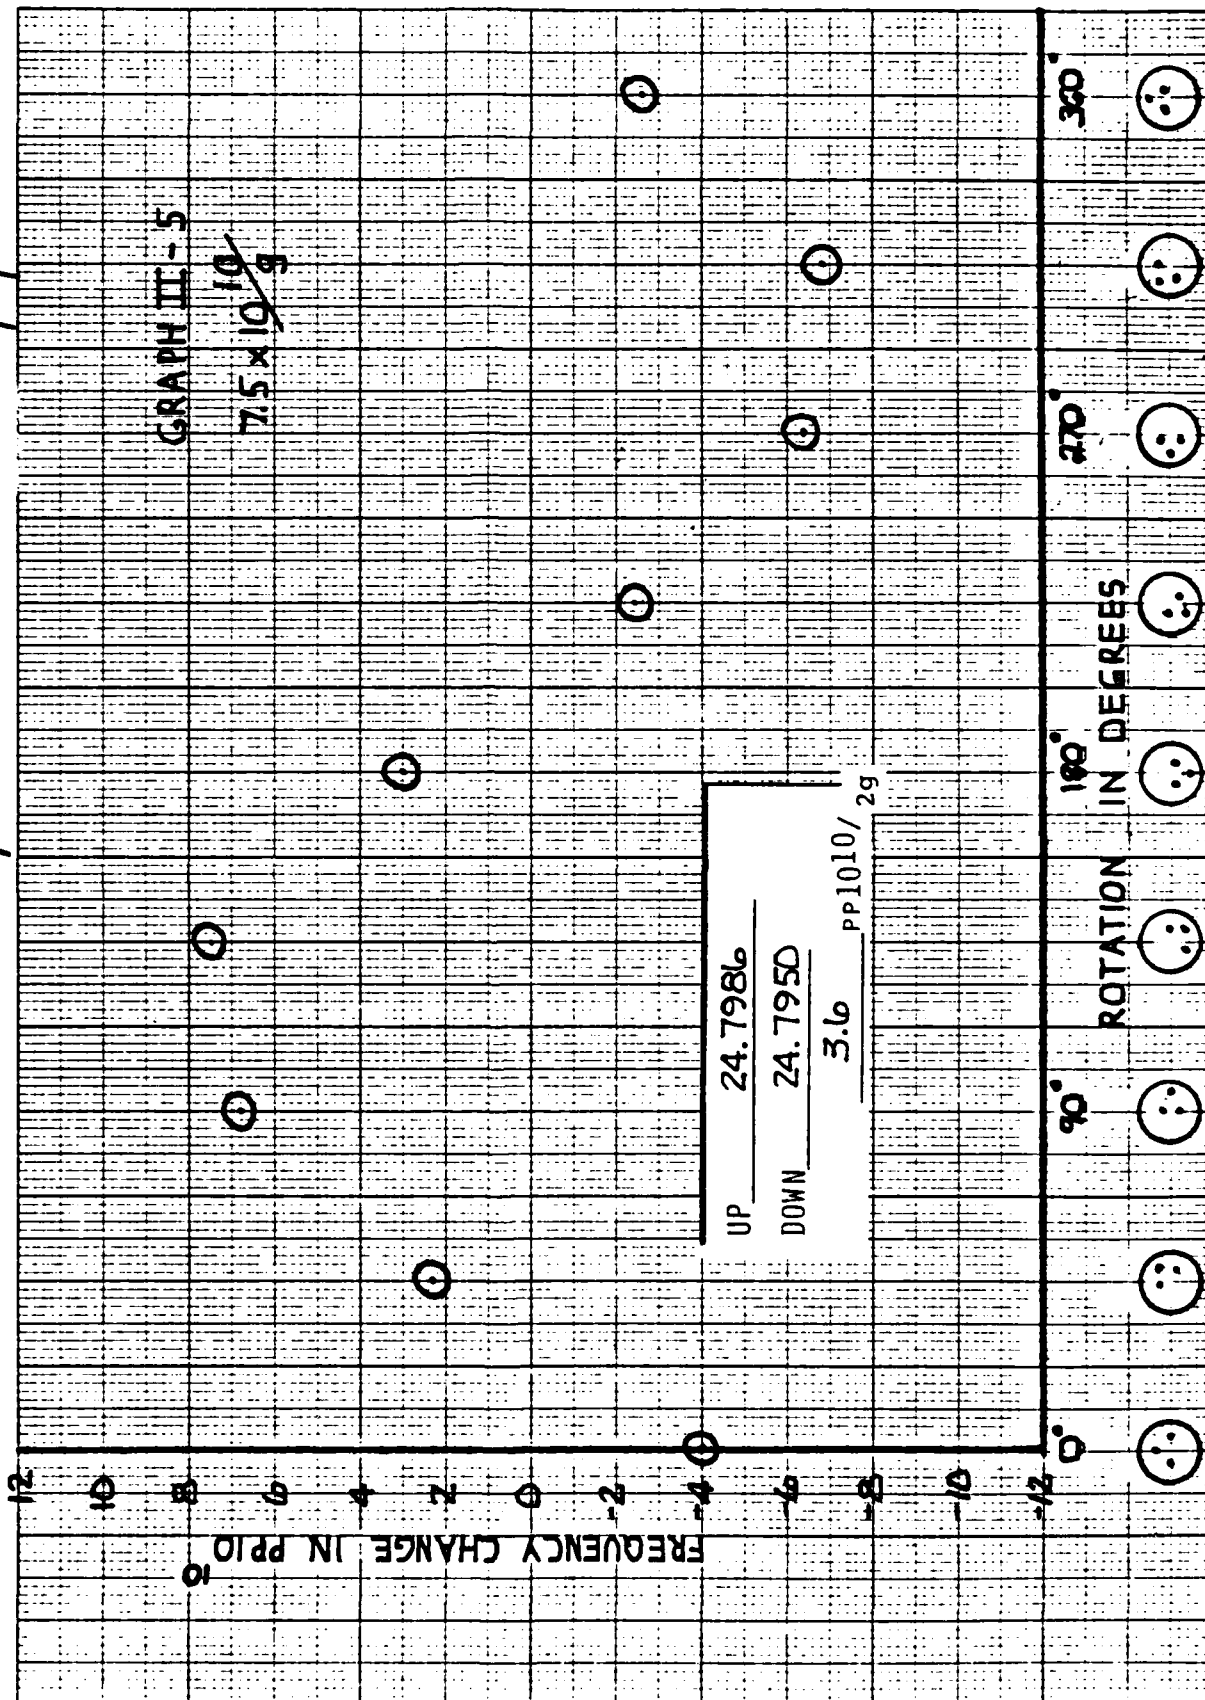


K-E 20 X 20 TYPING UNIT 2 X 10 INCHES  
 REUSE PAPER TO SAVE MONEY

46 124C

SERNO. 1376

5.0M/5

DATE 9/8/80

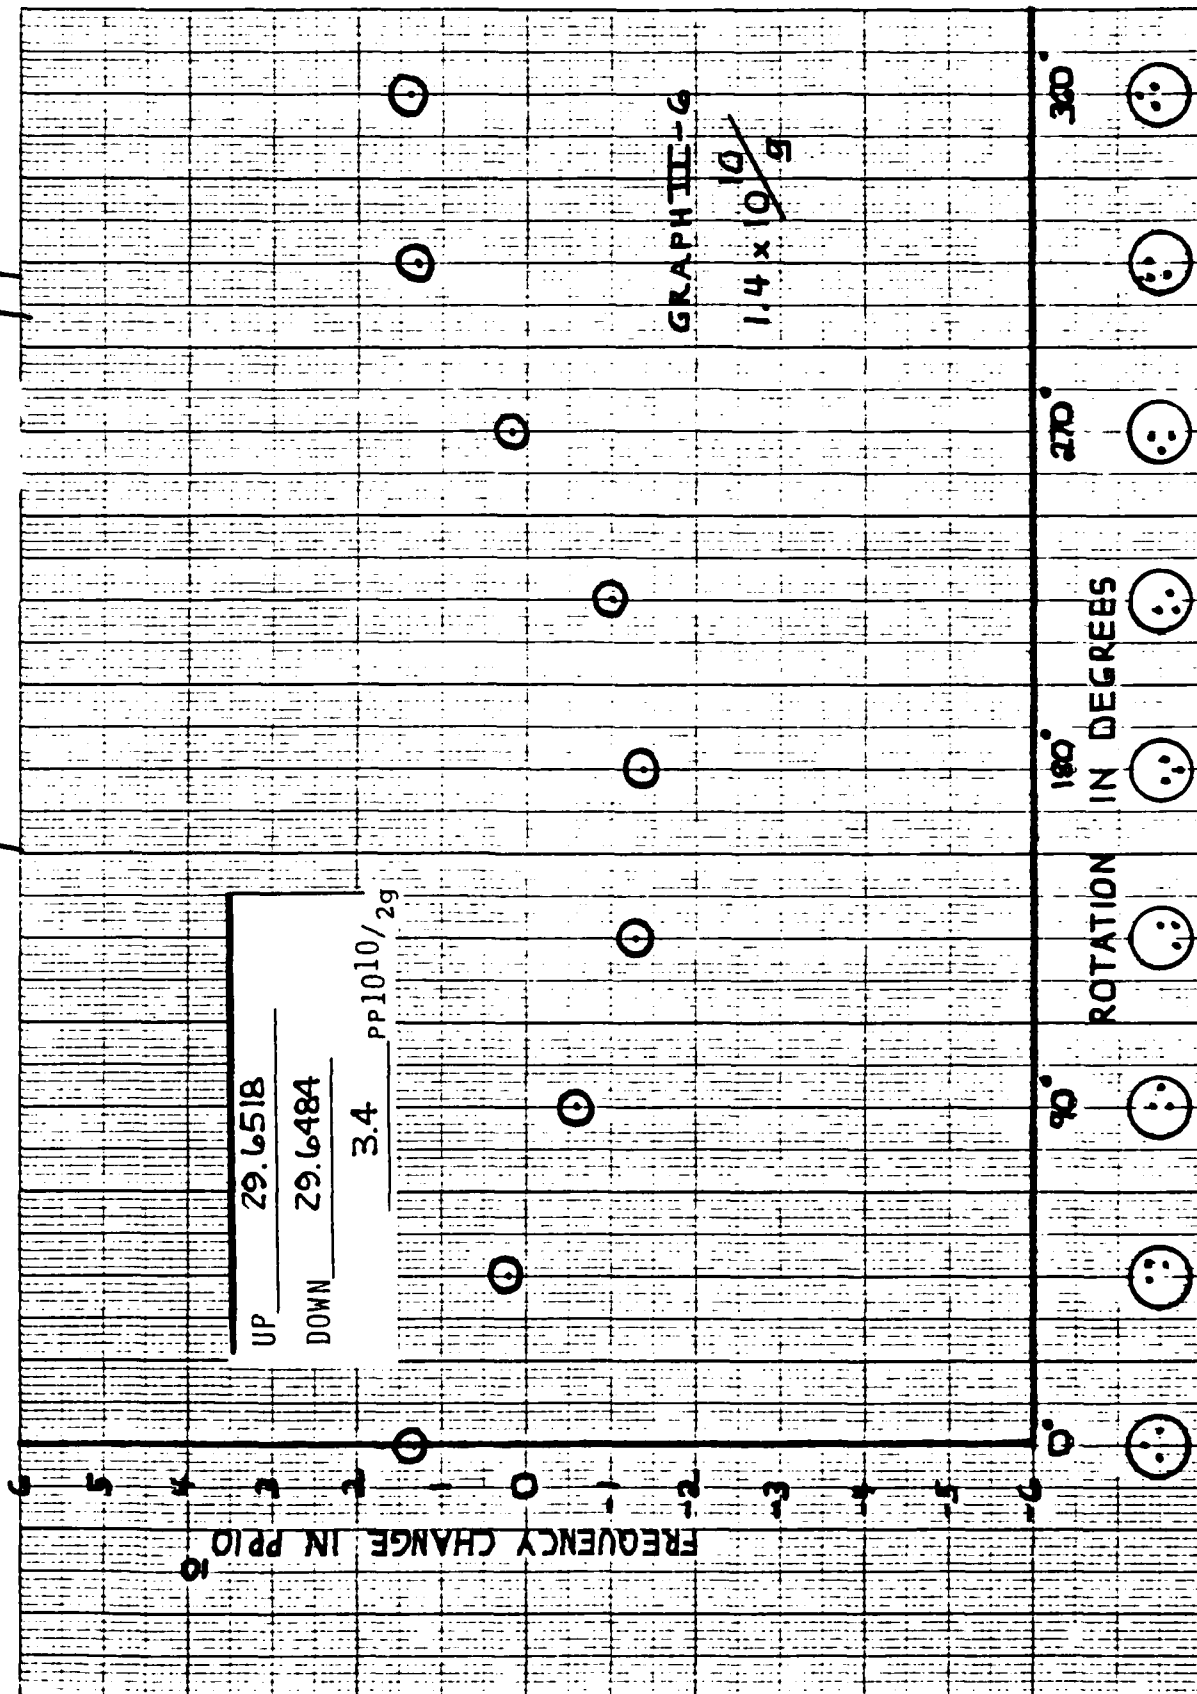




K-E 20 X 20 TO THE INCHES 7 X 10 INCHES  
KALUFEL & ESSER CO. MADE IN U.S.A.

46 1240

DATE 9/8/80

5.0/5/SC

SERNO. 1377

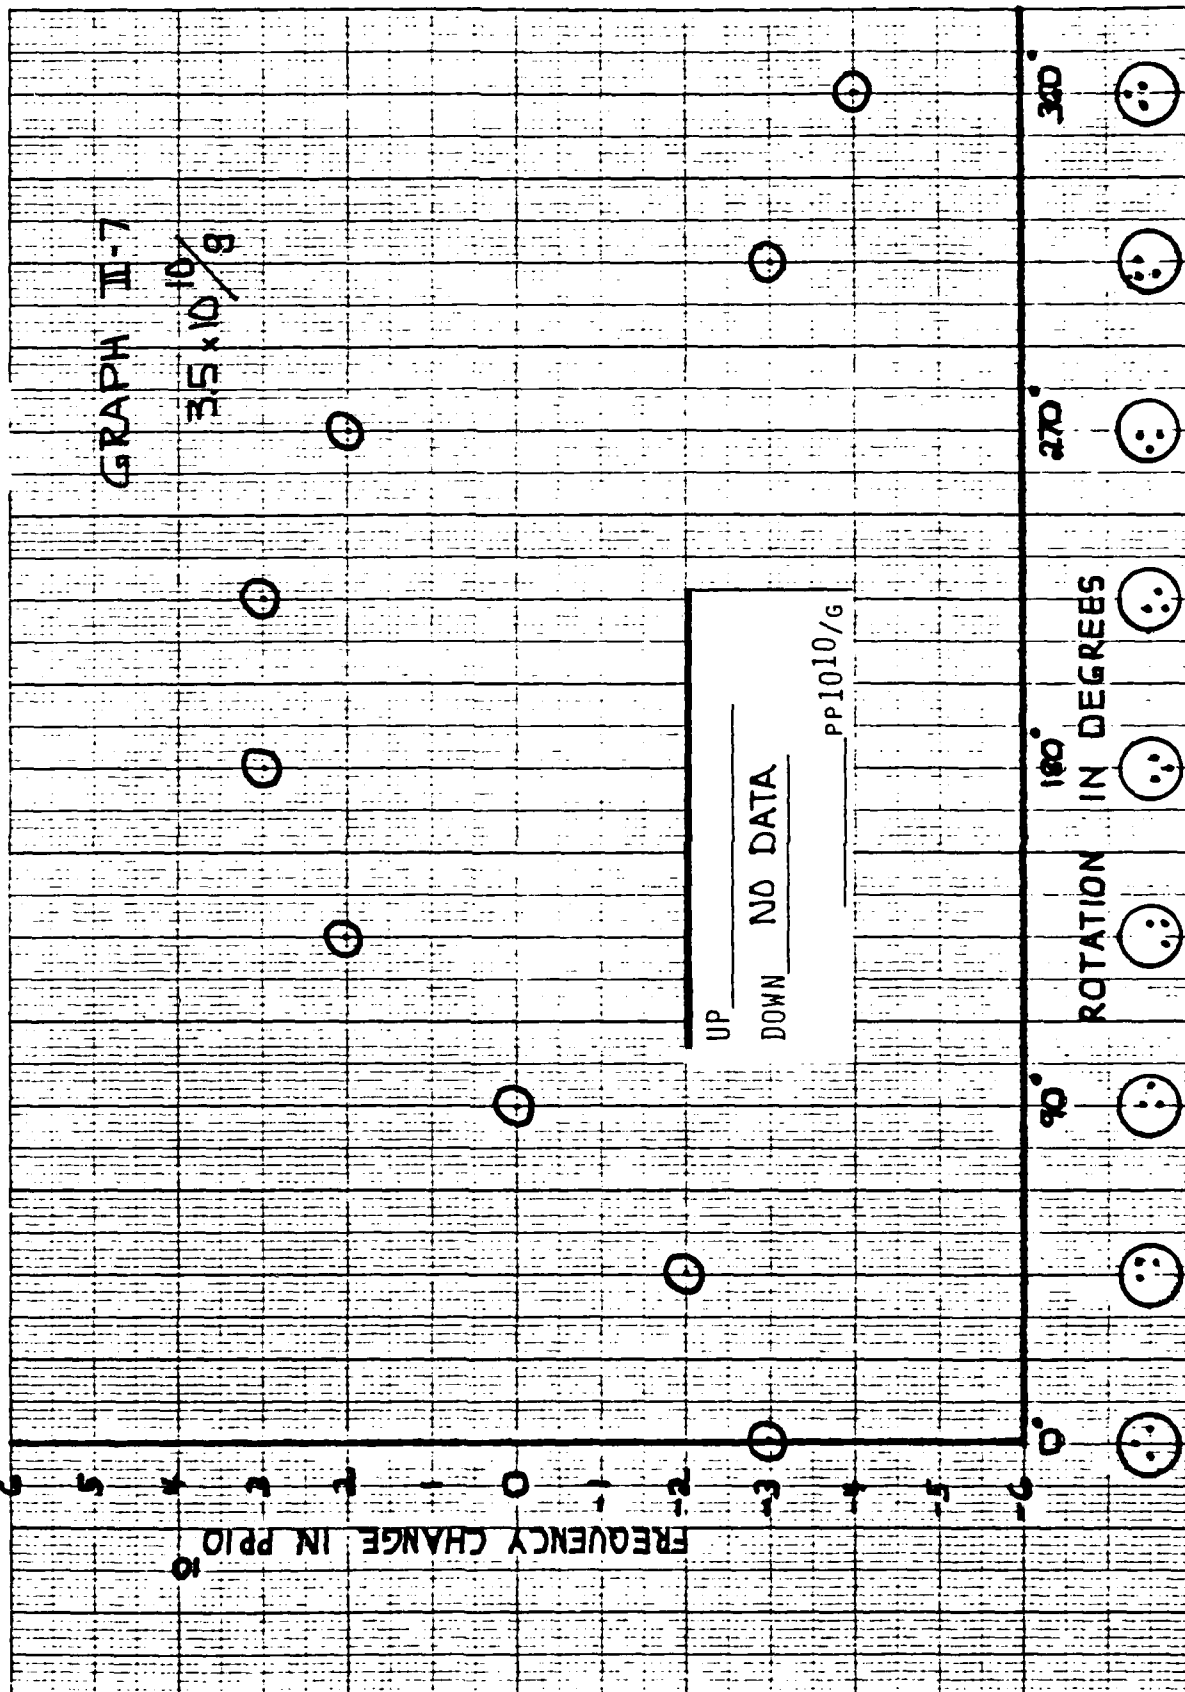


K-E 20 X 20 TO THE INCH 2 X 10 PPI 118  
KUPFEL & ESSER CO. MADE IN U.S.A.

461240

SERNO. 1378


S.O/S/SC

DATE 9-8-80

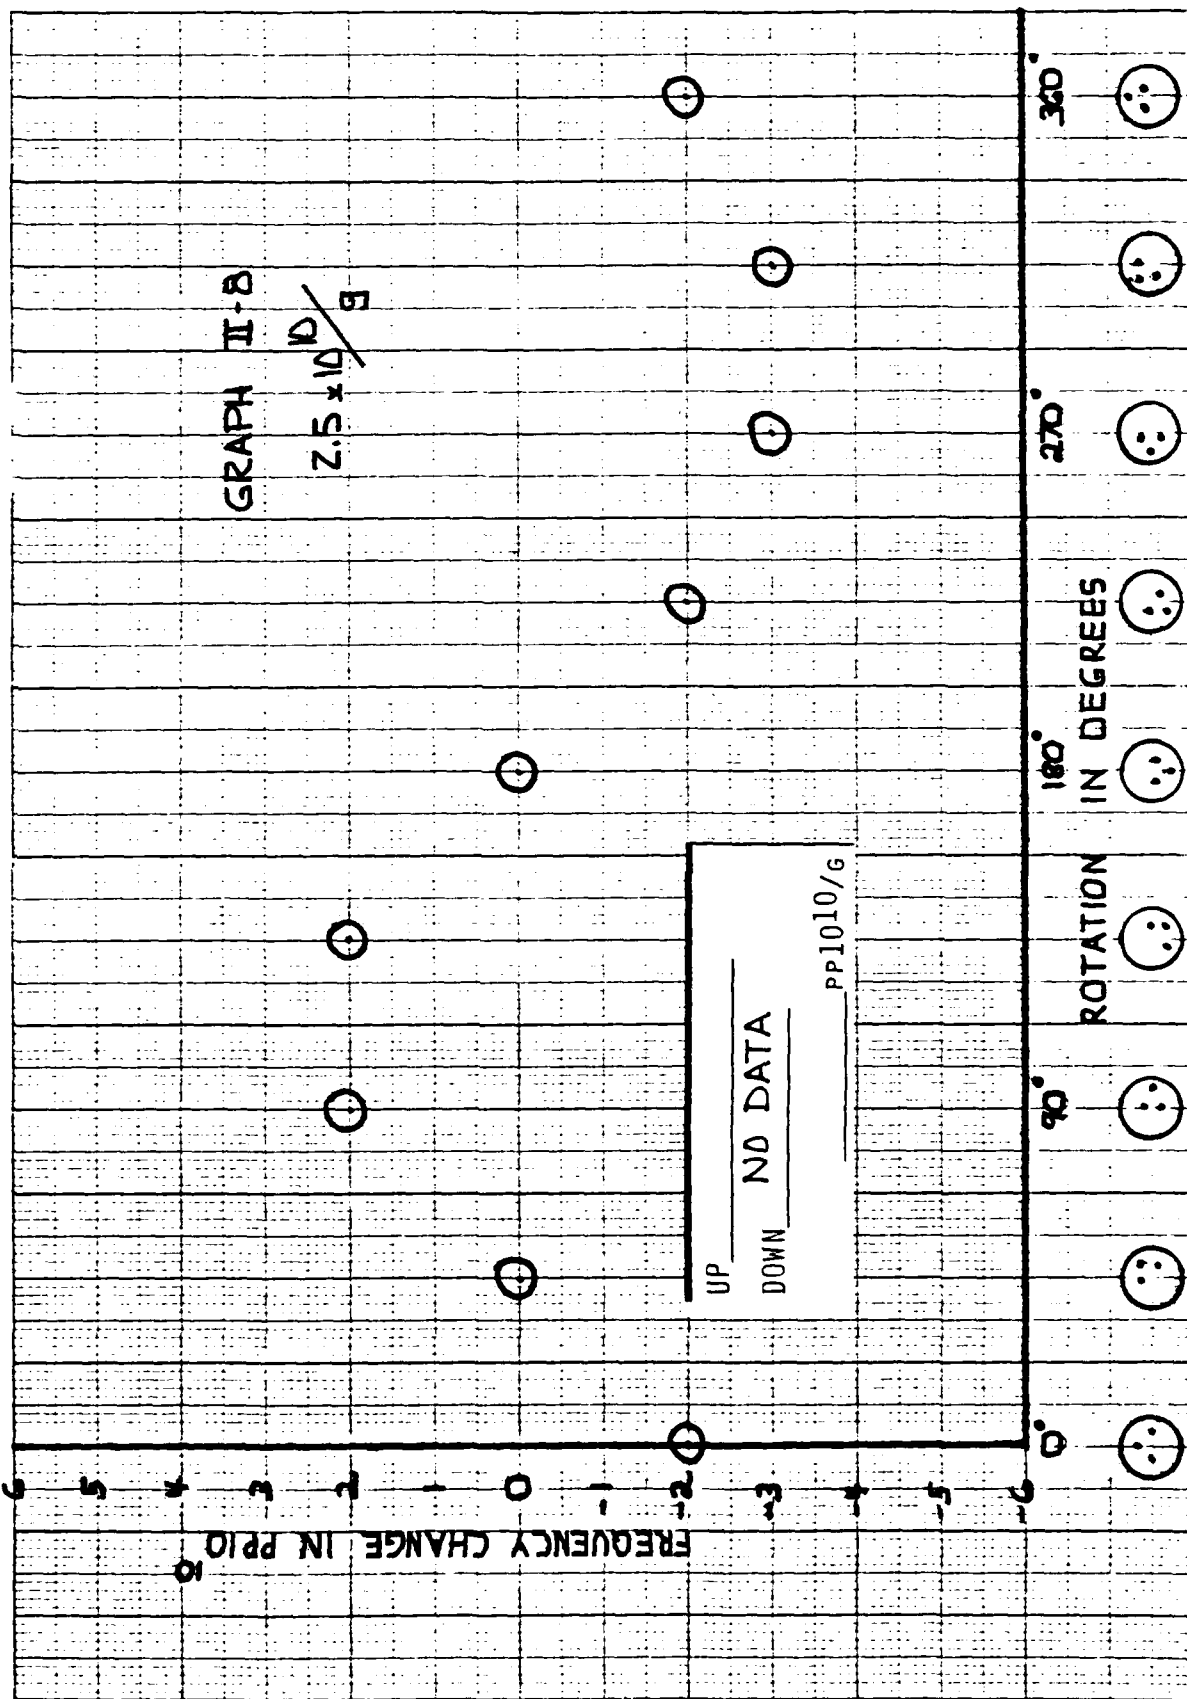

46 124C

S.O/5/SC

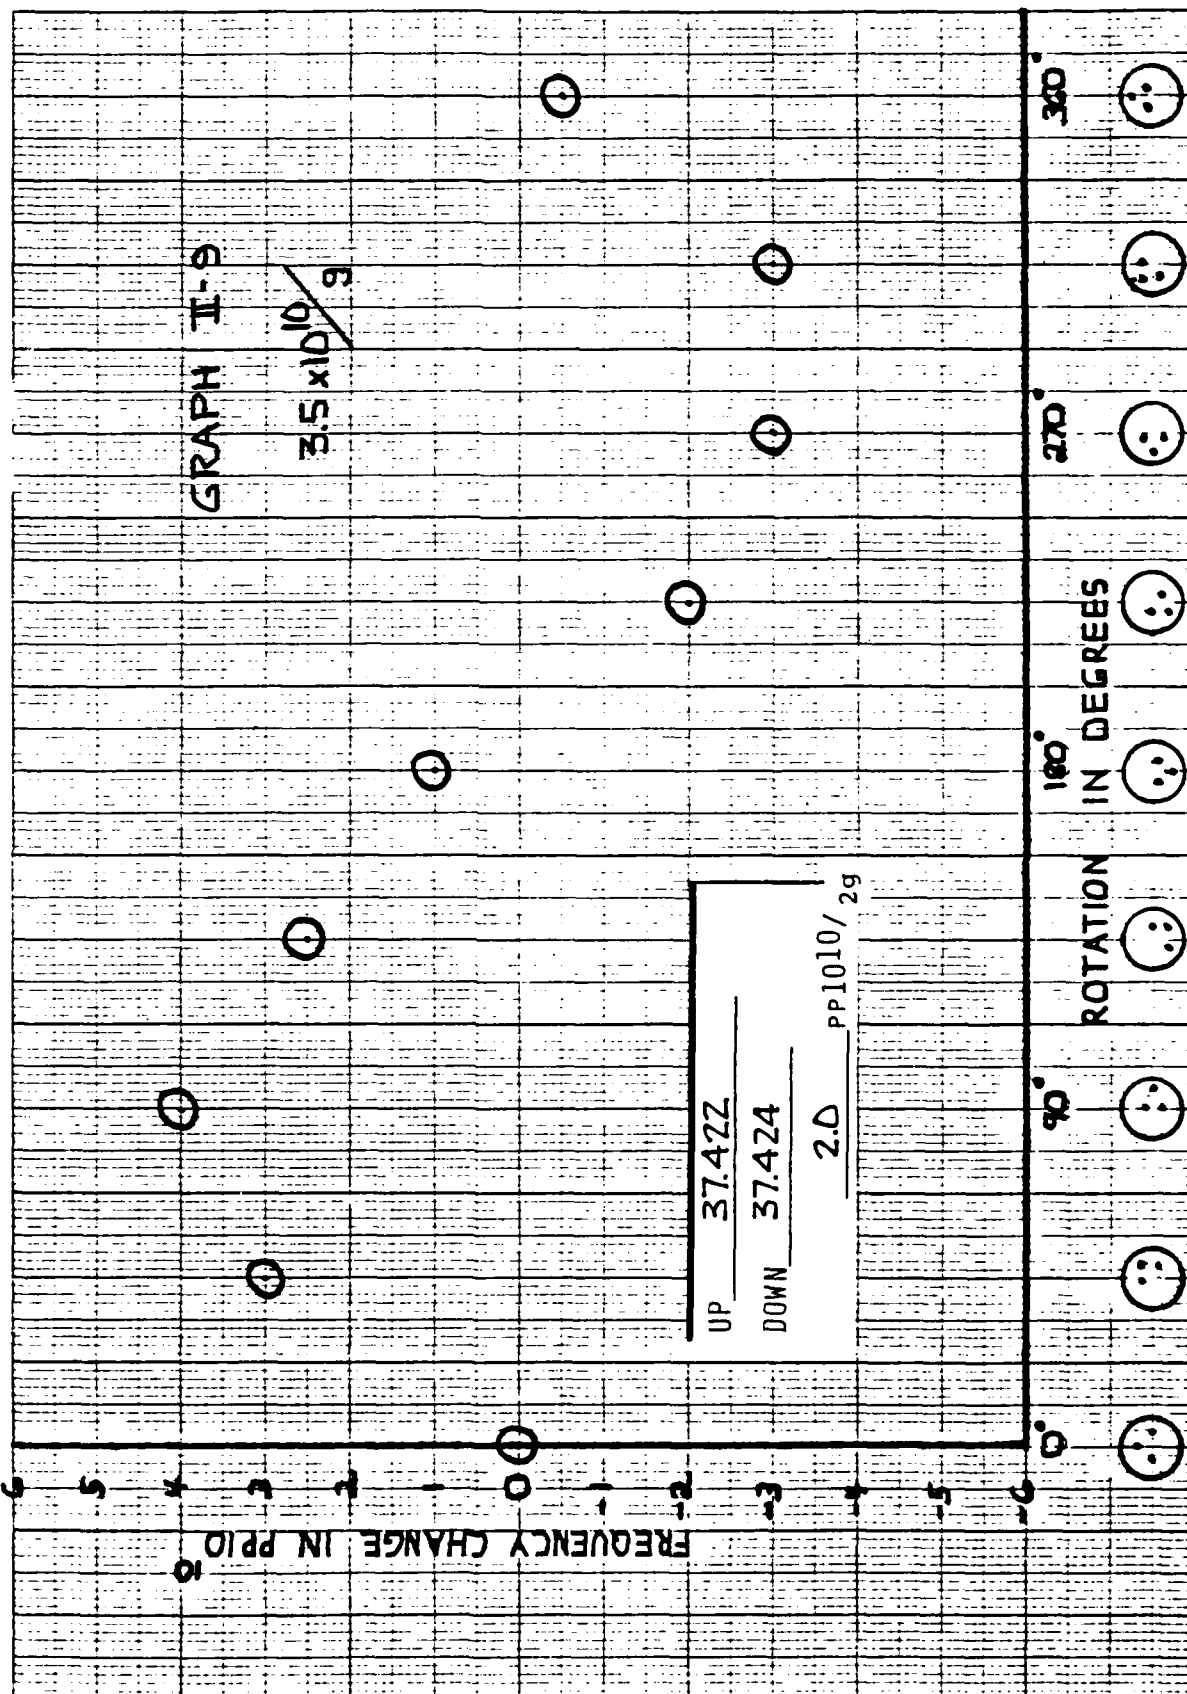DATE 9-8-80


K-E 20 X 20 TO THE INCHES \* 1000 HITS  
KODAK SAFETY FILM CO. MADE IN U.S.A.

46124C

SERNO. 1380


5.0/s/sc

DATE 9-8-80

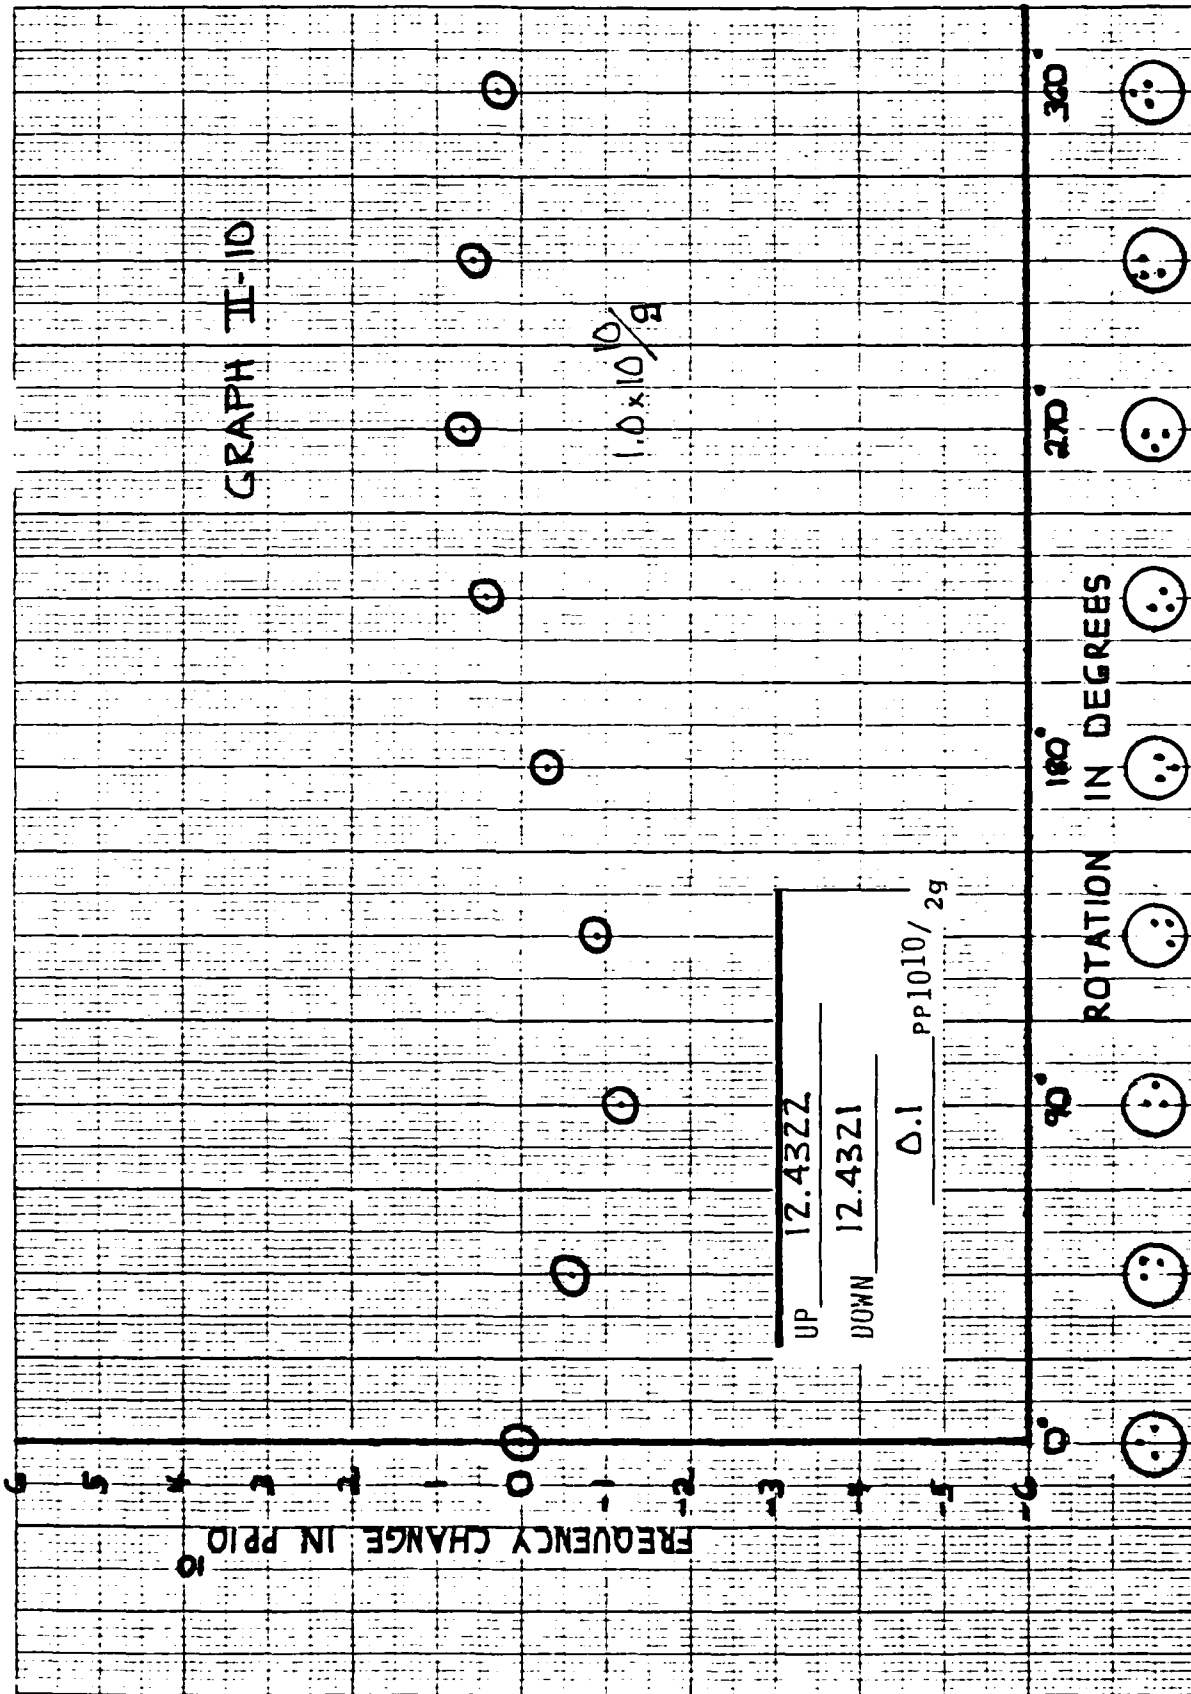

SERNO. 1382 DATE 9-8-60

5.0/5/30

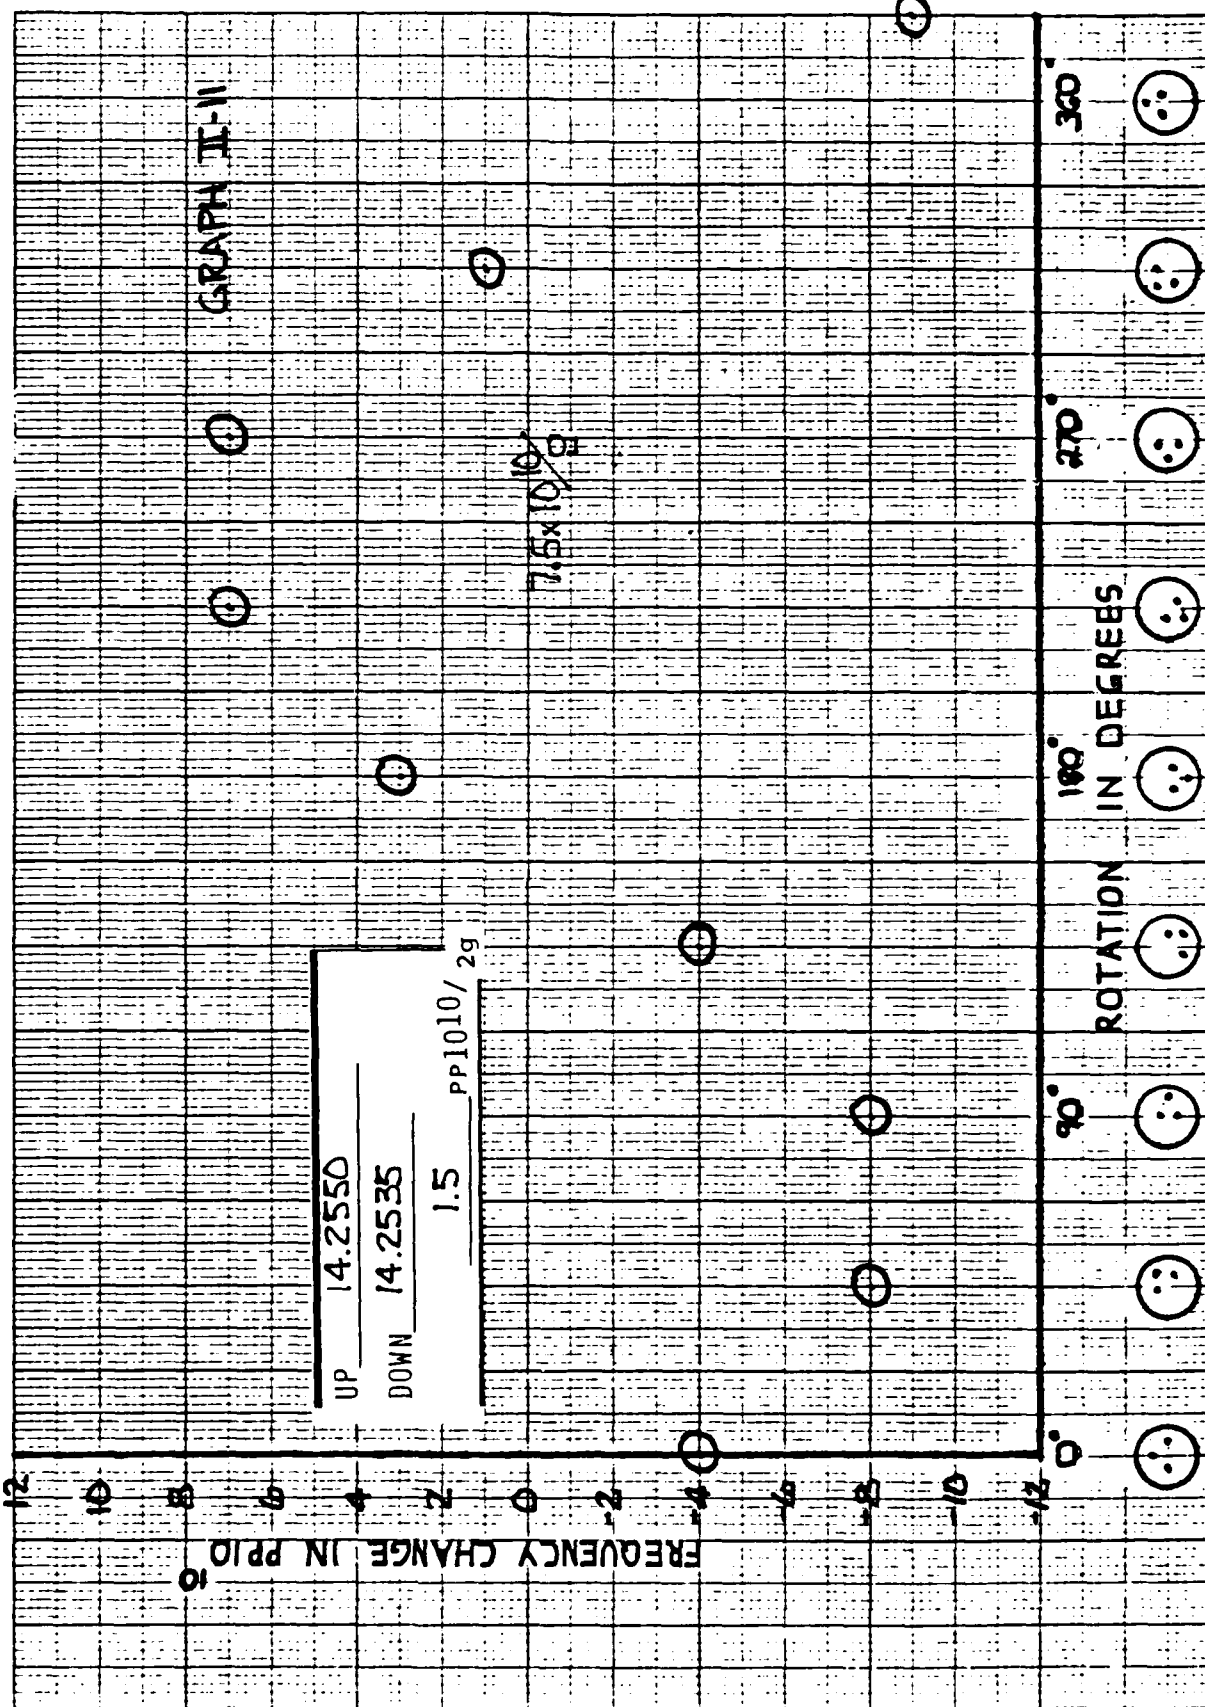


K-E 20 X 20 TO THE INCHES 1 X 10 TO THE INCHES  
NEUTRAL AESSIFIED AND INCHES

46124C

SERNO. 1383

5.0/5/30

DATE 9-8-80

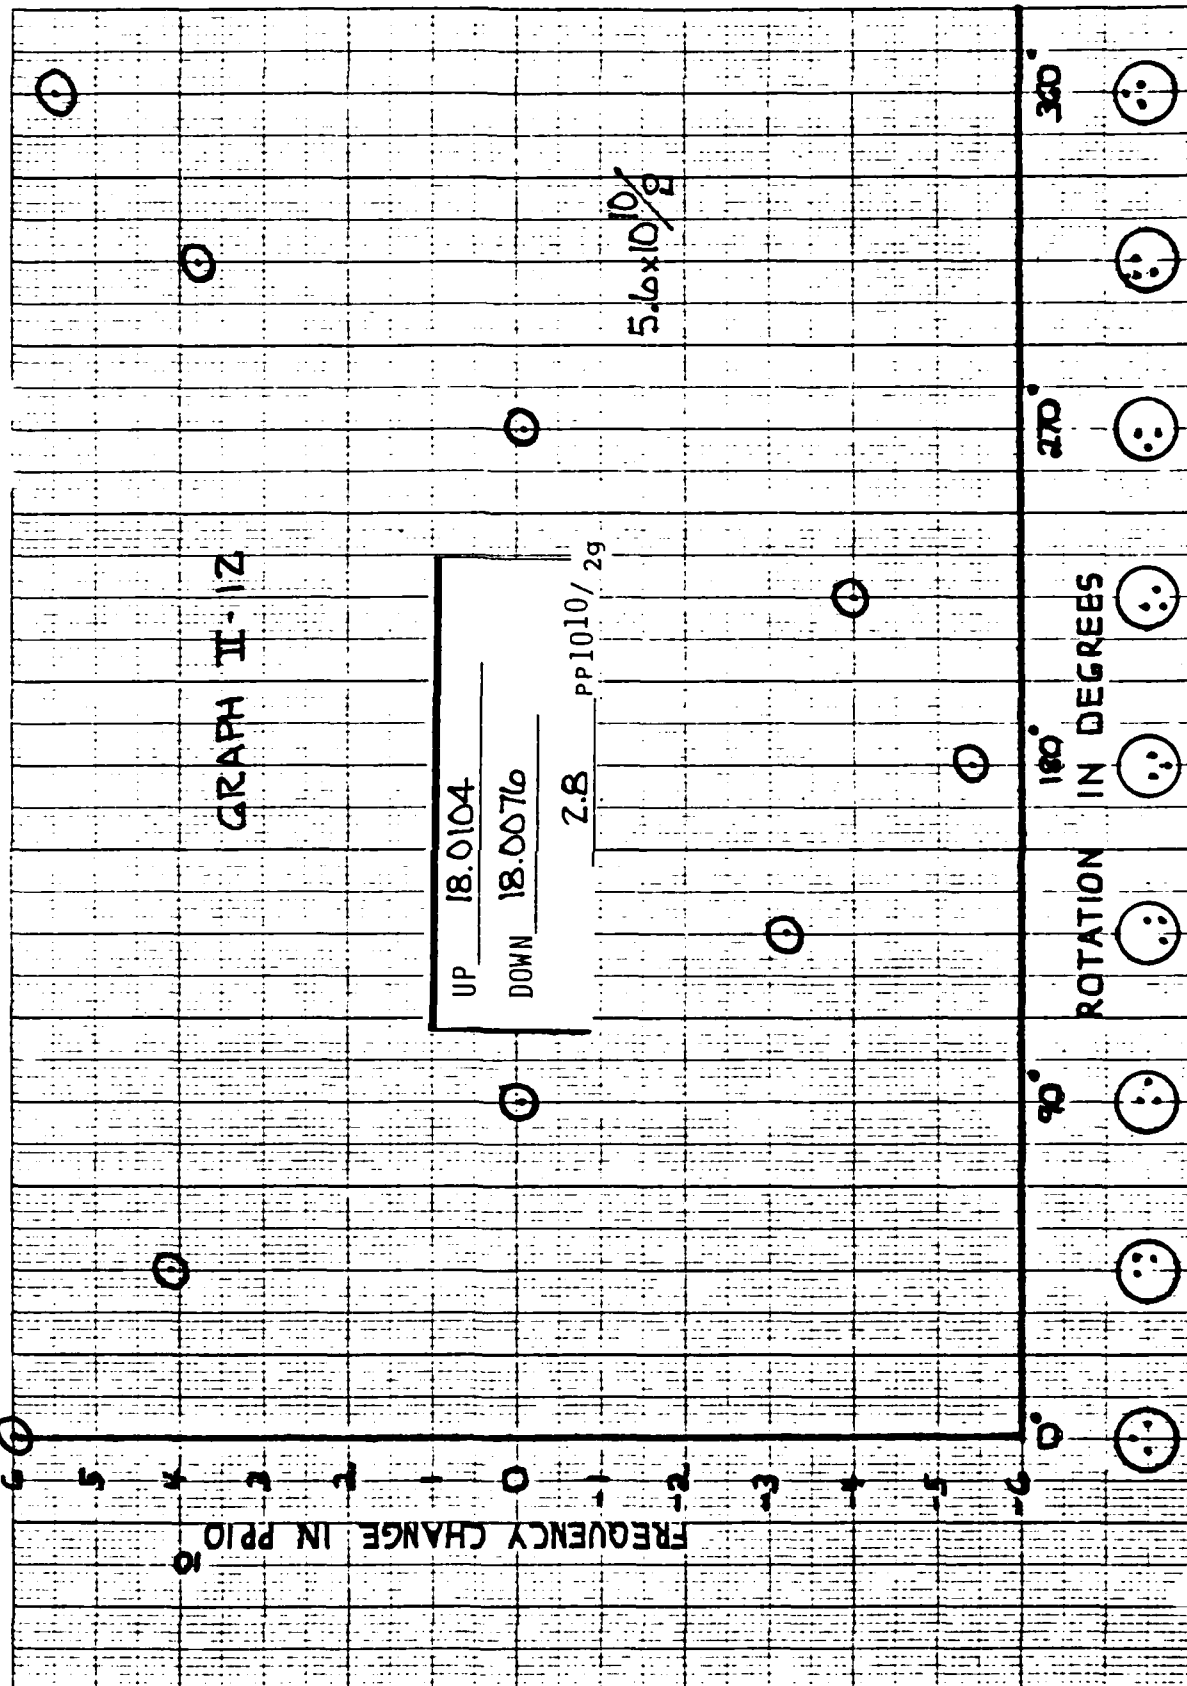


K-E 20 X 20 TO THE INCHES / X 10 100 1000  
KUTTER WESCHOLD MADE IN U.S.A.

46 1240

SERNO. 1384

5.0/s/sc


DATE 9-8-80

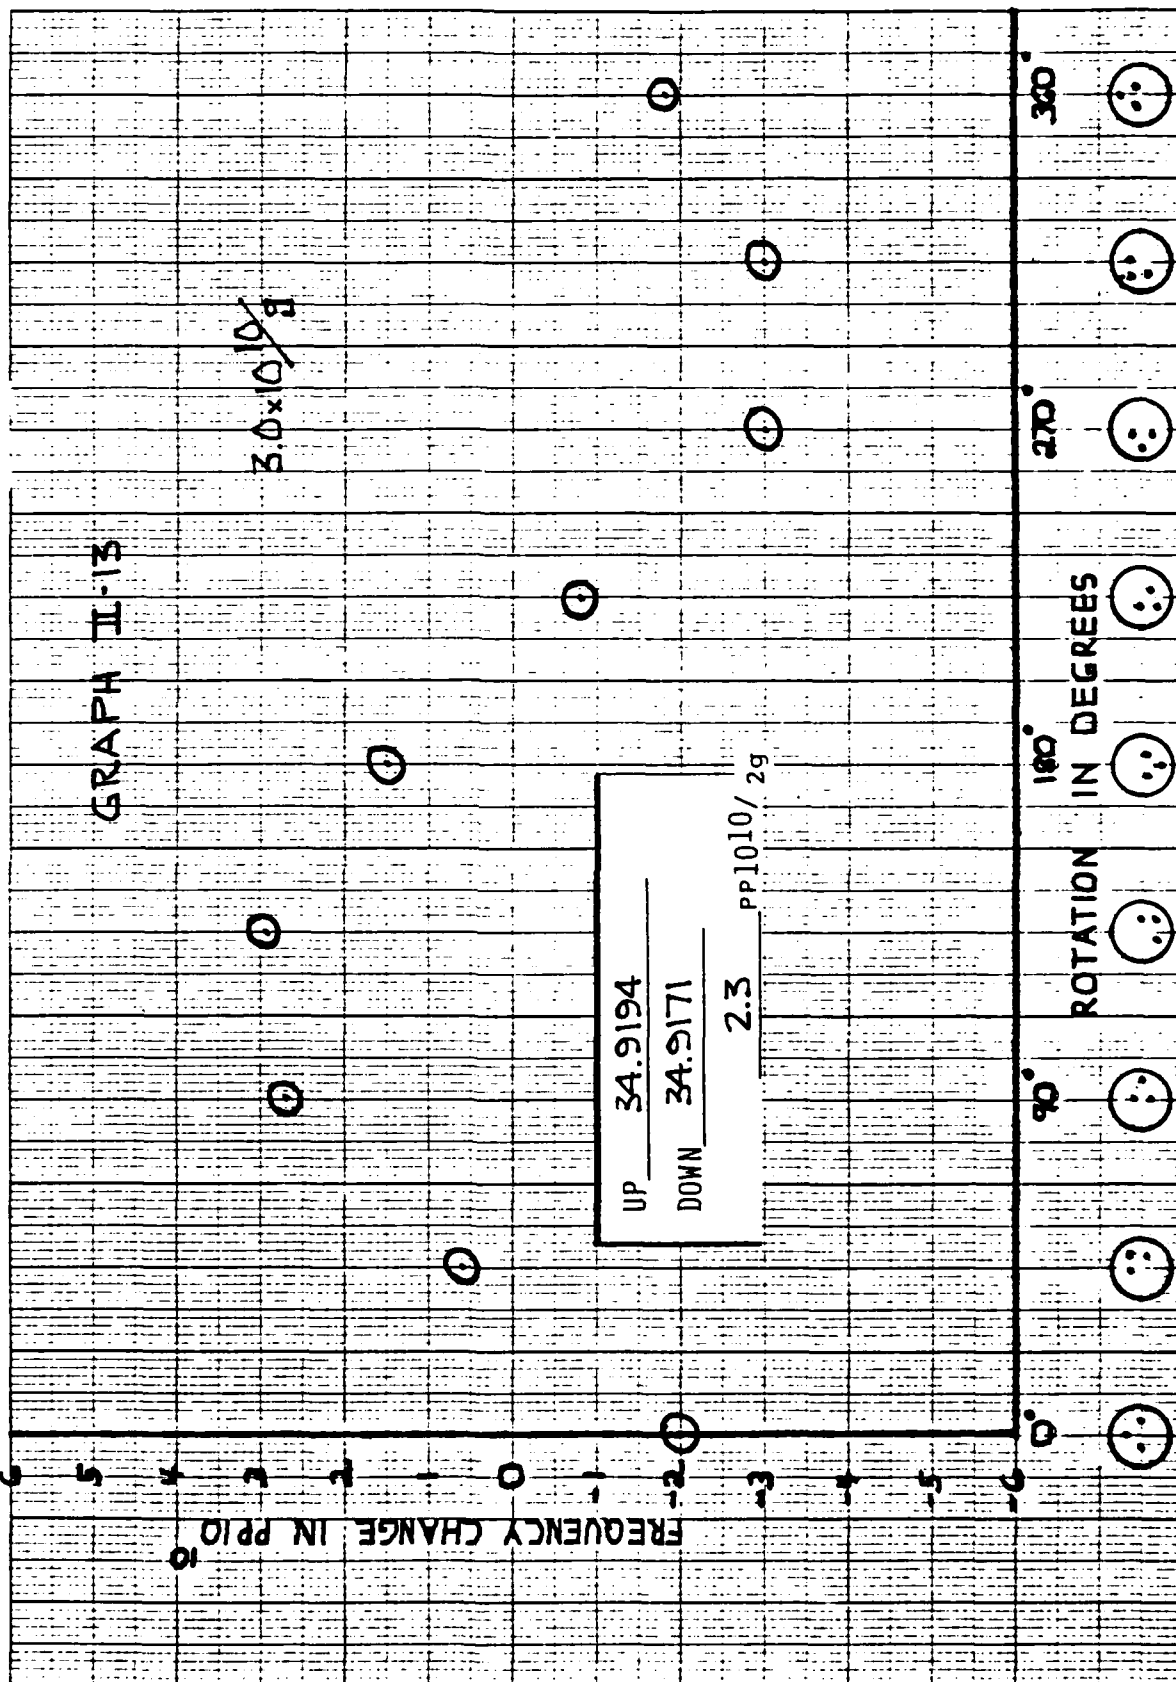

K-E 20 X 20 THE INCHES X 10 INCHES  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46 1240

SERNO. 1385      5.0/5/3C      DATE 9-8-80

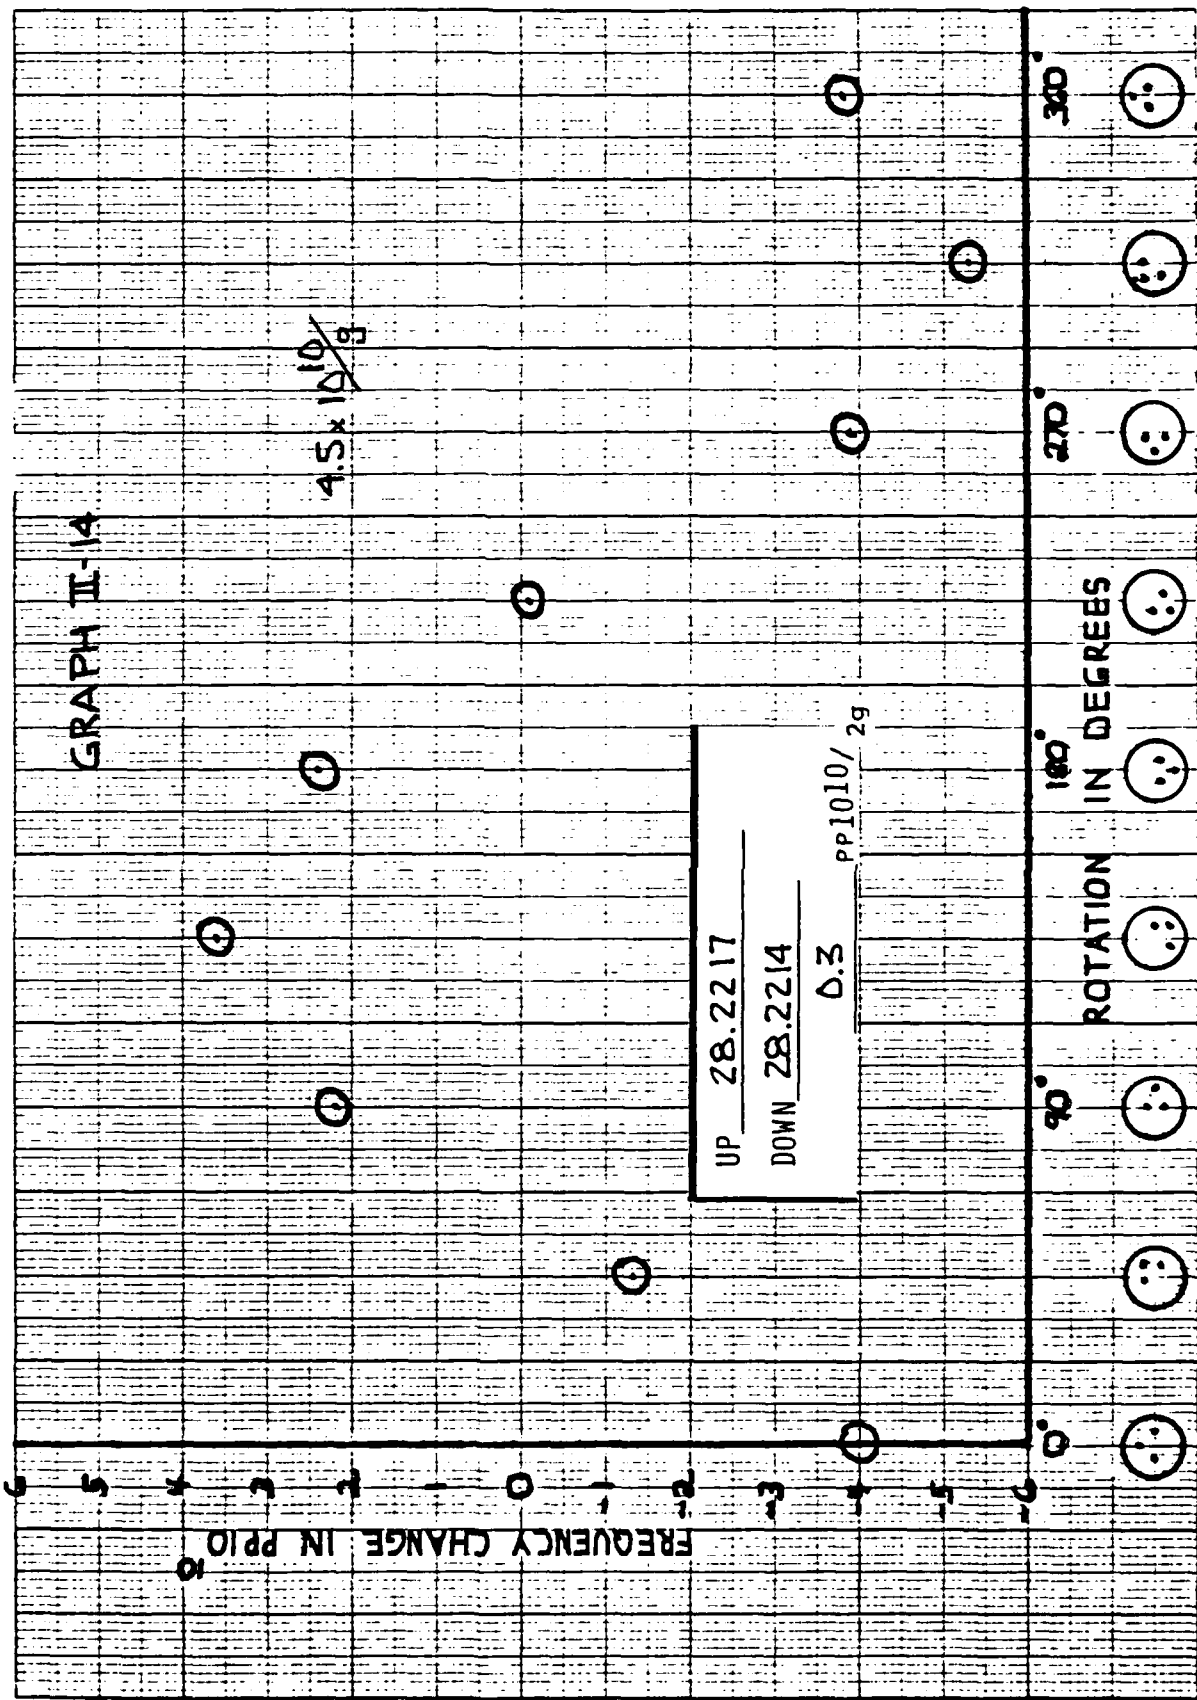




K-E 20 X 20 TO THE INCH • 7 X 10 MPH U.S.  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46 124C

SERNO. 1386

5.0/5/55

DATE 9-8-80

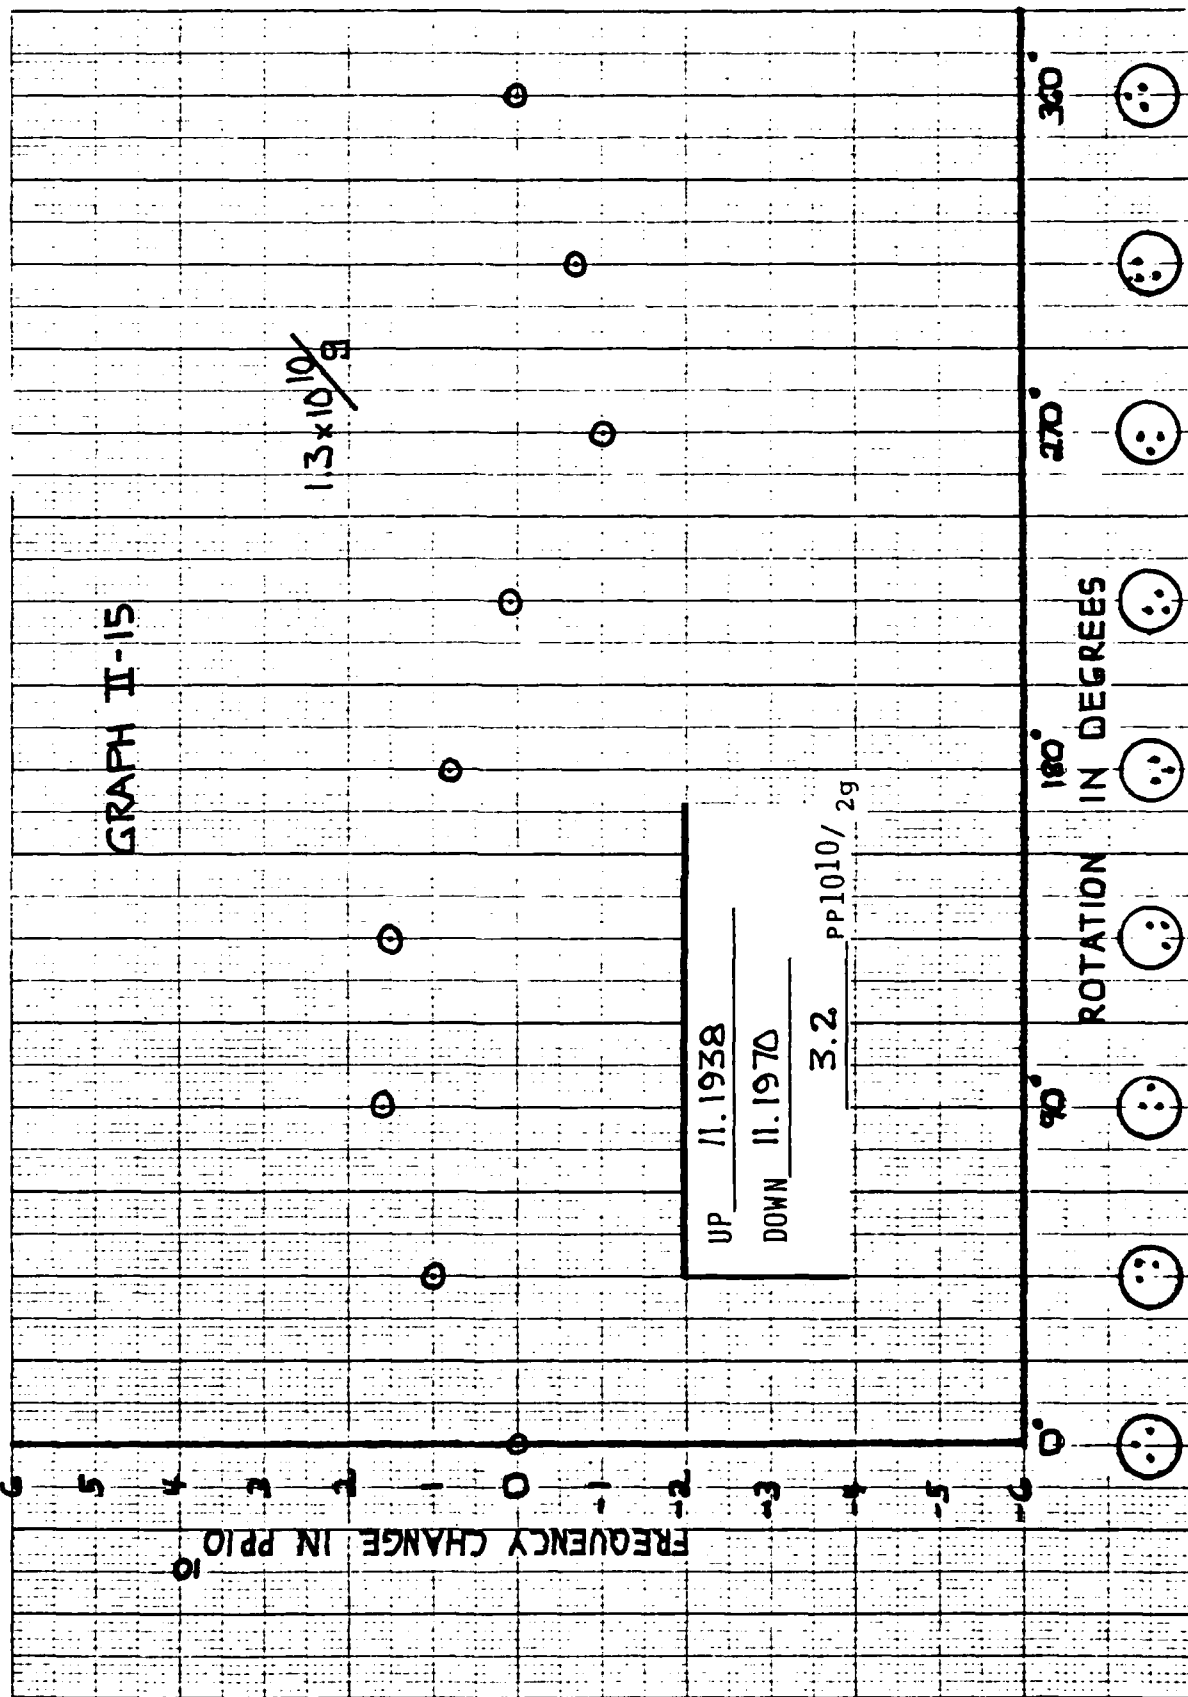


K-E 20 X 20 TO THE INCH • 7 X 10 (NO. 10) S.  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46124C

SER. NO. 3721 DATE 9-8-80

5.0/5/SC

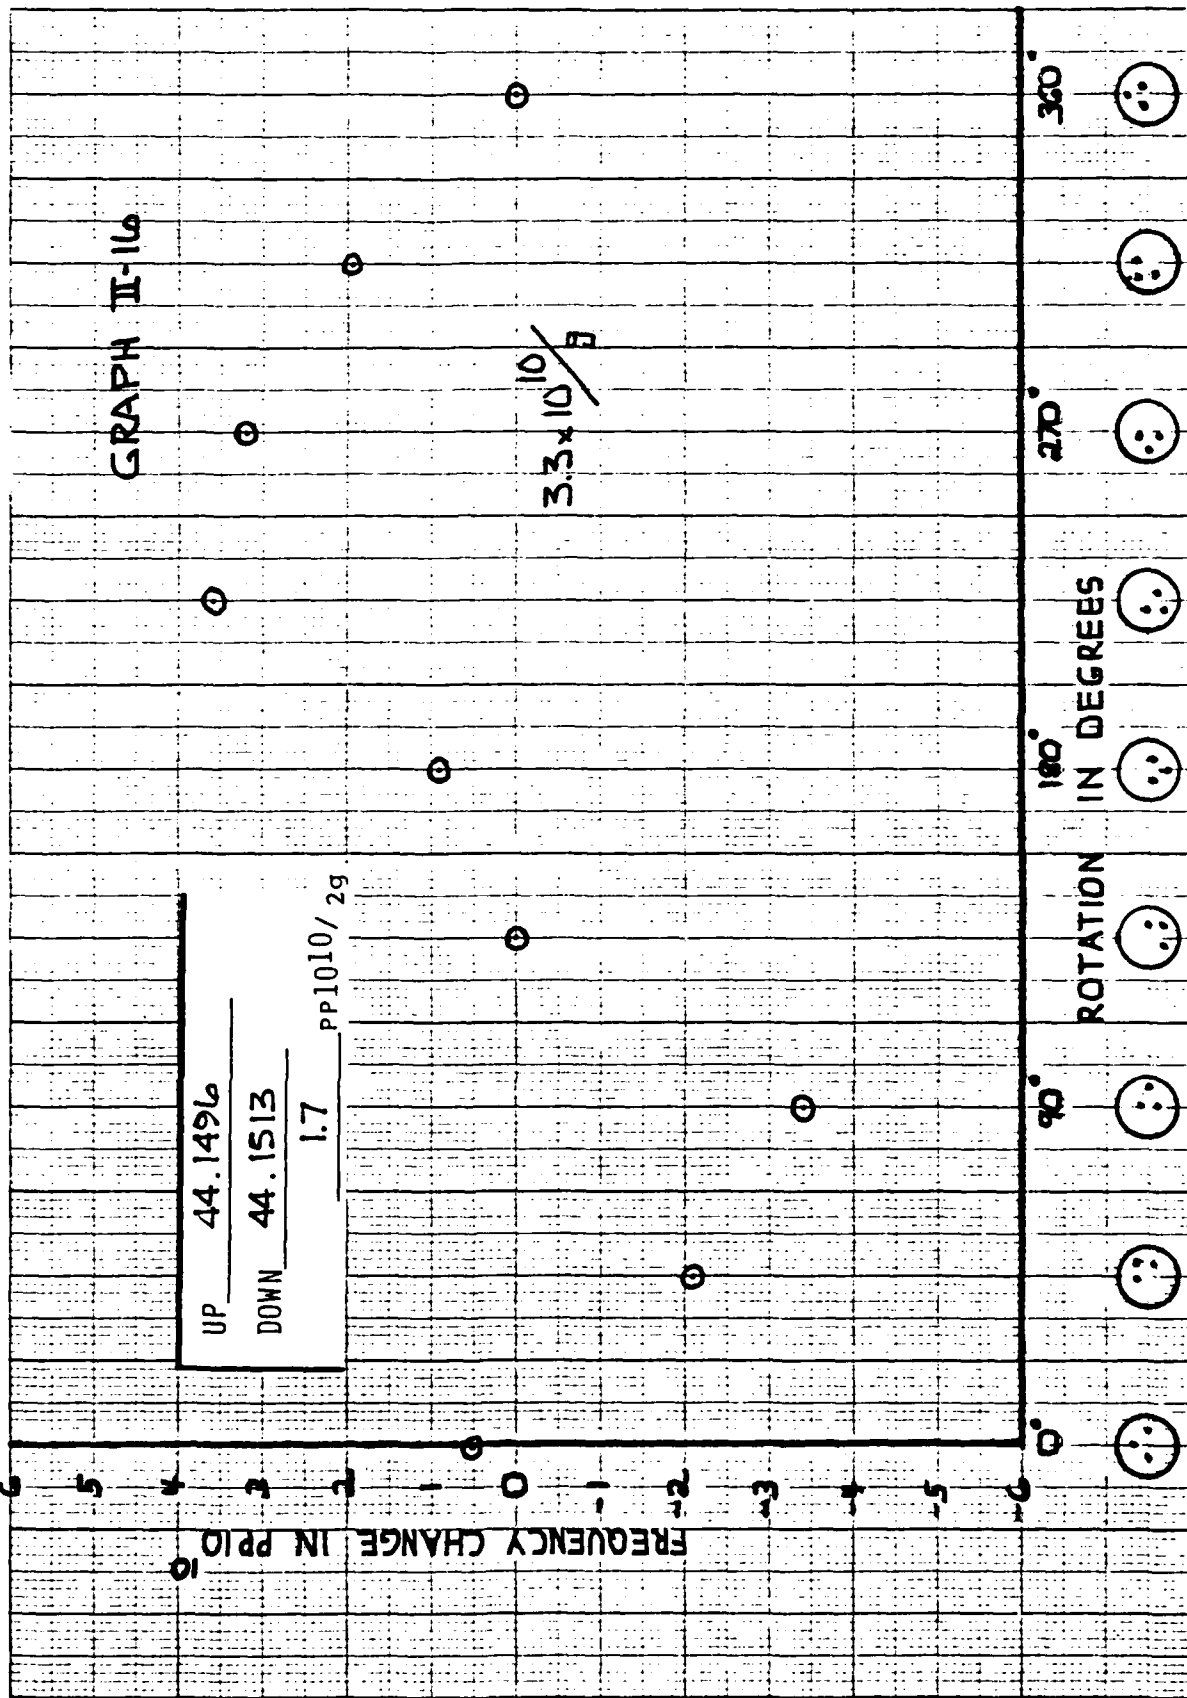


K-E 20 X 20 TO THE INCH 4.7 X 10 IN IN IN'S  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46124C

SERNO. 3725 DATE 9-8-80


5.0/s/c

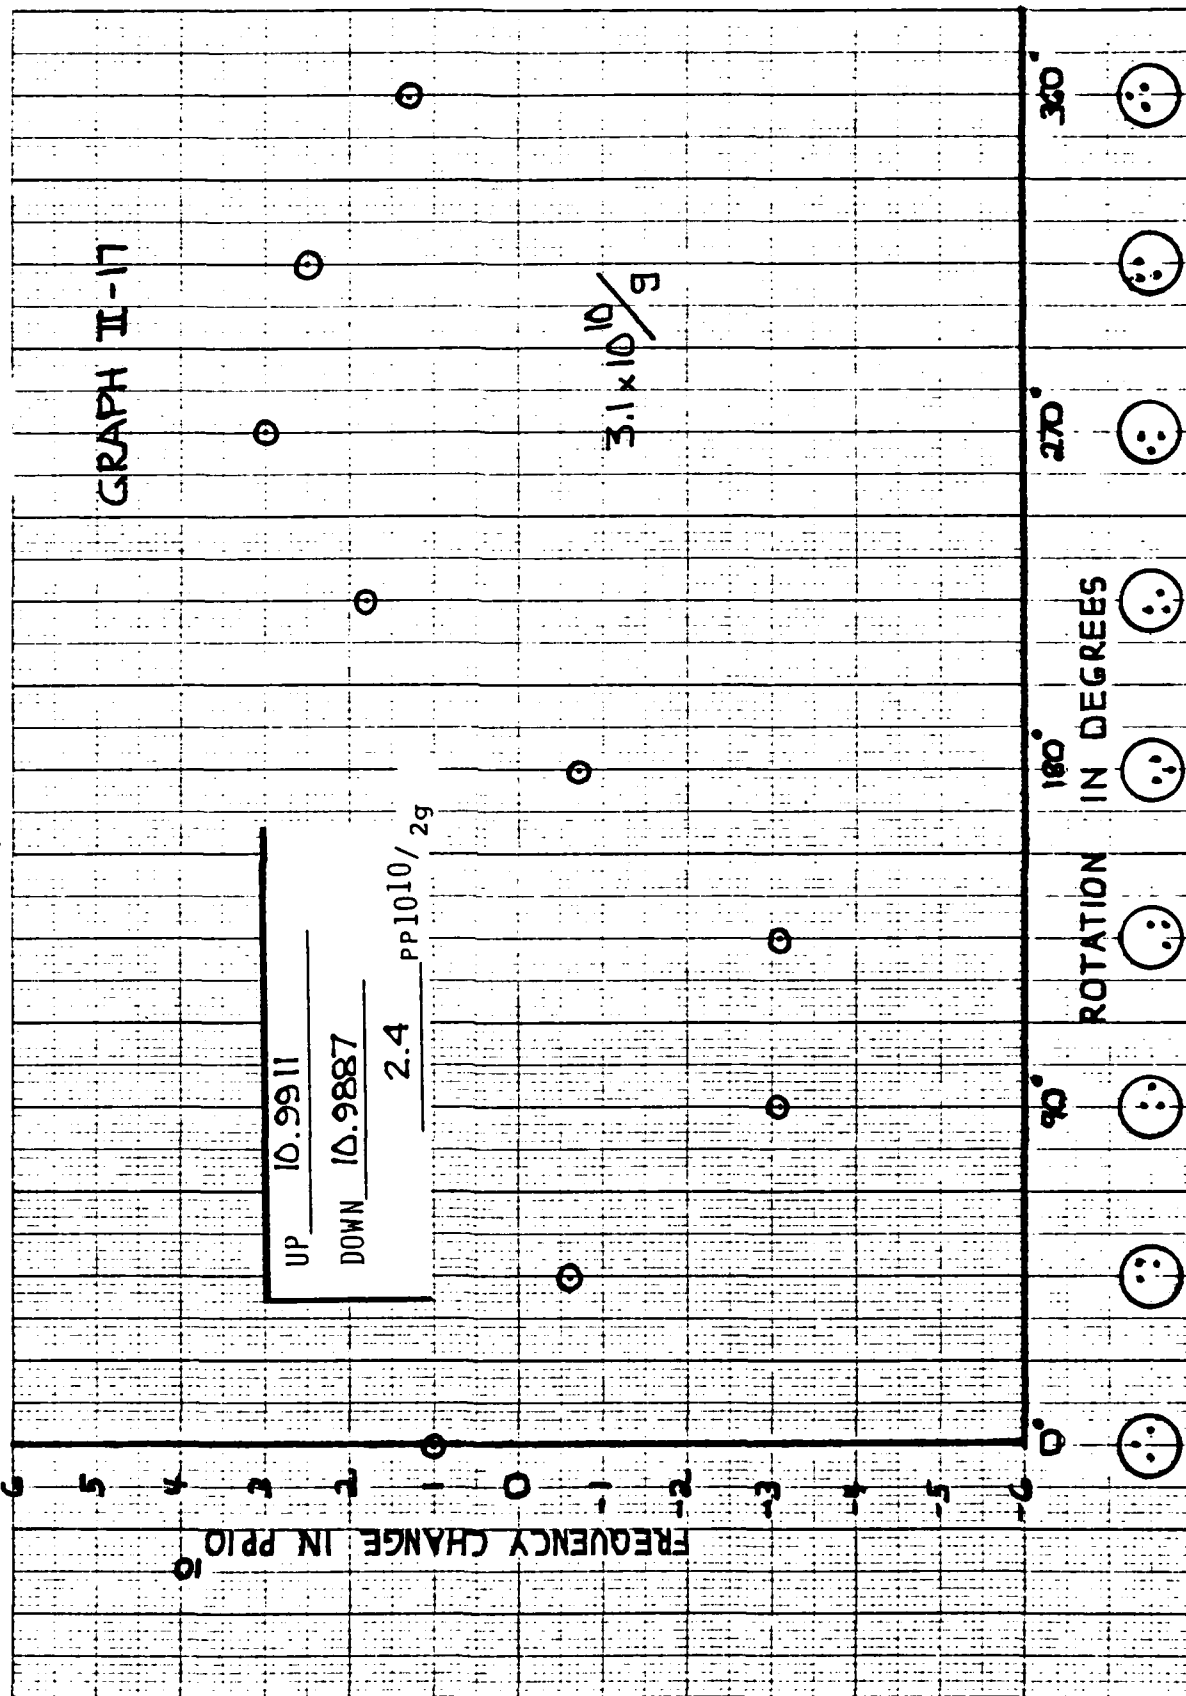

K-2 KEUFFEL & ESSER CO. MADE IN U.S.A.

46 1240


SERNO. 3726 S.O/5/SC DATE 9-8-80

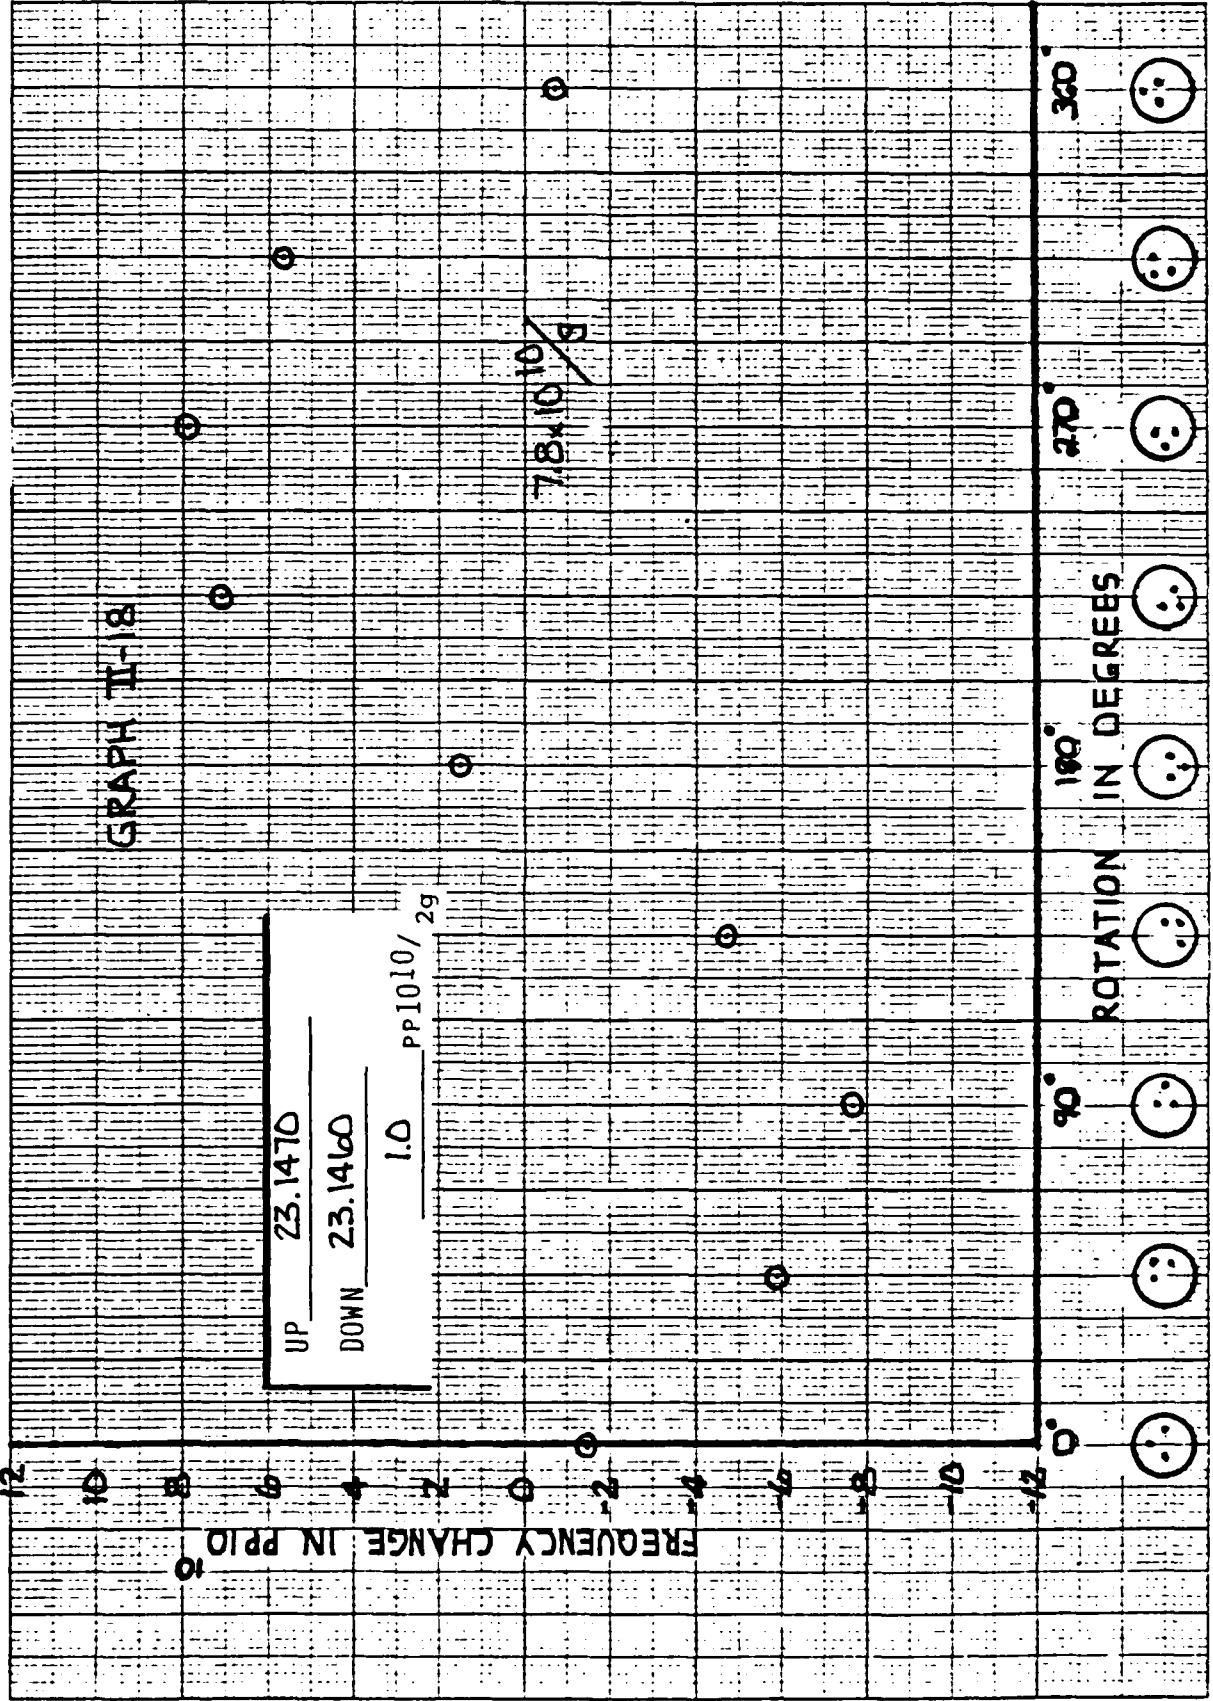

SERNO. 3728

5.0/s/sc

DATE 2-8-89

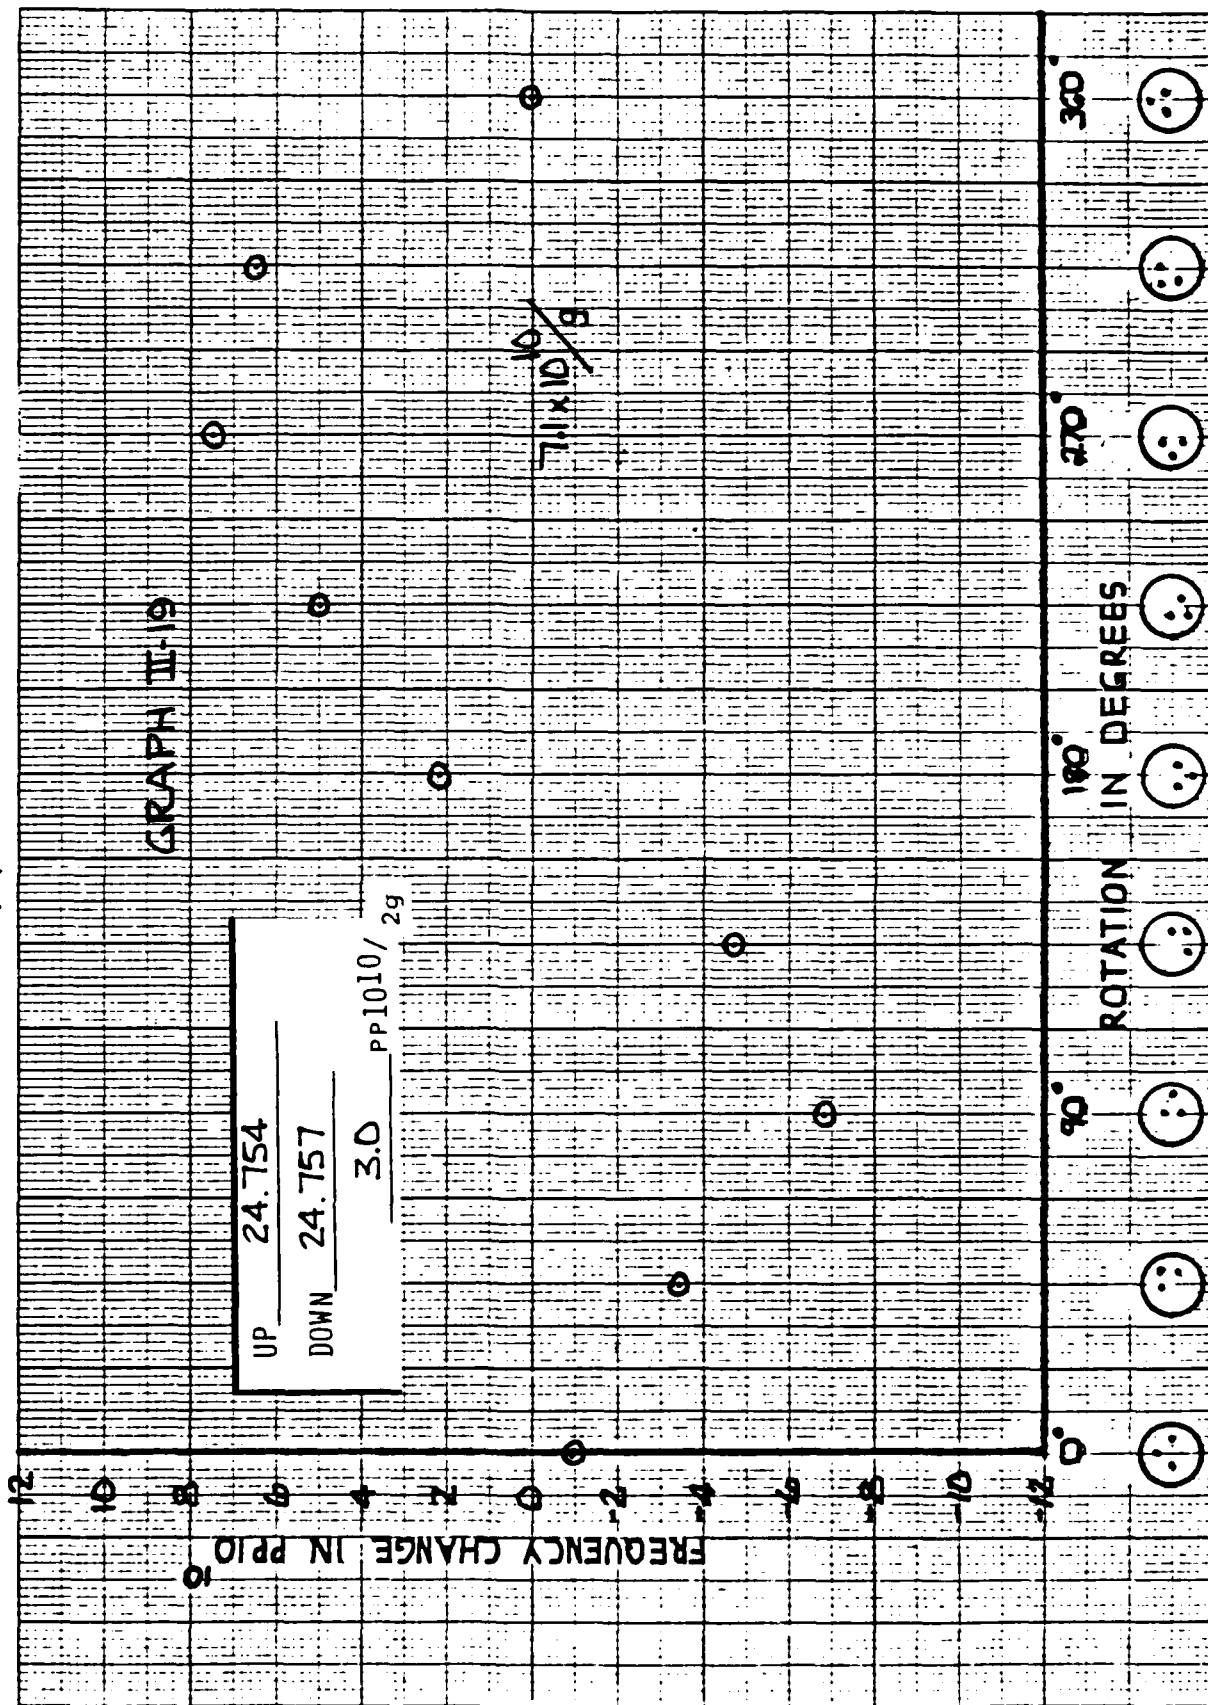


K-E 20 X 30 TO THE INCH 1/2 X 10 INCHES  
KEUFEL & ESSER CO. MADE IN U.S.A.

46 1240

SERNO. 3729


5.0/5/sc

DATE 2-8-80

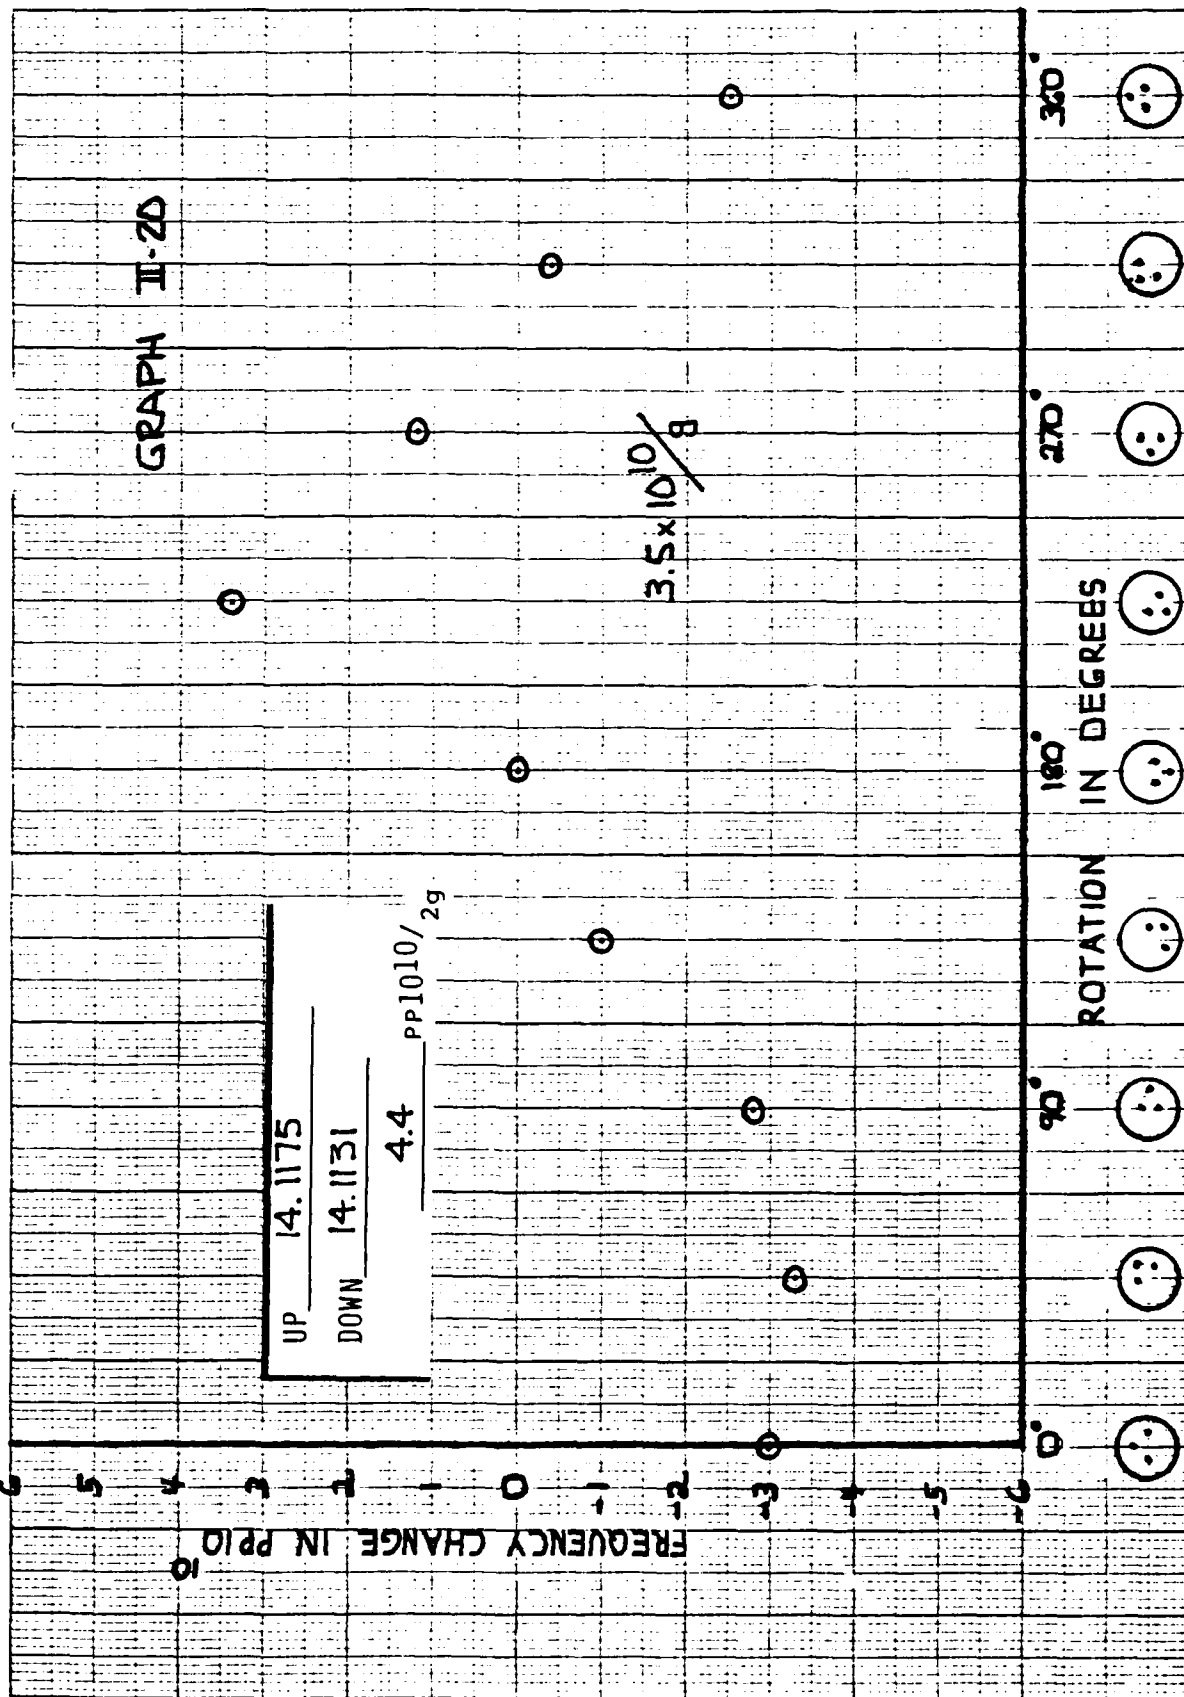

SERNO. 3653 DATE 2-8-80

5.0/5/SC

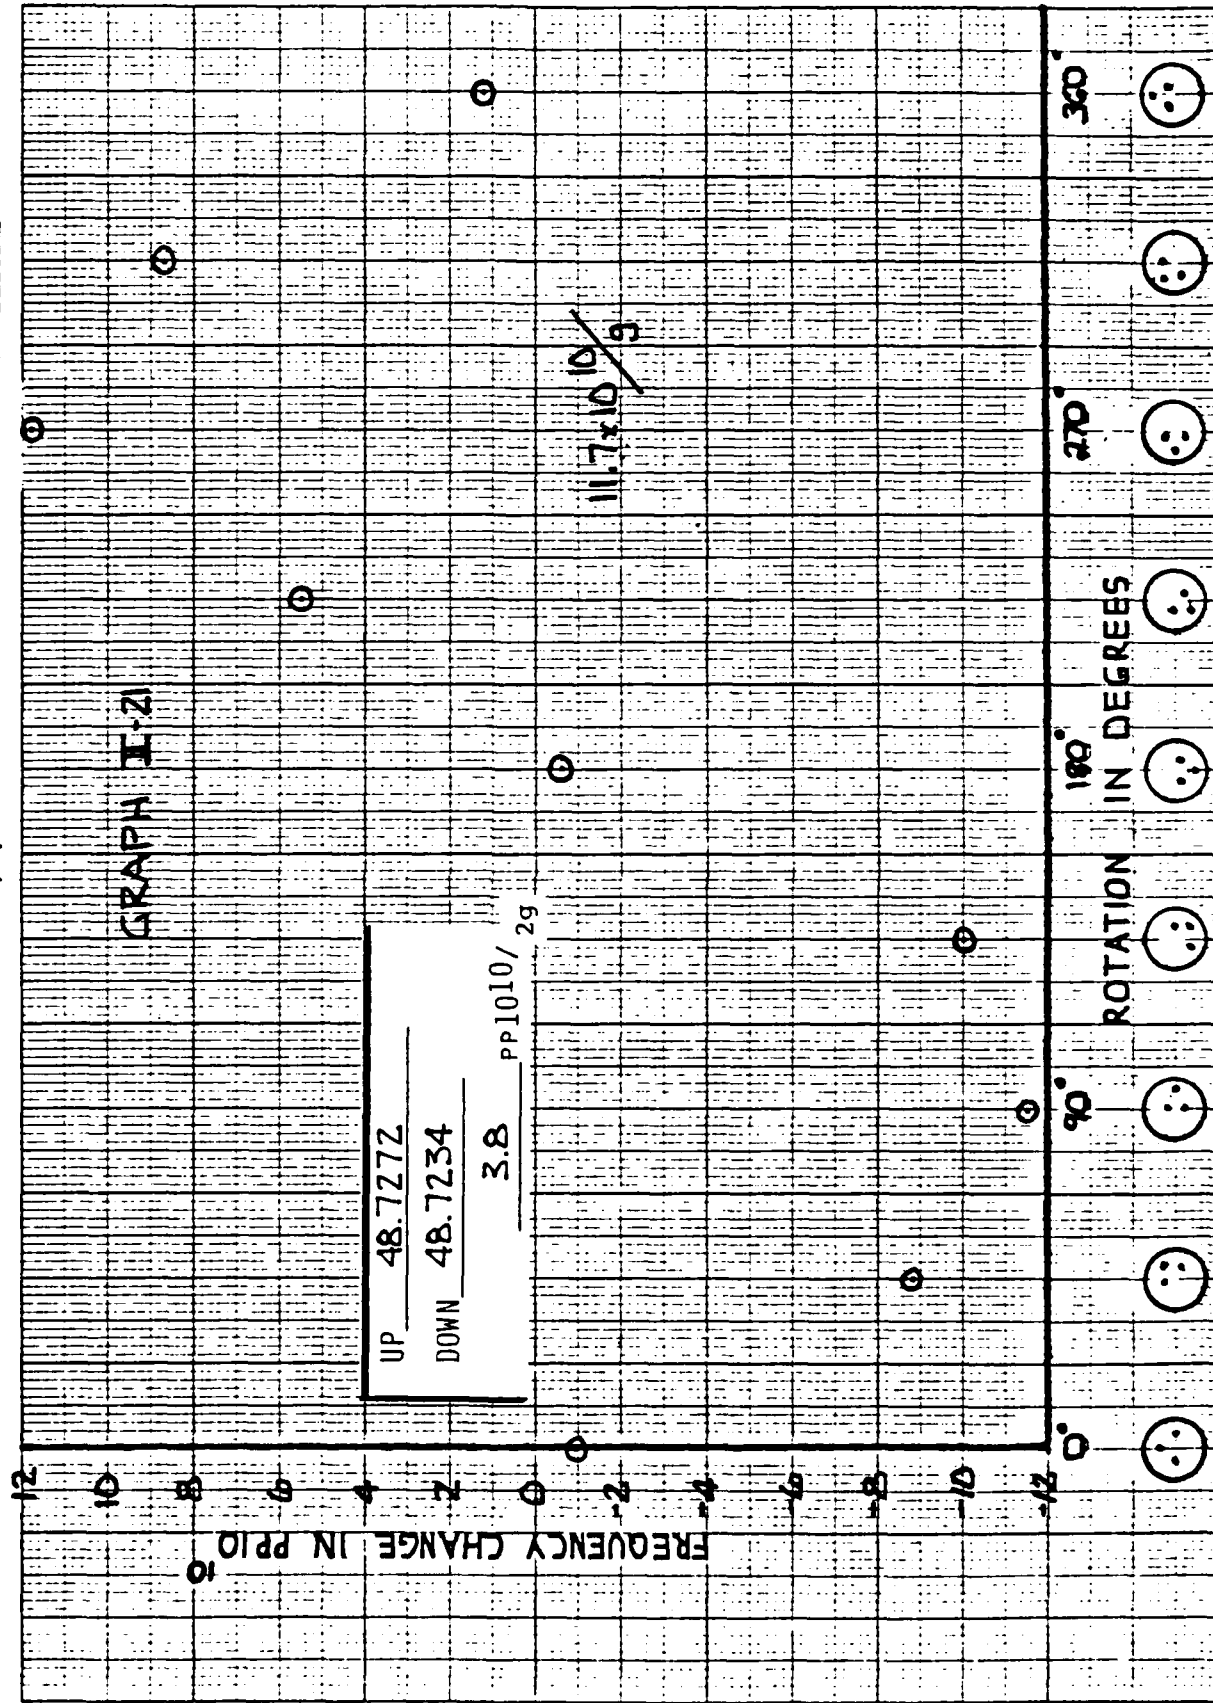


K-E 20 X 20 TO THE INCH 7 X 10 IN. HES  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46 124C

SERNO. 3655

5.015/sc

DATE 9-8-80

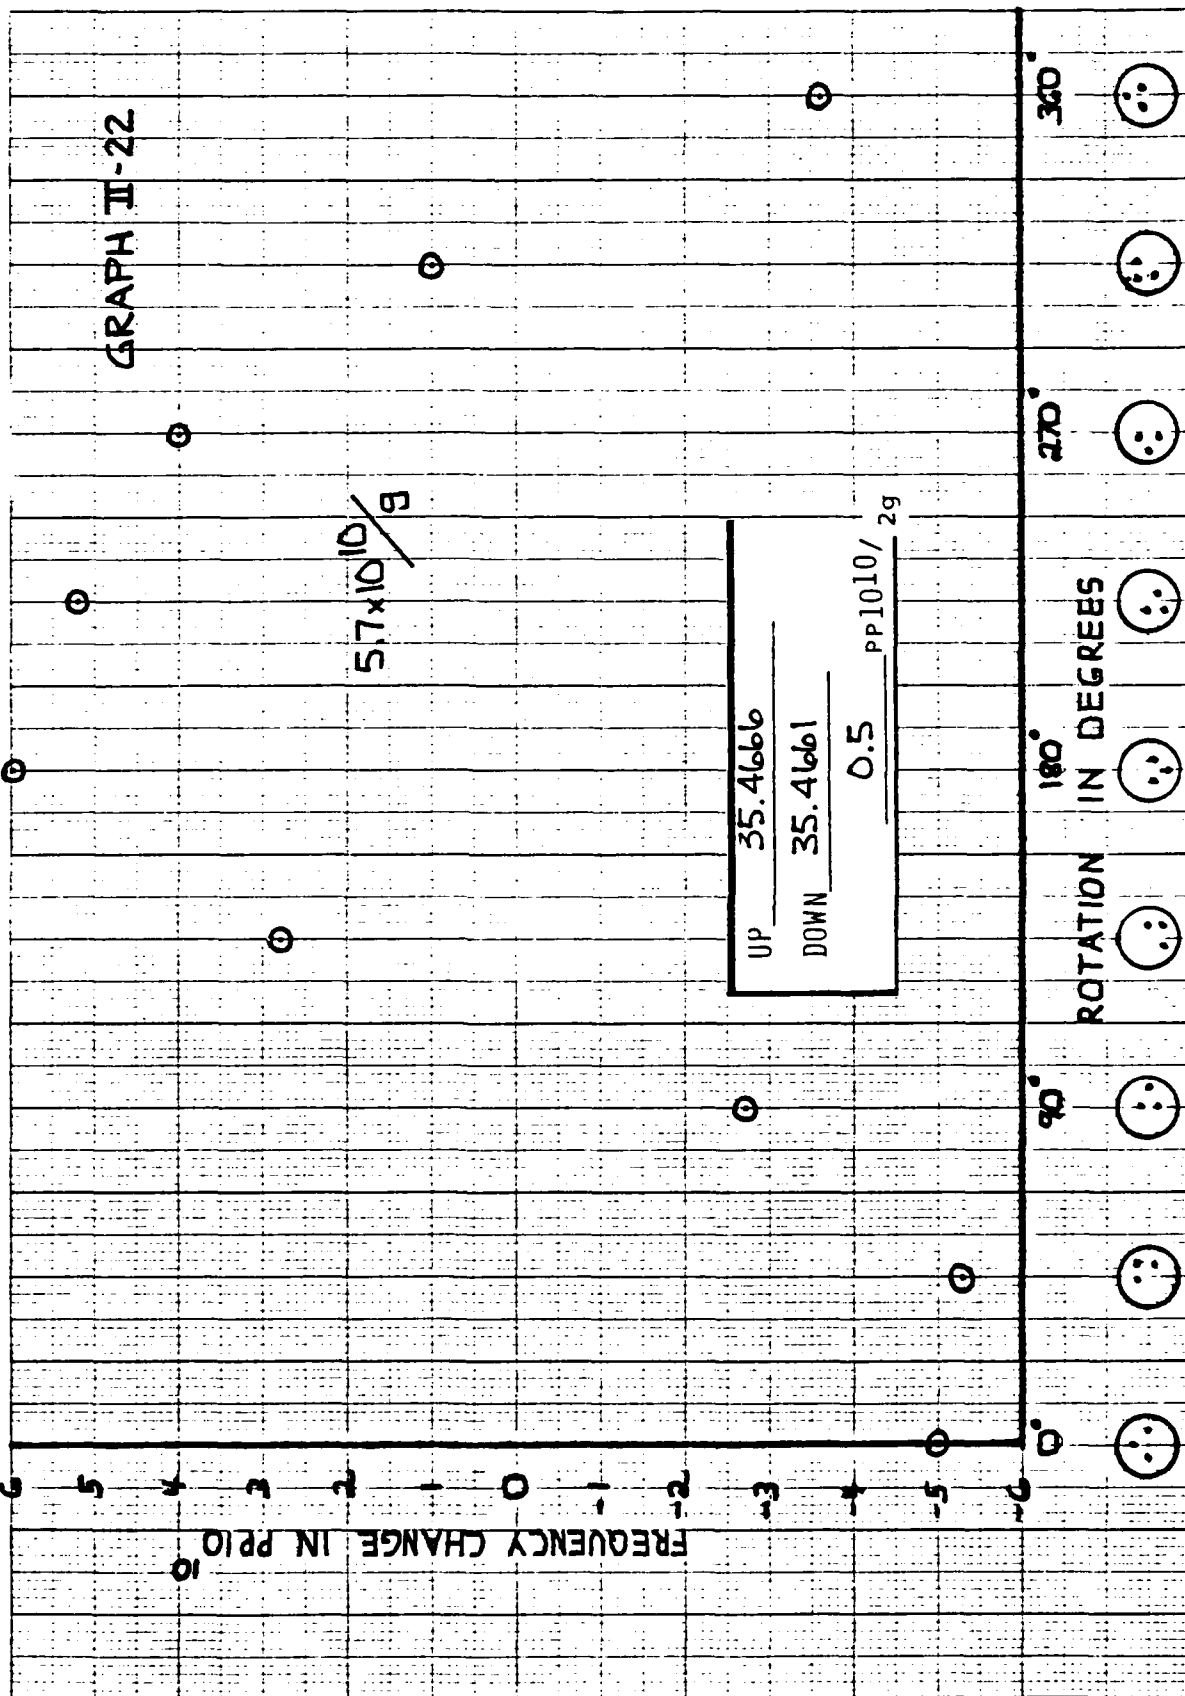




K-E 20 X 20 TO THE INCHES  
KIDNEY LENS 0.0 0.0 0.0 0.0

46 124C

SERNO. 3734

5.0/5/5C

DATE 2-8-80

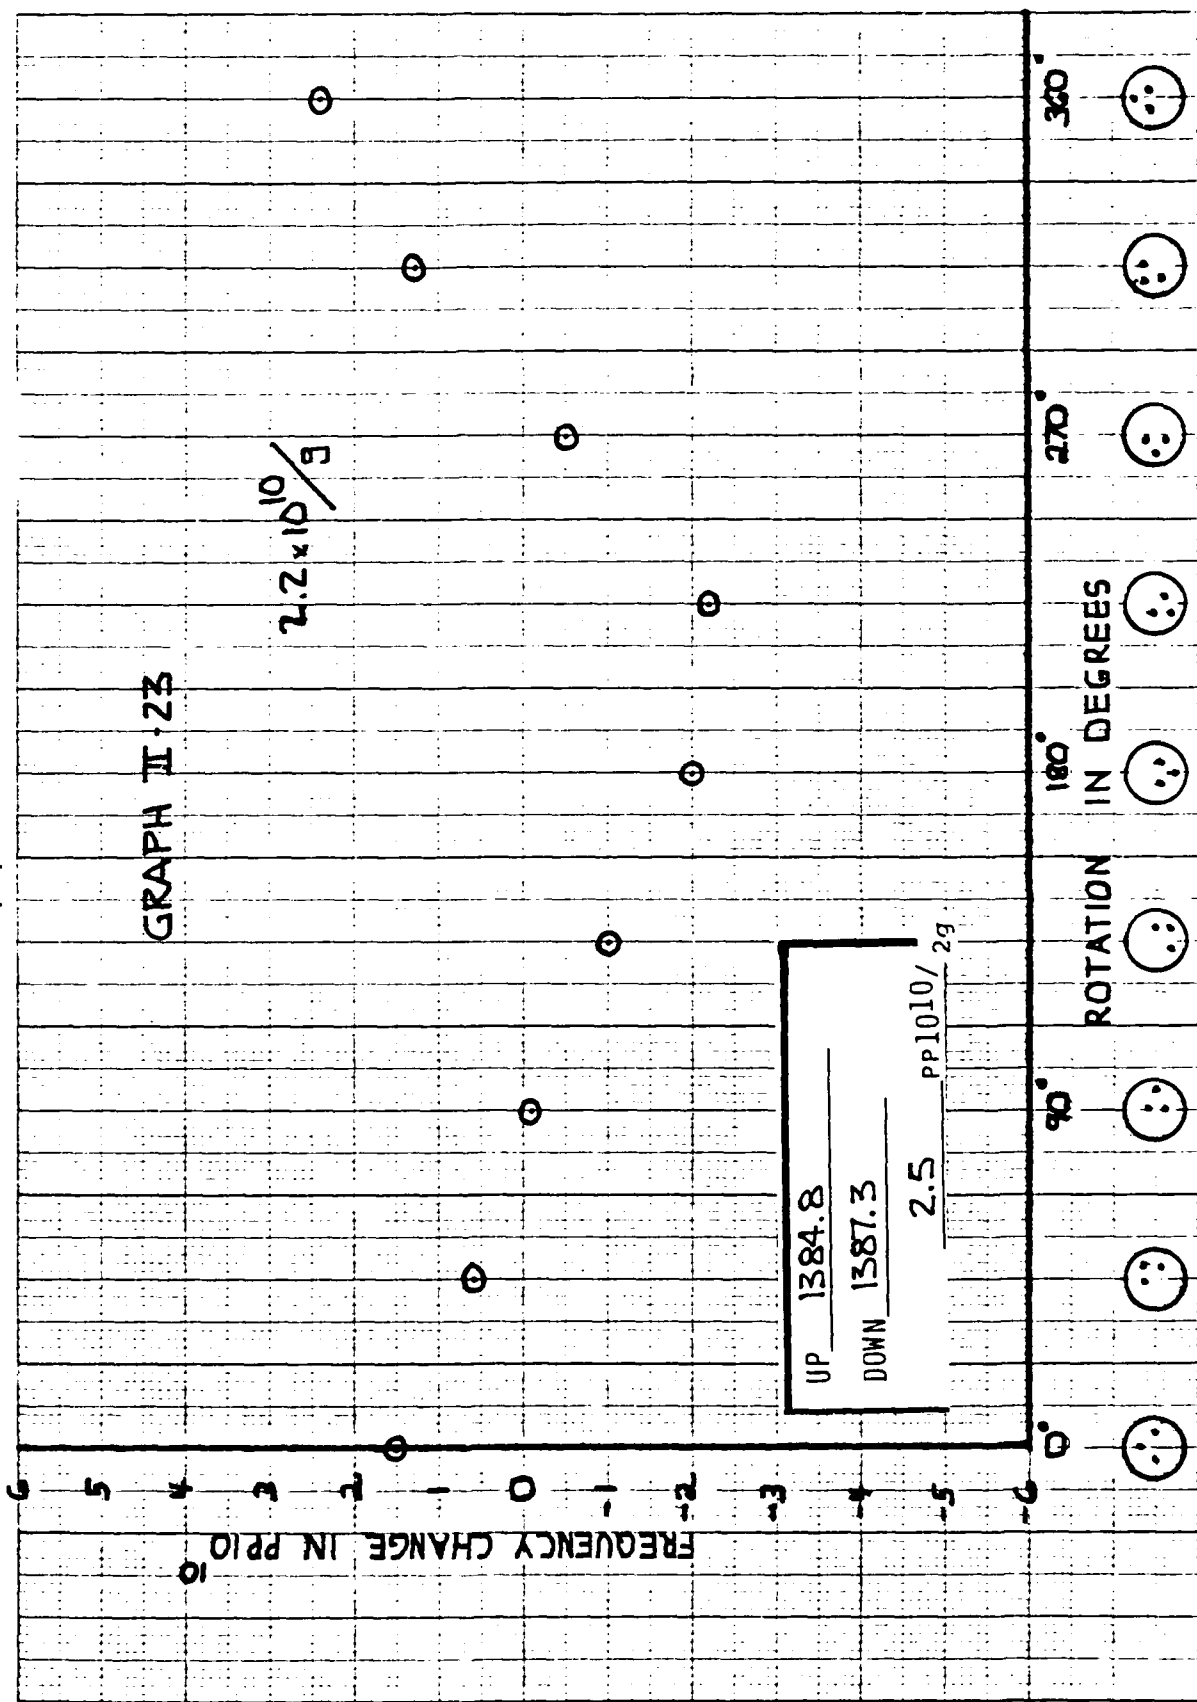

AD-A094 682

FREQUENCY ELECTRONICS INC NEW HYDE PARK N Y  
VIBRATION RESISTANT QUARTZ CRYSTAL RESONATORS. (U)  
JAN 81 B GOLDFRANK, A WARNER

F/G 9/1

DAAK20-79-C-0272

UNCLASSIFIED

DELET-TR-79-0272-2

NL

2 OF 2

AD  
ALWAYS


END  
DATE  
FILMED  
3 81  
DTIC

K-2 K-20 10 LINE INCHES  
K-2 KLUFFEL & ESSER CO. MADE IN U.S.A.

46 1240

SERNO. 3735


DATE 9-8-80

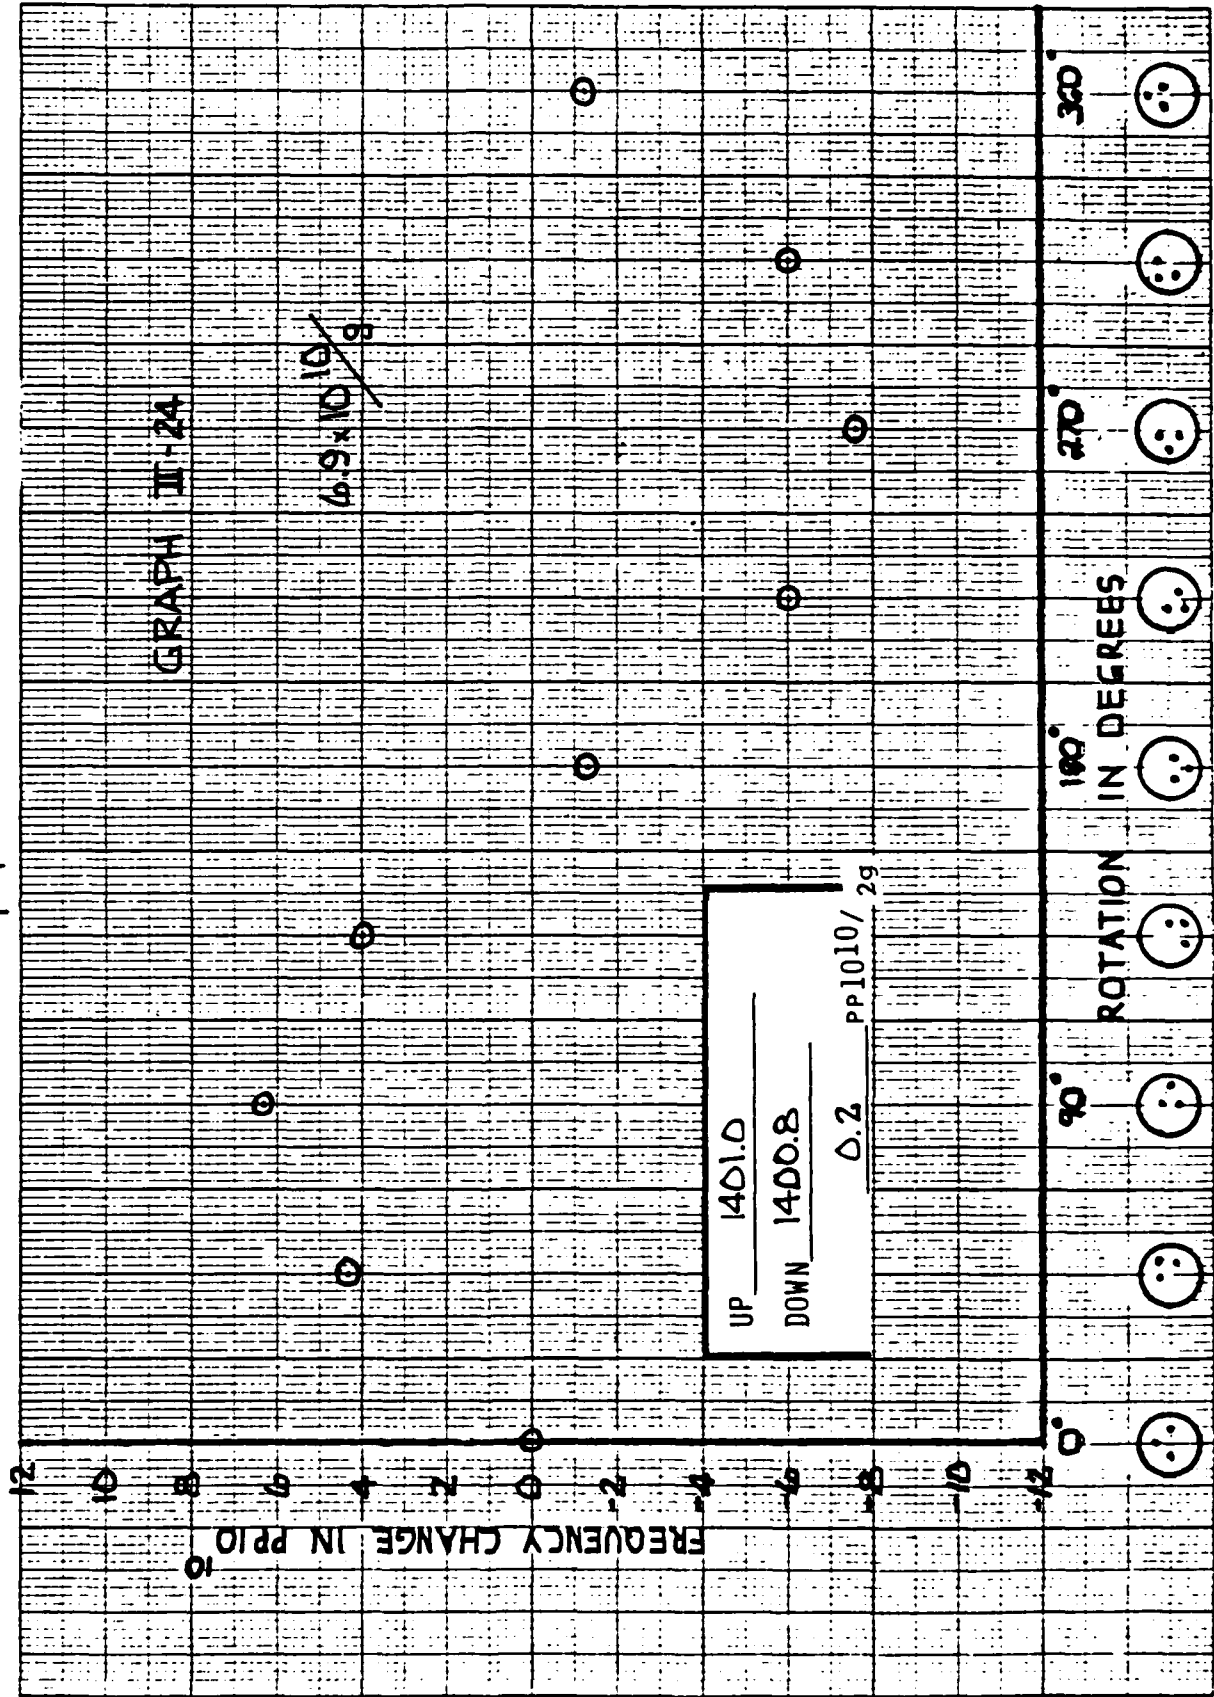

K-E 20 X 20 TO THE INCH 7 X 10 IN. H.C.  
KEUFFEL & ESSER CO. MADE IN U.S.A.

46 124C

SERNO. 3736 5.015/SC DATE 9-8-80

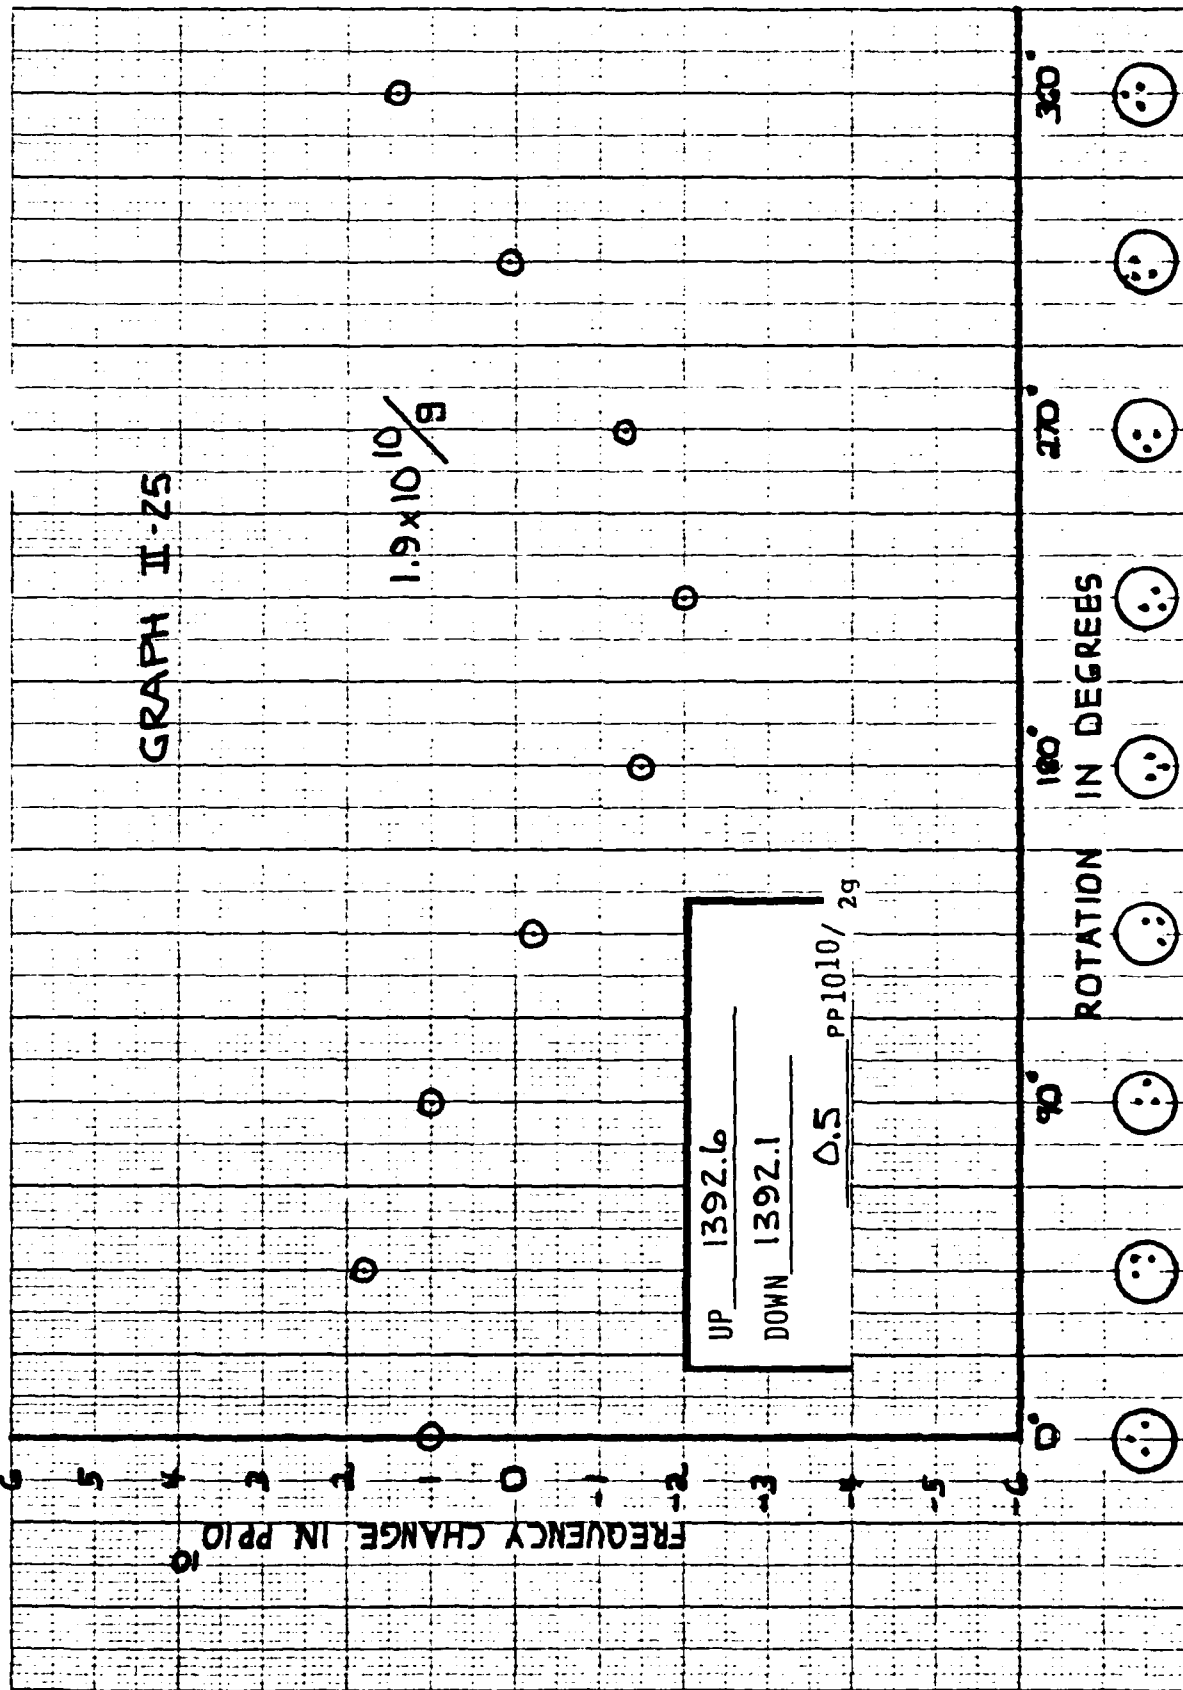


K-E 20 X 20 TO THE INCH • 7 X 10 PER INCH •  
KEUFEL & ESSER CO. MADE IN U.S.A.

46 1240

SERNO. 3903

5.0/s/sc

DATE 9-8-80

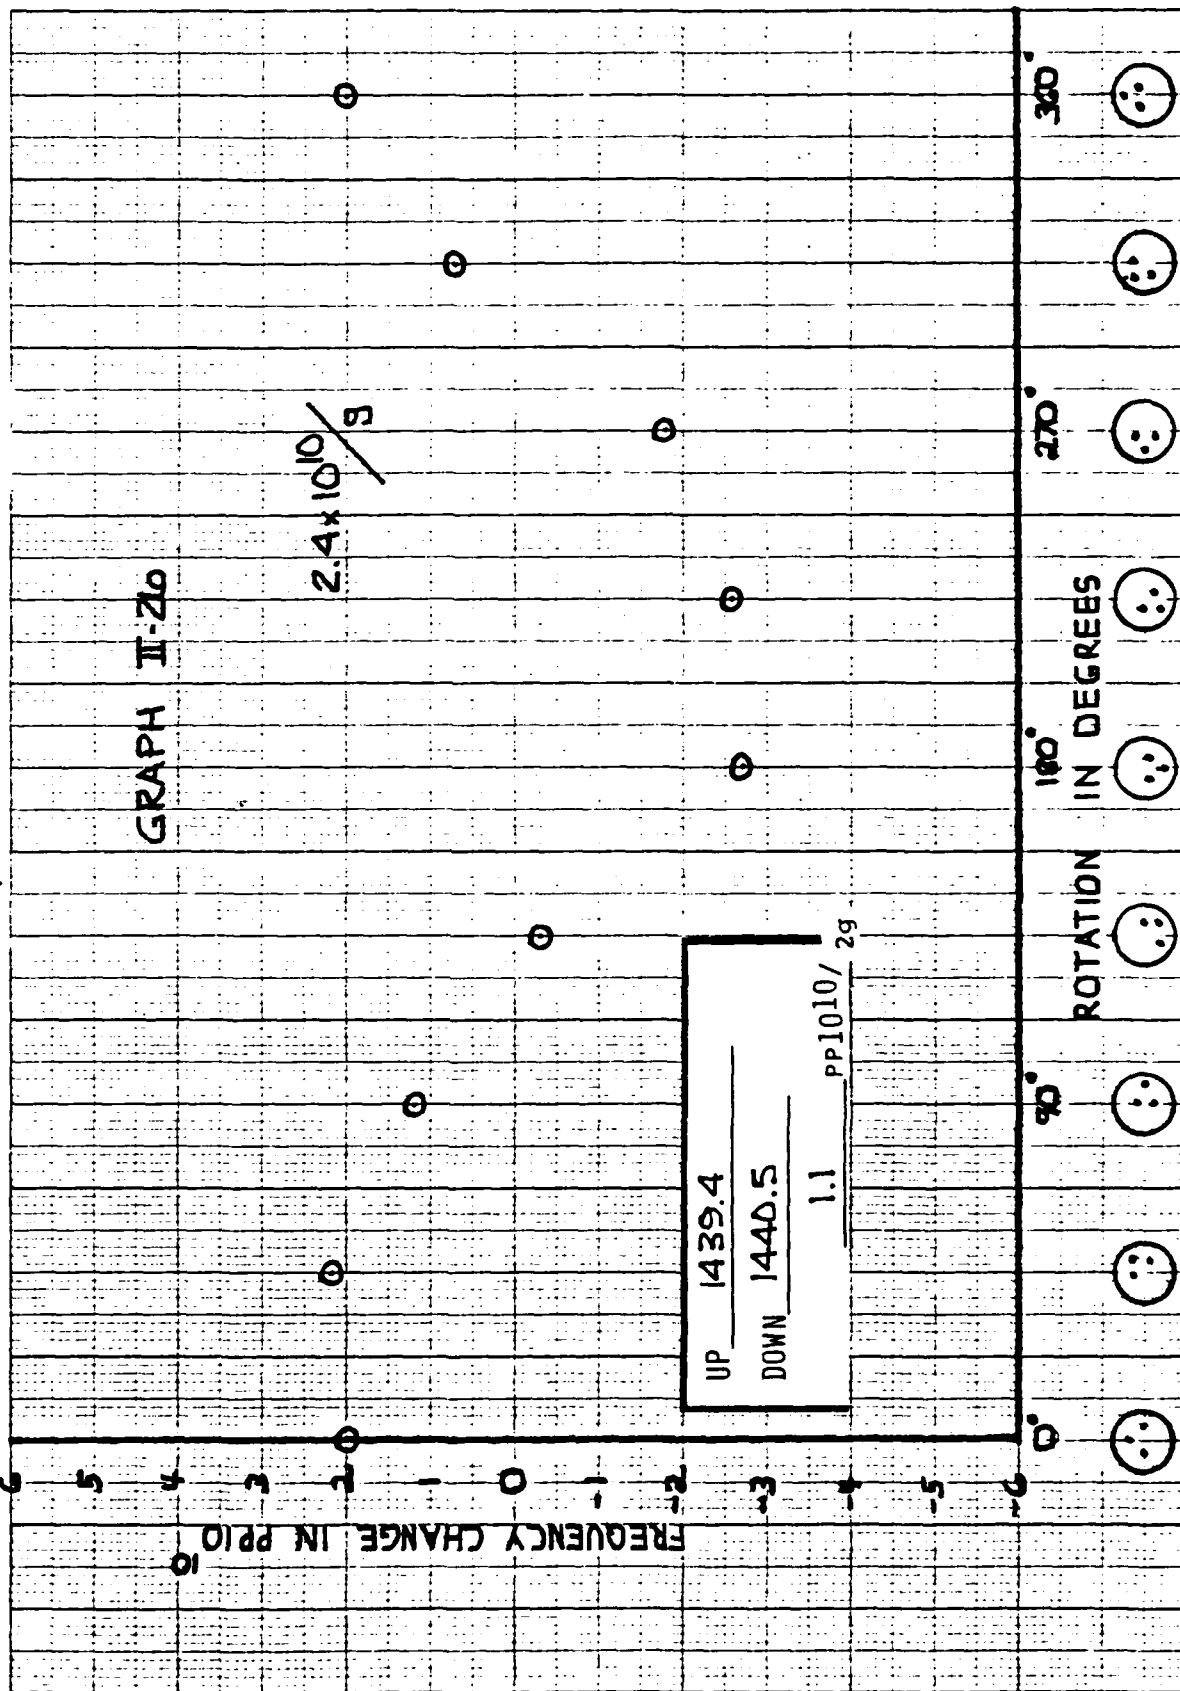


K-E 20 X 20 TO THE INCH • 7 X 10 IN THE  
KIEFFEL & ESSER CO. MADE IN U.S.A.

46 124C

SER. NO. 3910      5.0/5/3C      DATE 9-8-80

GRAPH II-27

$2.0 \times 10^{10} / 3$

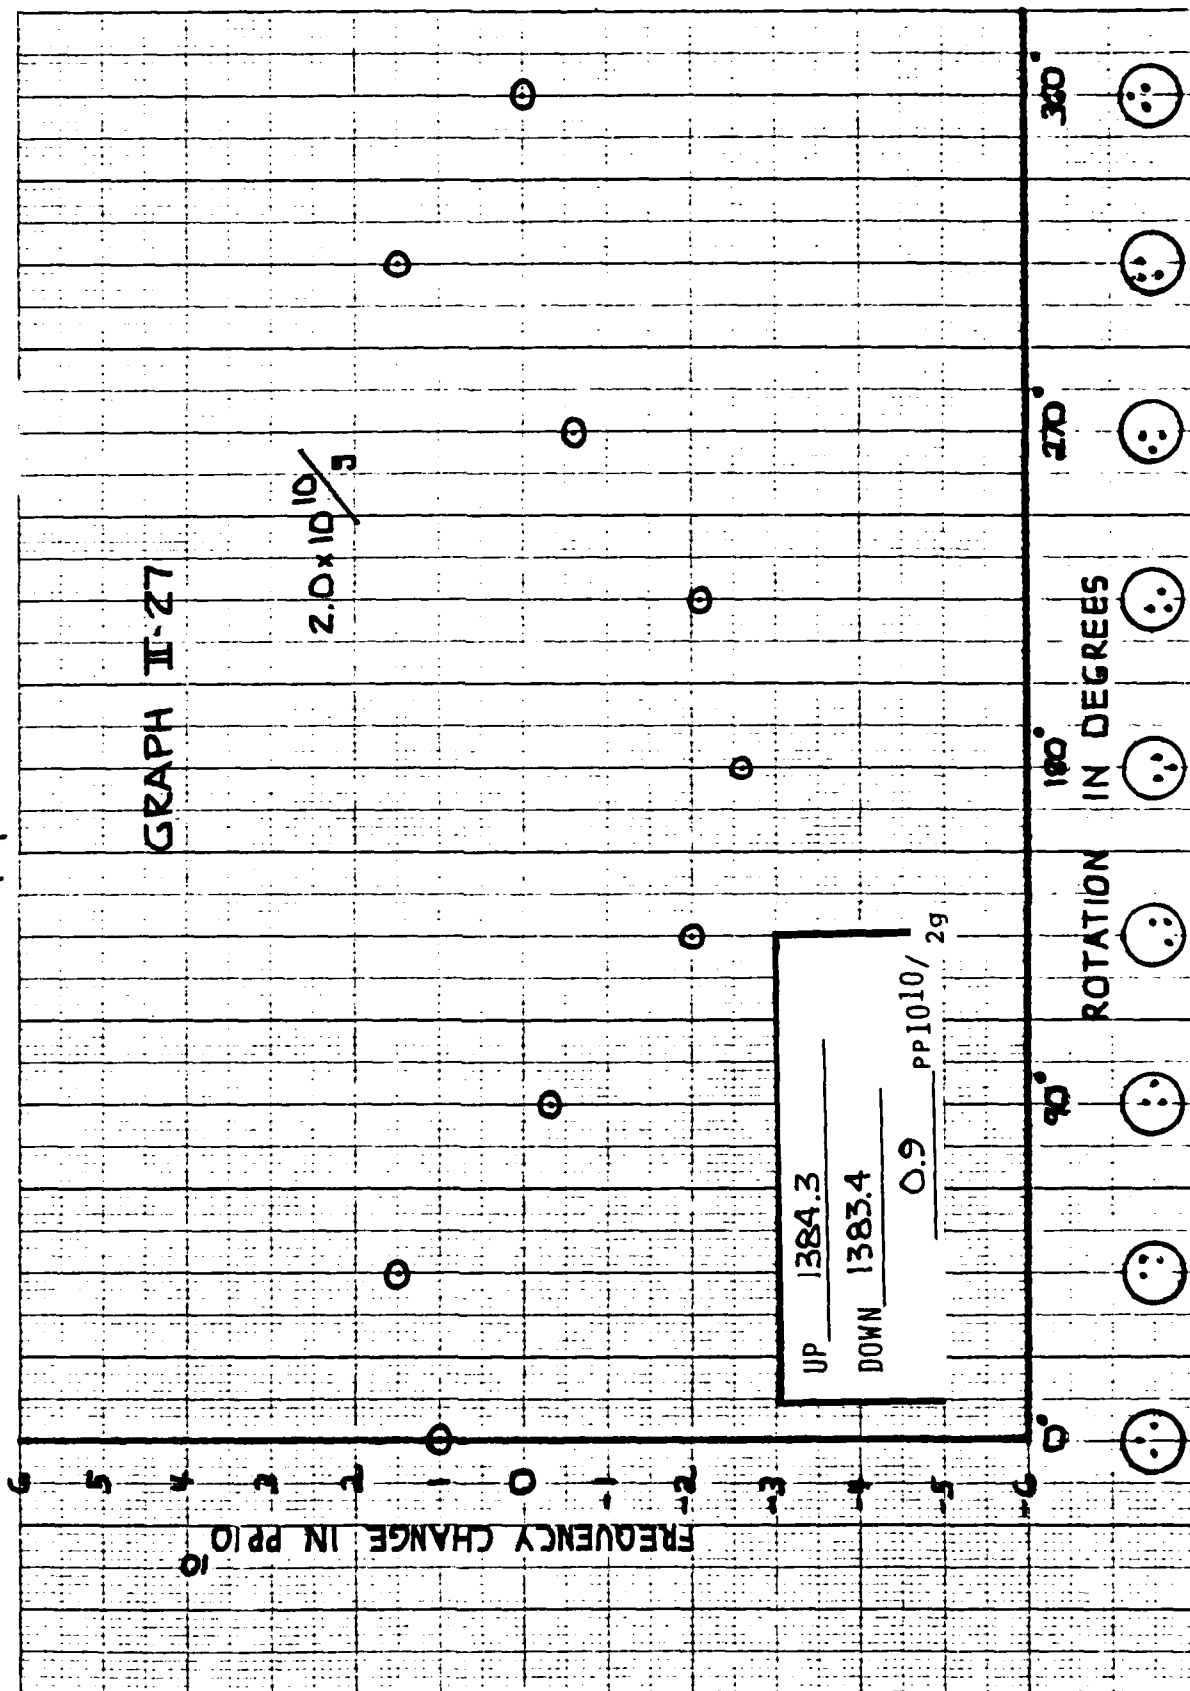


K-E 20 X 20 TO THE INCHES / X 10 INCHES  
NEUFEL & ESNER CO. MADE IN U.S.A.

46 1240

SERNO. 3920

5.0/s/s

DATE 2-8-80

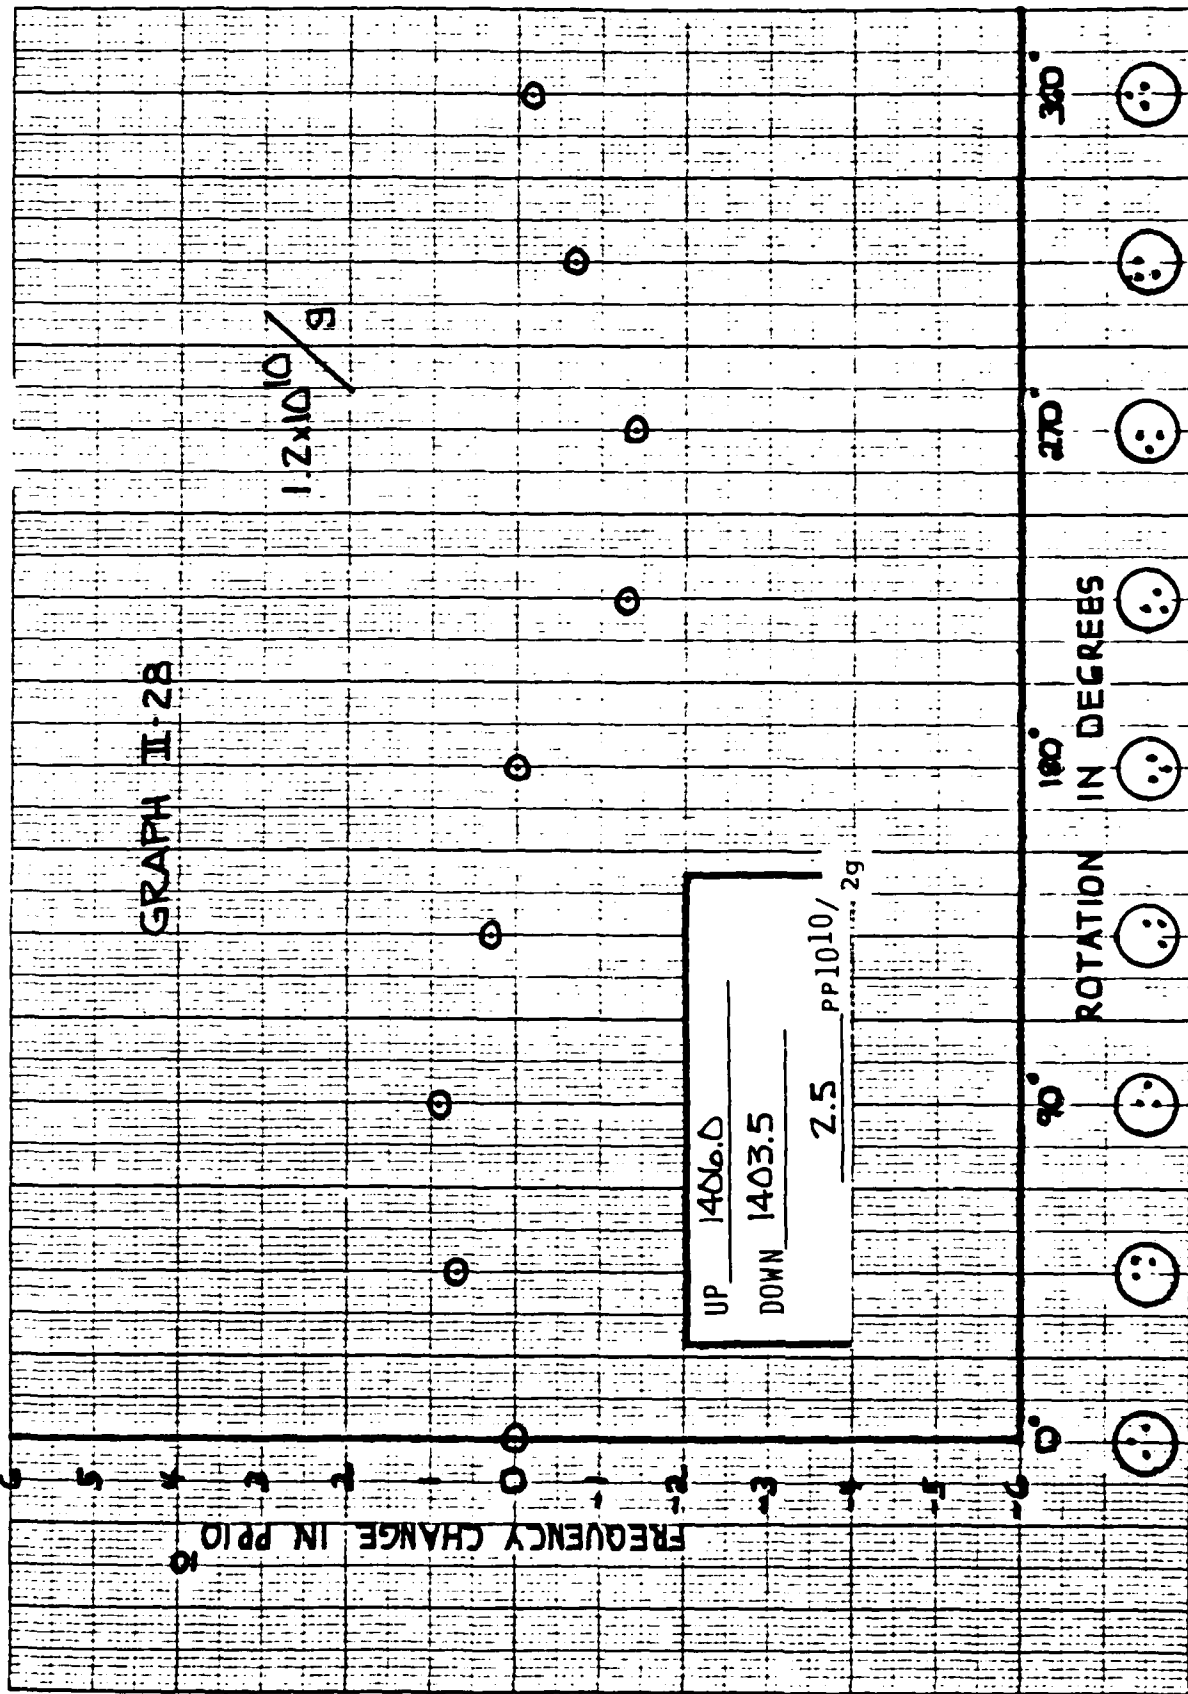


K-E 20 X 20 TO THE INCHES / K 1000 HCS  
KUTTEL A-54-10 444 INCHES

46 1240

SERNO. 3921

5.0/5/SC

DATE 9-8-80

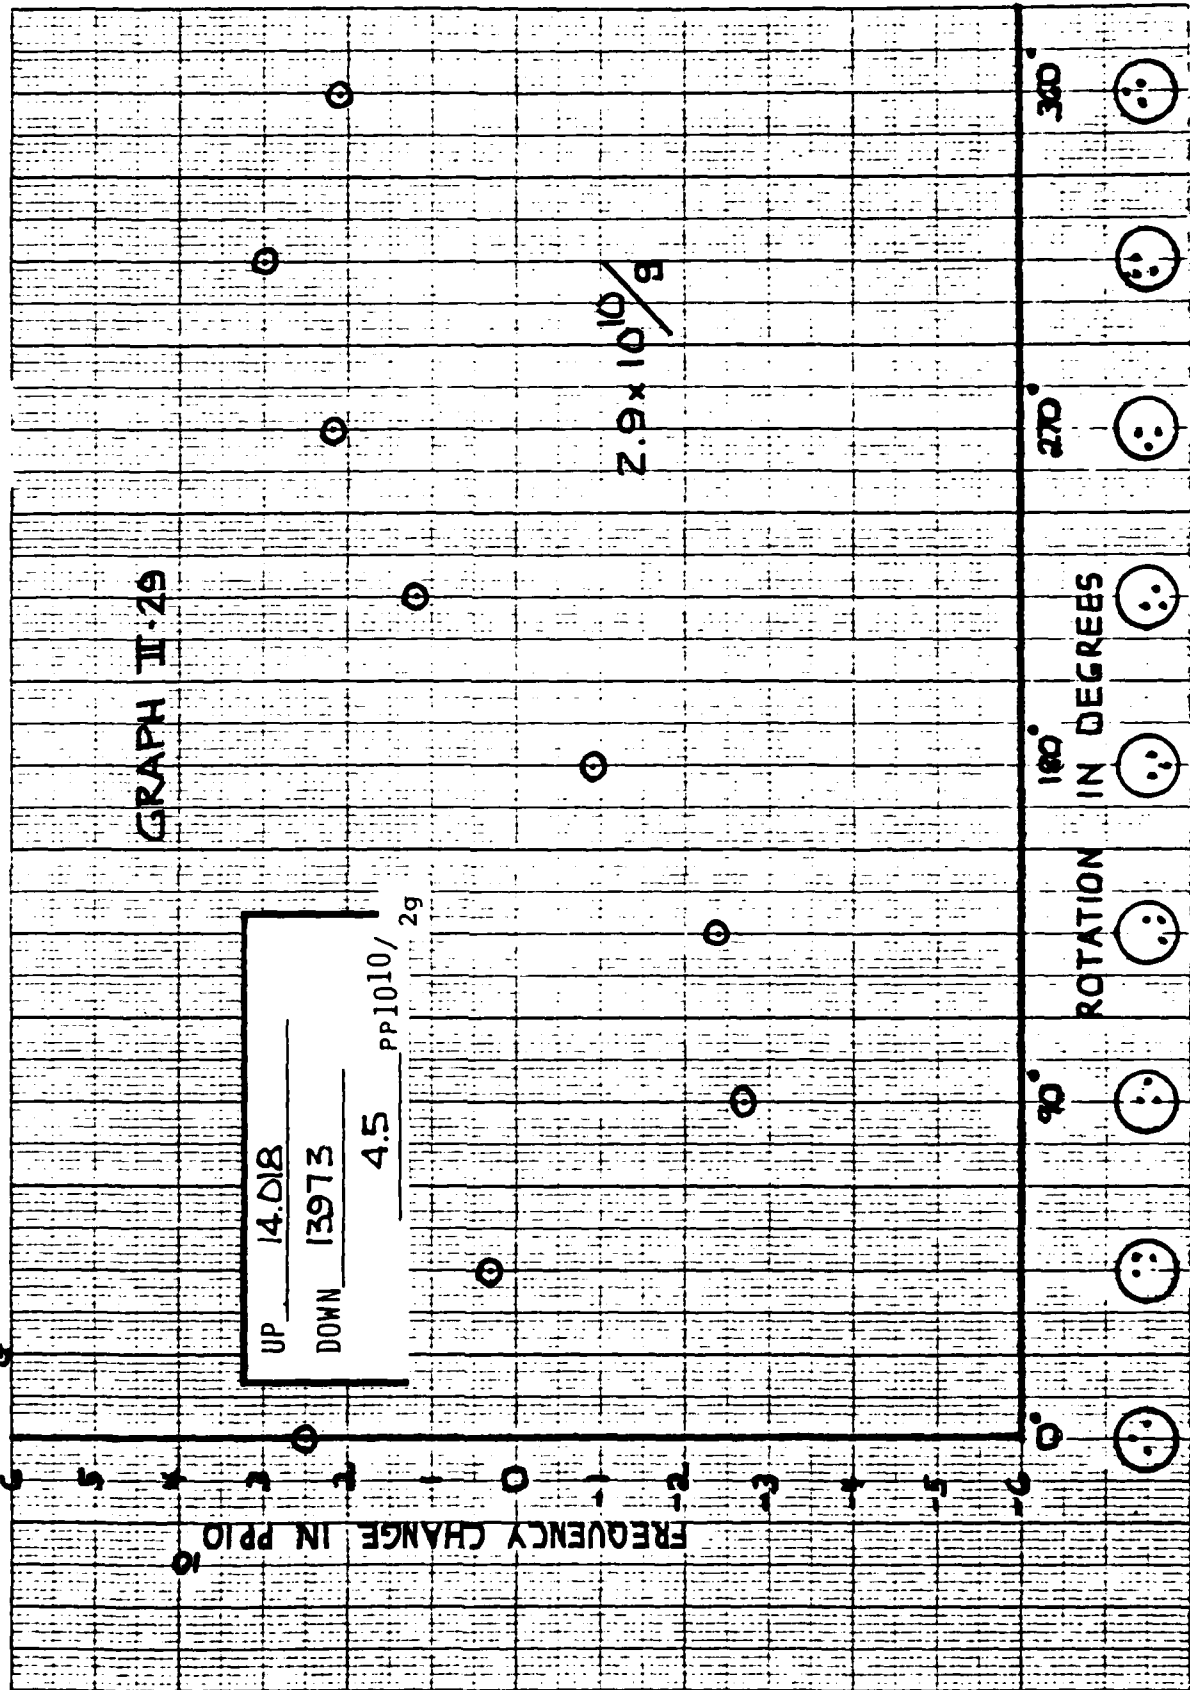




46 1240

SER. NO. 3922  
G

5.0/5/5C

DATE 9-8-80

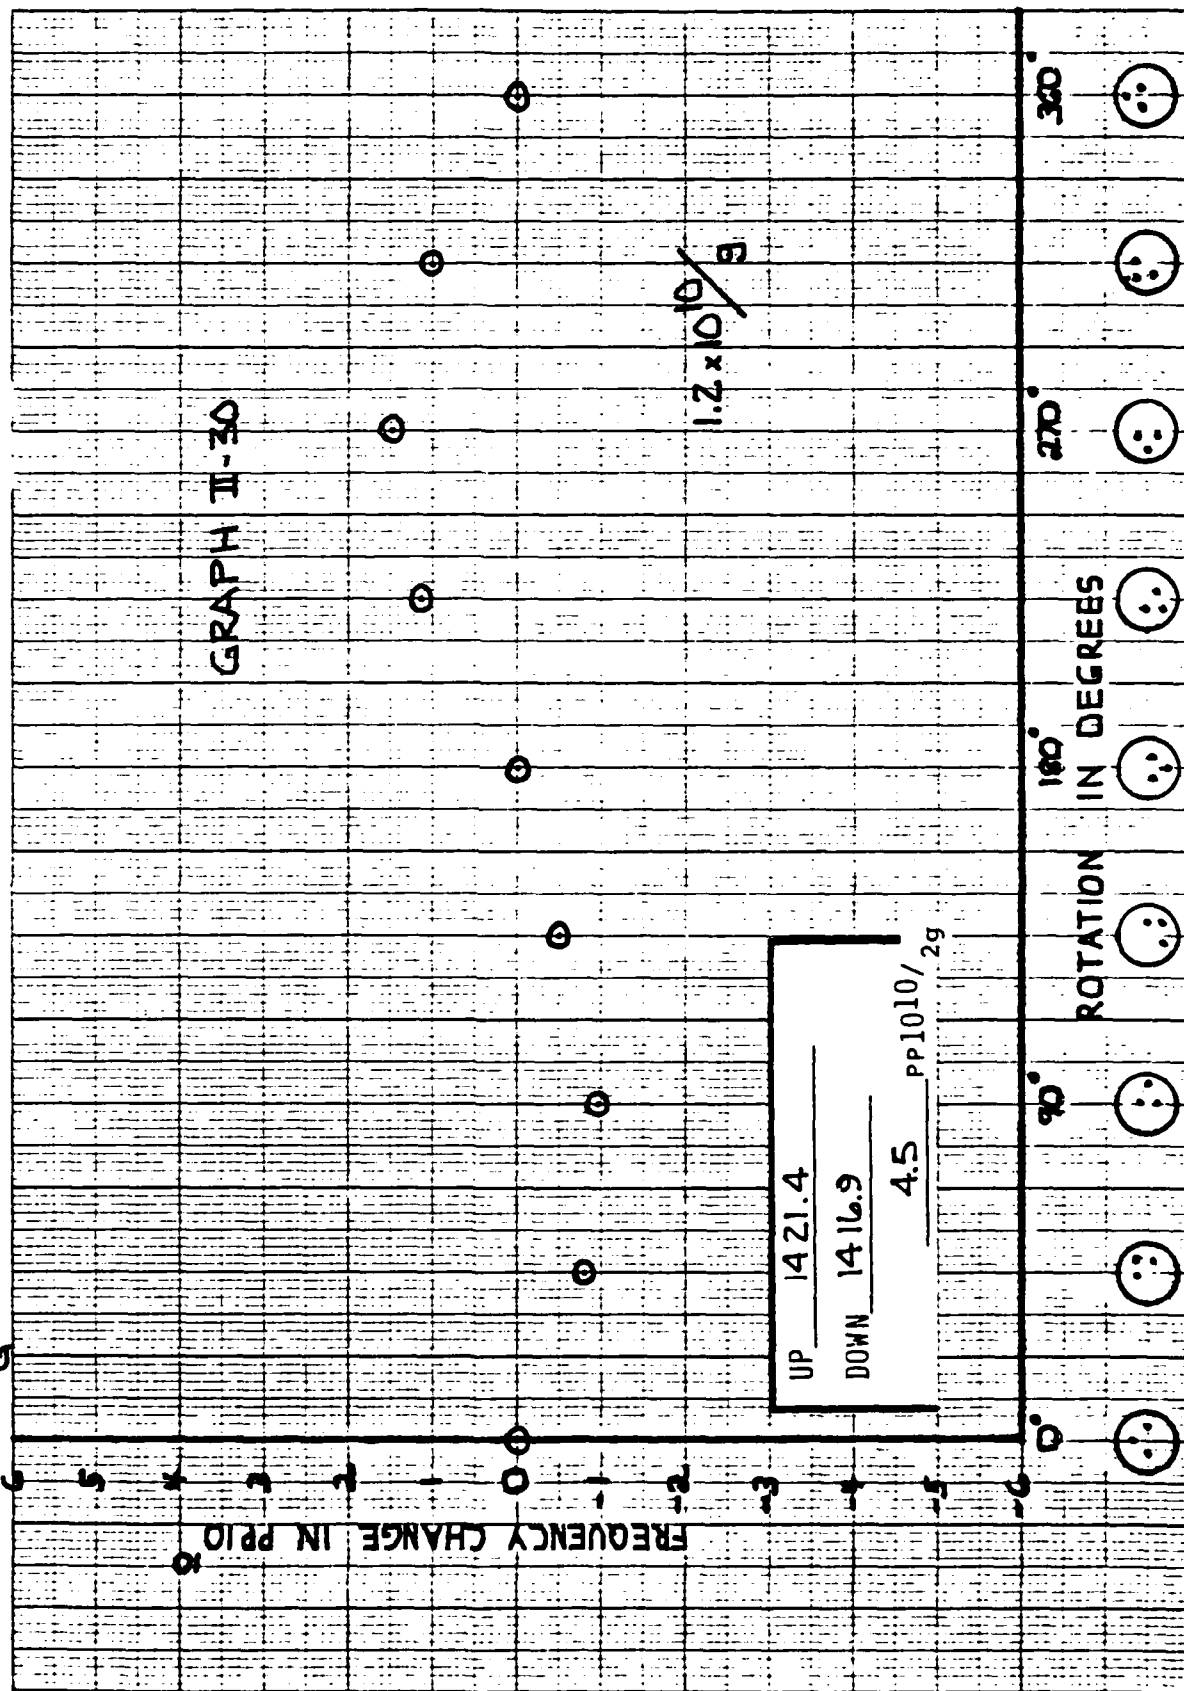


K-E 20 X 20 TO THE INCH 7 X 10 IN 10'S  
MULTIPLE 15-20 TO 400 IN 10'S

46 1240

SERNO. 3923

5.0/5/30

DATE 2-8-80

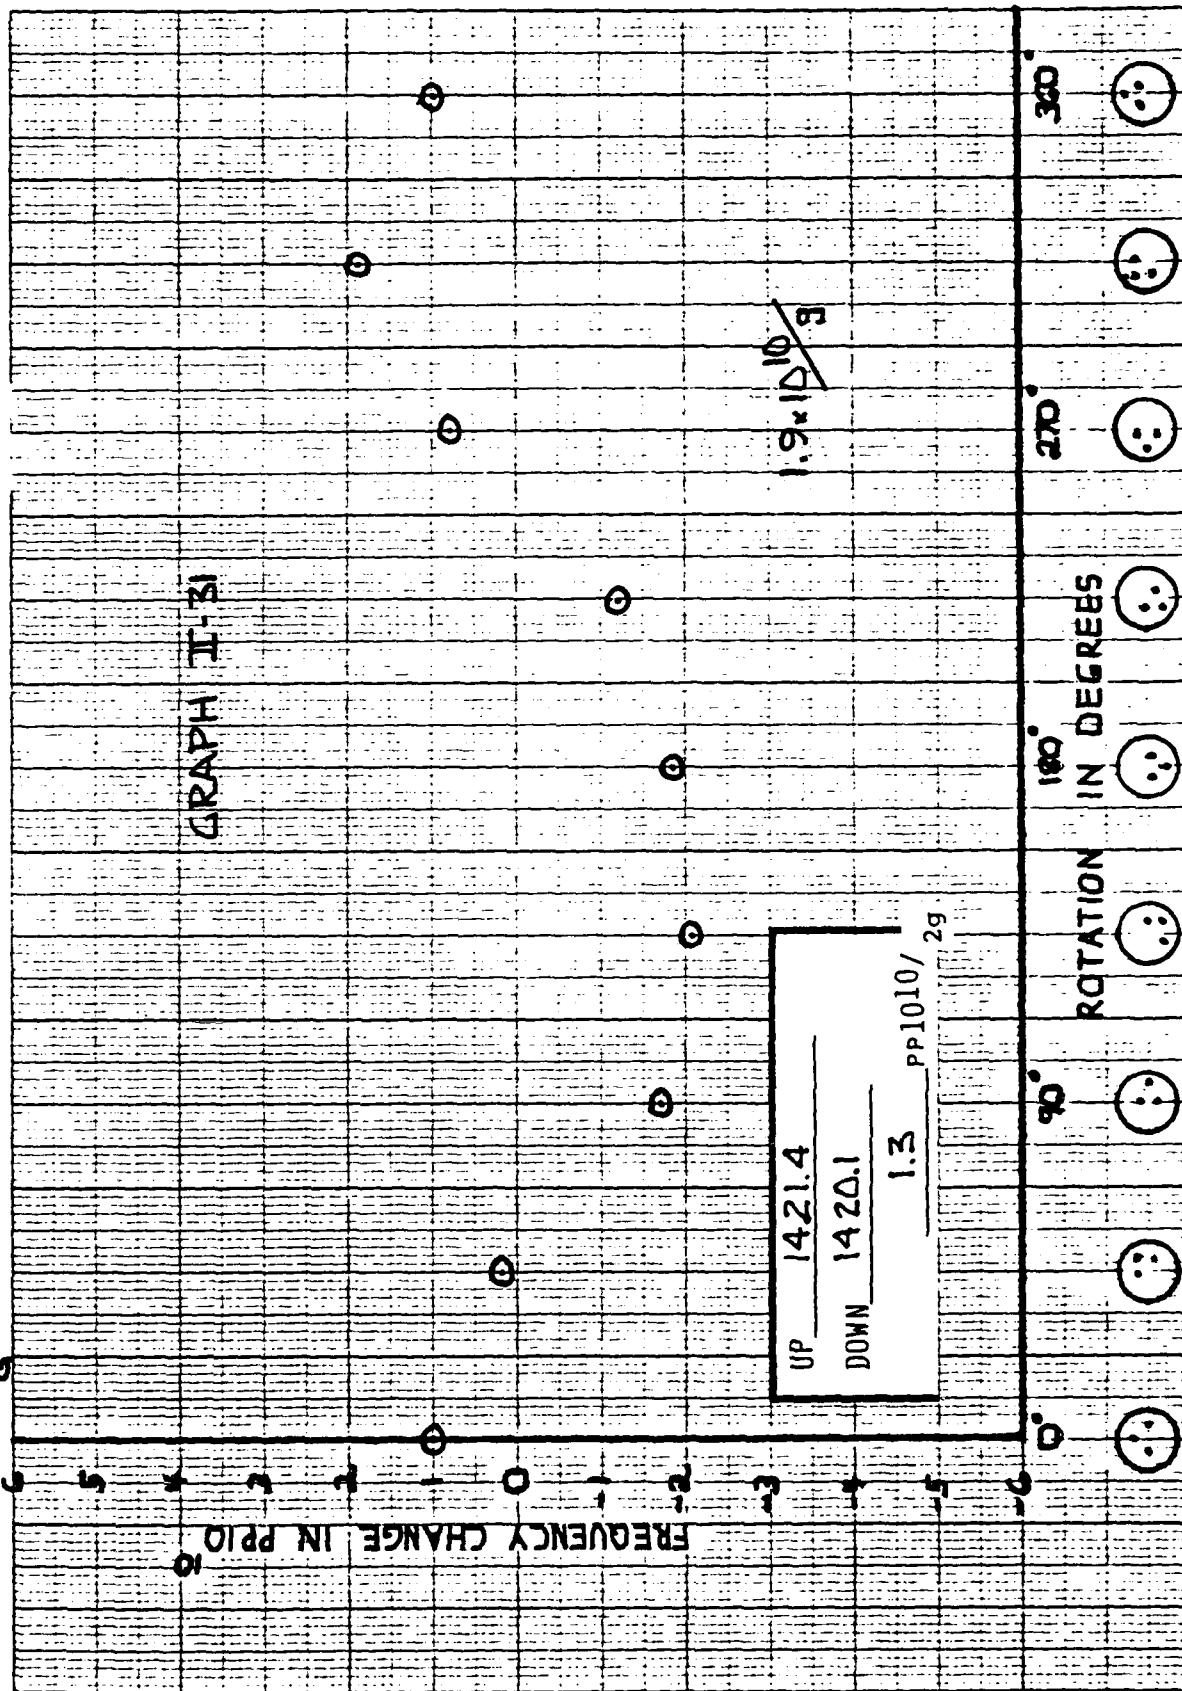


K-E 20 X 20 TO THE INCHES / X 10 INCHES  
KUPFER & SHERIDAN

46 1240

SERNO. 4204

5.0/5/SC

DATE 9-8-80

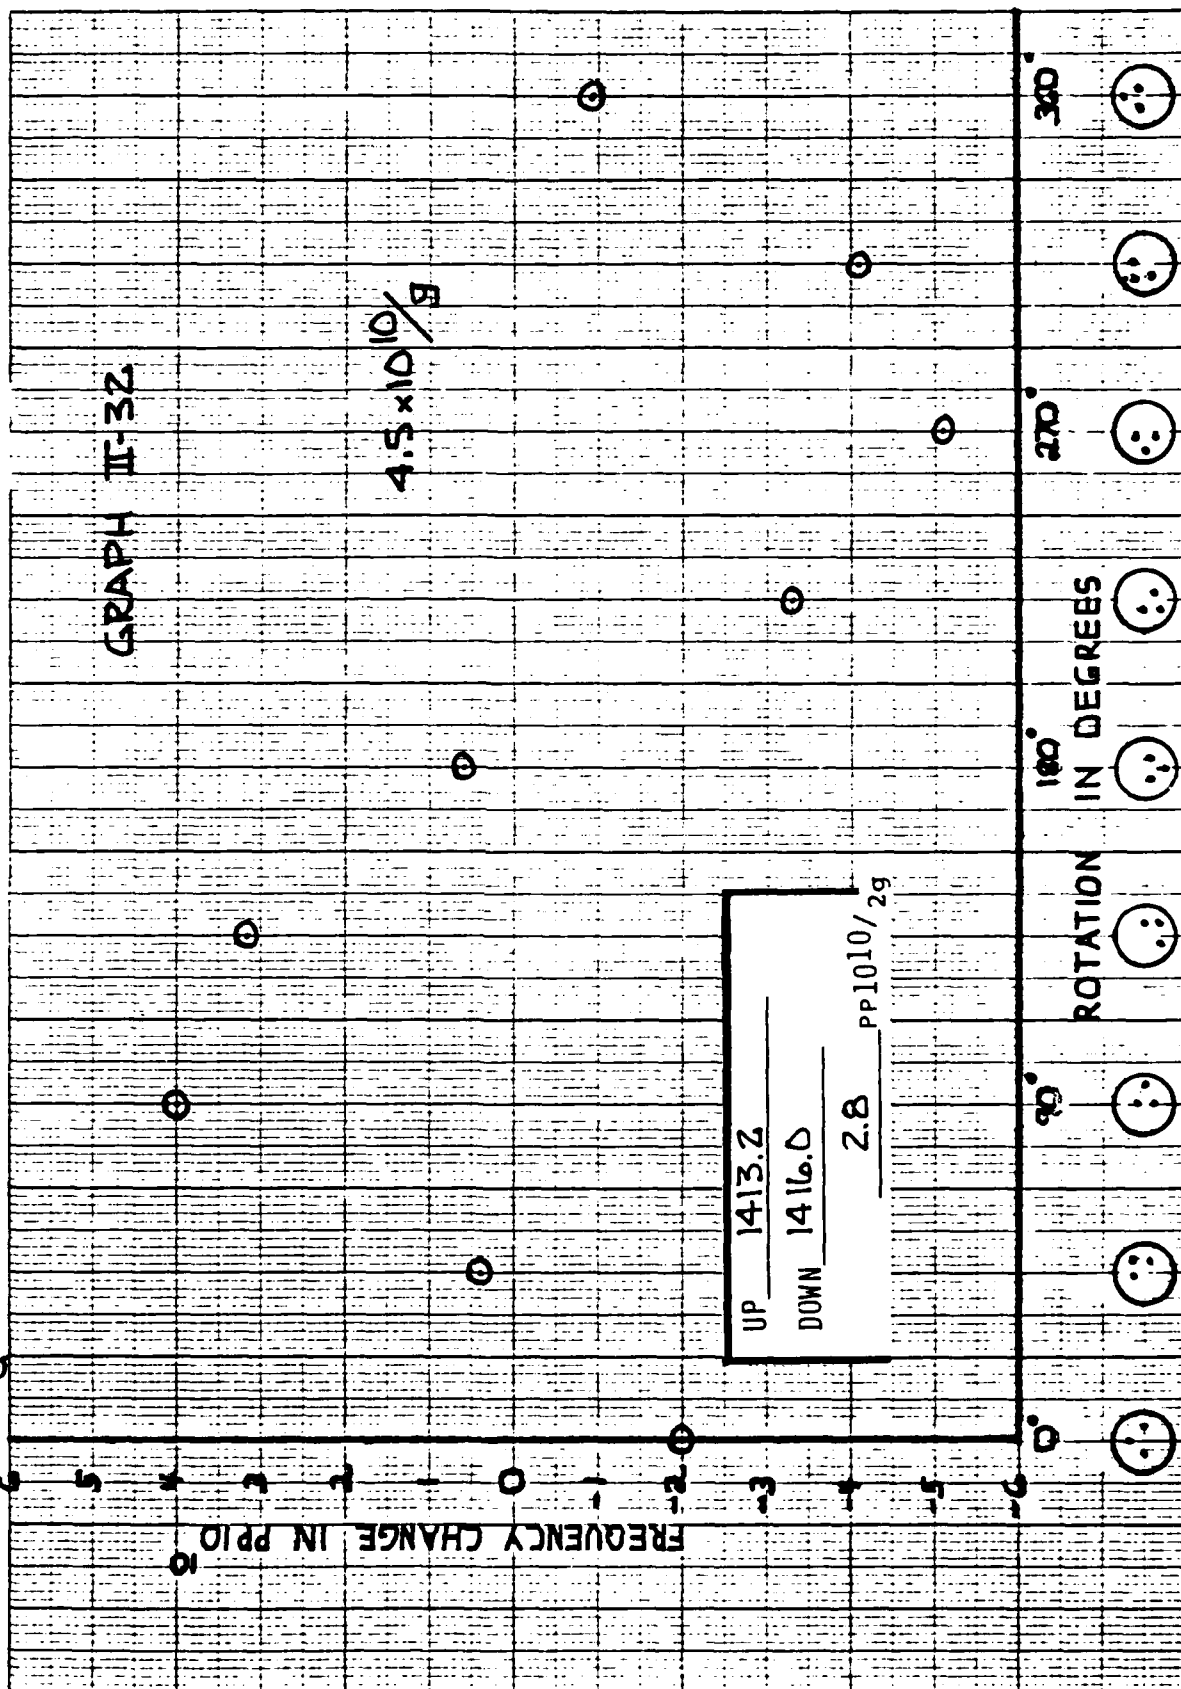

# DISTRIBUTION LIST

101	Defense Technical Info Ctr ATTN: DTIC-TCA Cameron Station (Bldg 5) Alexandria, VA 22314	212	Command, Control & Comm Div. Development Center Marine Corps Dev & Educ Cmd Quantico, VA 22134
*012		001	
102	Director National Security Agency ATTN: TDL	300	AUL/LSI 64-285
001	Fort George G. Meade, MD 20755	001	Maxwell AFB, AL 36112
103	Code R123, Tech Library DCA Defense Comm Engrg Ctr 1860 Wiehle Ave Reston, VA 22090	301	Rome Air Development Center ATTN: Documents Library (TSLD)
001		001	Griffiss AFB, NY 13441
104	Defense Communications Agency Technical Library Center Code 205 (P. A. Tolovi)	306	Cdr, Air Force Avionics Lab ATTN: AFAL/RWF (Mr. J. Pecqueux)
002	Washington, DC 20305	002	Wright-Patterson AFB, OH 45433
200	Office of Naval Research Code 427	307	AFGL/SULL S-29
001	Arlington, VA 22217	001	HAFB, MA 01731
205	Commanding Officer Naval Research Laboratory ATTN: Code 2627,1409,5270 (In Turn)	312	HQ, AFESC ATTN: EST
001	Washington, DC 20375	002	San Antonio, TX 78243
207	Cdr, Naval Surface Weapons Ctr White Oak Laboratory ATTN: Library, Code WX-21	314	HQ, Air Force Systems Command ATTN: DLCA
001	Silver Spring, MD 20910	001	Andrews AFB, Washington, DC 20331
209	Commander (Air-5471/5473) Naval Air Systems Command	403	Cdr, MI/COM Redstone Scientific Info Center ATTN: Chief, Document Center
002	Washington, DC 20361	002	Redstone Arsenal, AL 35809
210	Commandant, Marine Corps HQ, US Marine Corps ATTN: Code LMC, INTS (In Turn)	404	Cdr, MI/COM ATTN: DRSMI-RE (Mr. Pittman)
001	Washington, DC 20380	001	Redstone Arsenal, AL 35809
		405	Commander US Army Aeromedical Research Lab ATTN: Library
		001	Fort Rucker, AL 36362
		406	Commandant US Army Aviation Center ATTN: ATZO-D-MA
		001	Fort Rucker, AL 36362
		407	Dir, Ballistic Missile Defense Advanced Technology Center ATTN: ATC-R, PO Box 1500
		001	Huntsville, AL 35807

\*Reduce to 2 copies if report bears  
a limited distribution statement.

DISTRIBUTION LIST - (CONTINUED)

418	Commander HQ, Fort Huachuca ATTN: Technical Reference Div	476	CB Detect & Alarms Div Chemical Systems Lab ATTN: DRDAR-CLC-CR (H. Tennenbaum)
001	Fort Huachuca, AZ 35613	002	Aberdeen Proving Grnd, MD 21010
419	Commander US Army Electronic Proving Grnd ATTN: STEEP-MT	477	Dir, USA Ballistic Research Lab ATTN: DRXBD-LB
001	Fort Huachuca, AZ 85613	001	Aberdeen Prov Grnd, MD 21005
422	Commander US Army Yuma Proving Ground ATTN: STEYP-MTD (Tech Library)	481	Harry Diamond Laboratories ATTN: DELHD-R-NM (Dr. J. Nemarich)
001	Yuma, AZ 85364	001	2800 Powder Mill Road Adelphi, MD 20783
433	Commander US Army STC FIO ATTN: Mr. Robert Miller	482	Director US Materiel Sys Anal Actv ATTN: DRXSY-T
001	APO San Francisco, CA 96328	001	Aberdeen Prov Grnd, MD 21005
437	Deputy for Science & Technology Office, Asst Sec Army (R&D)	483	Dir, USA Materiel Systems Analysis Actv, ATTN: DRXSY-MP
002	Washington, DC 20310	001	Aberdeen Prov Grnd, MD 21005
438	HQDA (DAMA-ARZ-D/Dr. F.D. Verderame)	498	Cdr, TARADCOM ATTN: DRDTA-UL, Tech Library
001	Washington, DC 20310	001	Warren, MI 48090
455	Commandant US Army Signal School ATTN: ATSH-CD-MS-E	499	Cdr, TARCOM ATTN: DRDTA-RH
001	Fort Gordon, GA 30905	001	Warren, MI 48090
456	Commandant US Army Infantry School ATTN: ATSH-CD-MS-E	503	Dir, USA Engineering Waterways Exper Station ATTN: Research Ctr Library
001	Fort Benning, GA 31905	002	Vicksburg, MS 39108
470	Director of Combat Developments US Army Armor Center ATTN: ATZK-CD-MS	507	Cdr, AVRADCOM ATTN: DRSV-E PO Box 209
002	Fort Knox, KY 40121	001	St Louis, MO 63166
474	Commander USA Test & Evaluation Command ATTN: DRSTE-CT-C	511	Cdr, ARRADCOM ATTN: DRDAR-LOA-PD
001	Aberdeen Proving Grnd, MD 21005	002	Dover, NJ 07801
475	Cdr, Harry Diamond Laboratories ATTN: Library 2800 Powder Mill Road	512	Cdr, ARRADCOM ATTN: DRDAR-LCN-S (Bldg 95)
001	Adelphi, MD 20783	001	Dover, NJ 07801

# DISTRIBUTION LIST - (CONTINUED)

513 Cdr, ARRADCOM ATTN: DRDAR-TSS, #59 001 Dover, NJ 07801	542 Commandant USAFAS ATTN: ATSF-CD-DE 001 Fort Sill, OK 73503
515 PM, FIREFINDER/REMBASS ATTN: DRCPM-FER 002 Fort Monmouth, NJ 07703	554 Commandant USA Air Defense School ATTN: ATSA-CD-MS-C 001 Fort Bliss, TX 79916
517 TRI-TAC Office ATTN: TT-SE 001 Fort Monmouth, NJ 07703	556 HQ, TCATA Technical Information Center ATTN: Mrs. Ruth Reynolds 001 Fort Hood, TX 76544
518 Cdr, USA Satellite Comm Agcy ATTN: DRCPM-SC-3 002 Fort Monmouth, NJ 07703	559 Commander USA Dugway Proving Ground ATTN: MT-T-1 001 Dugway, UT 84022
519 Cdr, USA Avionics Lab AVRADCOM ATTN: DAVAA-D 001 Fort Monmouth, NJ 07703	563 Commander, DARCOM ATTN: DRCDE 5001 Eisenhower Ave 001 Alexandria, VA 22333
521 Cdr, Project Manager, SOTAS ATTN: DRCPM-STA 001 Fort Monmouth, NJ 07703	564 Cdr, USA Signals Warfare Lab ATTN: DELSW-OS Vint Hill Farms Station 001 Warrenton, VA 22186
528 Cdr, USA Research Office ATTN: Dr. David Squire PO Box 12211 001 Research Triangle Pk, NC 27709	567 Commandant US Army Engineer School ATTN: ATZA-TDL 002 Fort Belvoir, VA 22060
529 Cdr, USA Research Office ATTN: Dr. Horst Wittmann PO Box 12211 001 Rsch Triangle Pk, NC 27709	568 Commander USA Mobility Eqp Res & Dev Cmd ATTN: DRDME-R 001 Fort Belvoir, VA 22060
531 Cdr, USA Research Office ATTN: DRXRO-IP PO Box 12211 002 Rsch Triangle Pk, NC 27709	569 Commander USA Engineer Topographic Labs ATTN: ETL-TD-EA 001 Fort Belvoir, VA 22060
532 Cdr, US Army Research Office ATTN: DRXRC-PH (Dr. R.J. Lontz) PO Box 12211 002 Rsch Triangle Pk, NC 27709	571 Dir, Applied Tech Lab USA Rsch & Tech Labs (AVRADCOM) ATTN: Technical Library 001 Fort Eustis, VA 23604
533 Commandant USA Inst for Military Assistance ATTN: ATSU-CTD-MO 002 Fort Bragg, NC 28307	575 Commander, TRADOC ATTN: ATDOC-TA 001 Fort Monroe, VA 23561
537 Cdr, USA Tropic Test Center ATTN: STETC-Tech-Info Ctr 001 APO Miami, 34004	

# DISTRIBUTION LIST - (CONTINUED)

576	Commander USA Training & Doctrine Cmd ATTN: ATCD-IE 001 Fort Monroe, VA 23651	616	Cdr, ERADCOM ATTN: DRDEL-SB 2800 Powder Mill Road 001 Adelphi, MD 20783
579	PM, Control & Analysis Ctrs Vint Hill Farms Station 001 Warrenton, VA 22186	619	Cdr, ERADCOM ATTN: DRDEL-PA 2800 Powder Mill Road Adelphi, MD 20783
602	Cdr, NV&EOL, ERADCOM ATTN: DELNV-D 001 Fort Belvoir, VA 22060	620	Cdr, ERADCOM ATTN: DRDEL-I-TL 2800 Powder Mill Road Adelphi, MD 20783
603	Cdr, Atmospheric Sciences Lab ERADCOM ATTN: DELAS-SY-S 001 White Sands Missile Rng NM 88002	680	Commander US Army Electronics R&D Command 000 Fort Monmouth, NJ 07703
604	Chief, Office of Missile Electronic Warfare Electronic Warfare Lab ERADCOM 001 White Sands Missile Rng NM 88002	1	DRDEL-SA
606	Chief Intel Material Dev & Sup Ofc Electronic Warfare Lab ERADCOM 001 Fort Meade, MD 20755	1	DELEW-D
607	Cdr, Harry Diamond Labs ATTN: DELHD-CO,TD (In Turn) 2800 Powder Mill Road 001 Adelphi, MD 20783	1	DELCS-D
608	Cdr, ARRADCOM ATTN: DRDAR-TSB-S 001 Aberdeen Proving Grnd, MD 21005	1	DELET-DD
609	Cdr, ERADCOM ATTN: DRDEL-CG,CD,CS (In Turn) 2800 Powder Mill Road 001 Adelphi, MD 20783	1	DELET-DX
612	Cdr, ERADCOM ATTN: DRDEL-CT 2800 Powder Mill Road 002 Adelphi, MD 20783	1	DELS-D
615	Cdr, ERADCOM ATTN: DRDEL-SB 2800 Powder Mill Road 001 Adelphi, MD 20783	1	DELS-D-L (Library)
		*2	DELS-D-L-S (Stinfo)
		35	Originating Office
		681	Commander US Army Comm R&D Command 000 Fort Monmouth, NJ 07703
		1	DRDCO-COM-RO
		1	USMC-LNO
		1	ATFE-LO-EC
		682	Commander US Army Comm & Electronics Materiel Readiness Command 000 Fort Monmouth, NJ 07703
		1	DRSEL-PL-ST
		1	DRSEL-MA-MP
		1	DRSEL-PA
		701	MIT Lincoln Laboratory ATTN: Library (Rm A-082) 002 Lexington, MA 02173
		703	NASA Scientific & Tech Info Facility Baltimore/Washington Intl Airpt 001 PO Box 8757, MD 21240

DISTRIBUTION LIST - (CONTINUED)

704 National Bureau of Standards  
Bldg 225, Rm A-331  
ATTN: Mr. Leedy  
001 Washington, DC 20231

705 Advisory Group on Electron  
Devices  
201 Varick St., 9th Floor  
002 New York, NY 10014

707 TACTEC  
Batelle Memorial Institute  
505 King Avenue  
001 Columbus, OH 43201

709 Plastics Tech Eval Center  
Picatinny Arsenal, Bldg 176  
ATTN: Mr. A. M. Anzalone  
001 Dover, NJ 07801



